

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [AECOJOY](#) /

› [AECOJOY 3-Seat Outdoor Patio Swing Chair with Adjustable Canopy \(Model 19001\) Instruction Manual](#)

AECOJOY 19001

AECOJOY 3-Seat Outdoor Patio Swing Chair Instruction Manual

MODEL: 19001

Introduction

Thank you for choosing the AECOJOY 3-Seat Outdoor Patio Swing Chair. This manual provides essential information for the safe assembly, operation, and maintenance of your new swing chair. Please read these instructions carefully before assembly and retain them for future reference. Proper assembly and care will ensure the longevity and safe enjoyment of your product.



Image: The AECOJOY 3-Seat Outdoor Patio Swing Chair, black in color, positioned in a lush green garden. It features a black adjustable canopy, a comfortable padded seat, and a sturdy metal frame.

Safety Information

- **Weight Capacity:** This swing chair is designed to support a maximum weight of 450 lbs (204 kg). Do not exceed this limit.
- **Assembly:** Assembly requires two adults. Ensure all parts are correctly installed and all fasteners are securely tightened before use.
- **Placement:** Place the swing chair on a flat, stable, and level surface to prevent tipping.
- **Weather Conditions:** While designed with weather-resistant materials, it is recommended to secure or store the swing during strong winds or severe weather to prevent damage or injury.
- **Children:** Supervise children when they are using the swing chair.
- **Inspection:** Regularly inspect the swing chair for loose bolts, damaged parts, or wear and tear. Discontinue use if any damage is found and contact customer support for replacement parts.

Package Contents

Before beginning assembly, please ensure all components listed in the packing list (usually found in the product box) are present and undamaged. If any parts are missing or damaged, do not proceed with assembly and contact AECOJOY customer service.

Typical components include:

- Main Frame Components (legs, crossbars, top bar)
- Swing Seat Frame
- Canopy Frame and Fabric
- Seat Cushion
- Hanging Springs and Chains
- Hardware Pack (bolts, nuts, washers, wrench)

Setup and Assembly

Assembly of the AECOJOY swing chair is designed to be straightforward, but it is recommended that two people work together for efficiency and safety. All necessary hardware and detailed instructions are included with your product. Please follow the step-by-step guide provided in your package.

1. **Unpack and Identify Parts:** Lay out all components on a soft, clean surface to prevent scratches. Compare them with the parts list.
2. **Assemble the Main Frame:** Connect the leg sections and crossbars using the provided hardware. Ensure all connections are firm.
3. **Attach the Top Bar:** Secure the top bar to the assembled side frames.
4. **Assemble the Swing Seat:** Construct the seat frame and attach the padded cushion.
5. **Hang the Swing Seat:** Use the heavy-duty springs and chains to hang the assembled seat from the top bar. Ensure the springs are securely attached to both the seat and the frame.
6. **Install the Canopy:** Attach the canopy frame to the top bar and then secure the canopy fabric. The canopy is adjustable.
7. **Final Check:** Double-check all bolts and nuts to ensure they are fully tightened. Verify the stability of the entire structure.



Image: Detailed view highlighting key features: a heavy-duty spring for smooth swinging, waterproof fabric for the canopy, and non-slip feet for stability. These components are crucial for the swing's durability and safety.



AECOJOY

Ergonomic Designed Seat with

Thick Padded

Wide Space For 3 People



**Canopy With Latest & Best Water
Resistant Polyester Material Blocks
Most Harmful Rays**



**Use the Most Stable Triangle Design,
Support 200KG Weight**

Image: An illustration emphasizing the ergonomic design of the seat with thick padding and the stable triangle design of the frame, which supports the chair's weight capacity.

Operating Instructions

- **Using the Swing:** Gently sit on the swing seat. The heavy spring structure allows for a smooth and gentle rocking motion. Avoid excessive force or standing on the swing.
- **Adjusting the Canopy:** The canopy can be adjusted to various angles to provide optimal shade or rain protection. Locate the adjustment knobs or levers on the canopy frame and loosen them to reposition the canopy. Tighten them securely once the desired angle is achieved.
- **Removable Cushion:** The seat cushion is removable for cleaning or replacement. Simply unfasten any ties or straps securing it to the seat frame.



Image: A visual representation of the adjustable canopy, showing how it can be rotated to different positions to block sunlight or provide rain protection. The image highlights the ceiling rotation button and the UV-resistant, weather-resistant properties of the canopy fabric.

Maintenance

- **Cleaning the Frame:** Wipe the powder-coated steel frame with a damp cloth and mild soap. Rinse thoroughly and dry completely to prevent rust. Avoid abrasive cleaners.
- **Cleaning the Cushion and Canopy:** The polyester fabric of the cushion and canopy can be cleaned with a garden hose or a damp cloth and mild soap. For deeper cleaning, the cushion is detachable and removable. Allow to air dry completely before reattaching or storing.
- **Seasonal Storage:** During off-seasons or prolonged periods of non-use, it is recommended to store the swing chair in a dry, protected area to extend its lifespan.
- **Fastener Check:** Periodically check all bolts and nuts and tighten them as needed to maintain structural integrity.



Image: A split image showing the swing chair under both rainy and sunny conditions, illustrating its weather-resistant features for rain protection and sunshade.

Troubleshooting

Problem	Possible Cause	Solution
Missing parts or hardware	Packaging error or lost during transit.	Review the parts list. Contact AECOJOY customer service immediately for replacement parts.

Problem	Possible Cause	Solution
Swing feels unstable or wobbly	Not all bolts are tightened; uneven ground.	Ensure all fasteners are securely tightened. Move the swing to a flat, level surface.
Canopy does not stay in position	Adjustment knobs/levers are loose.	Tighten the canopy adjustment knobs/levers firmly after positioning.
Squeaking noise during swinging	Friction in springs or joints.	Apply a small amount of silicone-based lubricant to the springs and pivot points.

Specifications

Feature	Detail
Brand	AECOJOY
Model Number	19001
Color	Black
Product Dimensions (D x W x H)	44" x 63" x 59" (111.76 cm x 160.02 cm x 149.86 cm)
Seat Depth	17.7 inches (44.96 cm)
Item Weight	37 pounds (16.78 kg)
Weight Capacity	450 lbs (204 kg)
Frame Material	Powder Coated Steel
Canopy/Cushion Material	Polyester Fabric
Assembly Required	Yes (2 persons recommended)



Image: A detailed diagram illustrating the overall dimensions of the swing chair, including height, width, depth, and seat measurements, to assist with placement and understanding the product's size.

Warranty and Support

AECOJOY is committed to providing quality products. While specific warranty details are not provided in this manual, if you encounter any issues with your product, including missing parts, assembly difficulties, or defects, please do not hesitate to contact our customer service team.

For support, please refer to the contact information provided with your purchase or visit the official AECOJOY website. Please have your model number (19001) and purchase details ready when contacting support.

 
Product Videos

No official product videos from the seller were available for embedding in this manual. For visual guides or additional product


information, please check the product page on the retailer's website or the AECOJOY brand store.

© 2025 AECOJOY. All rights reserved.

Related Documents - 19001

	<p>AECOJOY SS16406 8' x 5' Attached Pergola Assembly Instructions Step-by-step guide for assembling the AECOJOY SS16406 8' x 5' Attached Pergola. Includes a detailed parts list, safety precautions, and warranty information for easy installation.</p>
	<p>10' x 13' Patio Canopy Assembly Instructions Comprehensive assembly guide for the 10' x 13' Patio Canopy (Model 16089BG) by AECOJOY. Includes a detailed parts list and step-by-step instructions for setting up your patio canopy.</p>
	<p>AECOJOY SS16033BG Pergola Gazebo Canopy Assembly Instructions & Guide Detailed assembly instructions and parts list for the AECOJOY SS16033BG Pergola Gazebo Canopy. Learn how to build your outdoor sunshade structure safely and efficiently.</p>
	<p>AECOJOY 16084098BK Outdoor Patio Dining Set & Chair Assembly Instructions Detailed assembly instructions for the AECOJOY 16084098BK 5-Piece Metal Square Outdoor Patio Dining Set and matching chair. Includes parts list and step-by-step guidance for assembly.</p>
	<p>AECOJOY SS16222BK Patio Swivel Chair and SS16224BK Patio Dining Table Assembly Instructions Comprehensive assembly instructions for AECOJOY Patio Swivel Chair (Model SS16222BK) and Patio Dining Table (Model SS16224BK). Includes parts lists, step-by-step guidance, and safety information for easy setup of your outdoor furniture.</p>
	<p>AECOJOY SS16440 10'x20' Freestanding Gazebo Assembly Instructions Comprehensive assembly guide for the AECOJOY SS16440 10'x20' freestanding gazebo. This manual provides a detailed parts list and step-by-step instructions for building your gazebo, ensuring a smooth and successful setup.</p>

Documents - AECOJOY – 19001

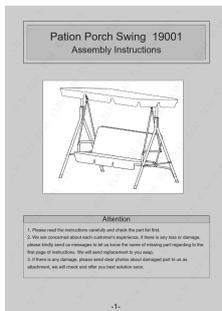

[\[pdf\] User Manual Instructions Parts List Catalog](#)

A 3 Person Steel Frame Outdoor Patio Porch Swing Chair in Black with Adjustable Canopy Use and Care Manual AECOJOY 19001BK HD01 653733183047 0655
 EMLEELMLEMLMEMLEELMLEMLMEMELELELMLMEMLMEMELELELMLMEMLMEELEELMLMMMELELELMLMMMEEL
 Patton Porch Swing **19001** Assembly Instructions Attention 1. Please read the instruc...
 lang:en score:19 filesize: 5.8 M page_count: 6 document date: 2021-08-09