

Yaheetech 36in Outdoor Fireplace

Yaheetech 36-inch Outdoor Wood Burning Fire Pit Instruction Manual

IMPORTANT SAFETY INFORMATION

Please read and understand all safety warnings and instructions before assembling, operating, or maintaining this fire pit. Failure to follow these instructions may result in fire, property damage, personal injury, or death.

- For outdoor use only. Do not use indoors or in enclosed spaces.
- Do not use on wooden decks or other combustible surfaces. Place on a stable, non-combustible surface like concrete, stone, or gravel.
- Keep children and pets away from the fire pit at all times.
- Never leave a burning fire pit unattended.
- Do not use gasoline, kerosene, diesel fuel, lighter fluid, or alcohol to start or rekindle a fire.
- Use the provided fire poker to handle the spark screen and logs.
- Ensure the fire is completely extinguished before leaving the area or covering the fire pit.
- Do not touch the fire pit until it has completely cooled down.
- Maintain a safe distance from combustible materials (e.g., buildings, trees, dry leaves).

PACKAGE CONTENTS

Verify that all components are present before assembly:

- 1 x Fireplace (Fire Bowl with Legs)
- 1 x Spark Screen (Mesh Cover)
- 1 x Fire Poker
- 1 x Rain Cover
- 1 x Accessory Kit (for assembly)
- 1 x Instructions Manual (this document)

SPECIFICATIONS

Feature	Detail
Brand	Yaheetech
Model Name	36in Outdoor Fireplace
Material	Iron, Metal with Bronze Finish
Overall Size (Depth x Diameter)	23.5 x 36 inches (59.7 x 91.4 cm)
Fire Bowl Size (Depth x Diameter)	10.2 x 29 inches (25.9 x 73.7 cm)
Max. Weight Capacity of Fire Bowl	33 lb (15 kg)
Item Weight (N.W.)	20.3 lb (9.2 kg)
Power Source	Charcoal, Firewood
Special Feature	Water Resistant

Note: Please allow 0.4-inch error due to manual measurement.



Image: A diagram illustrating the overall dimensions of the fire pit, including its 36-inch diameter and 23.5-inch height, along with the fire bowl's 29-inch diameter and 10.2-inch depth.

SETUP AND ASSEMBLY

The Yaheetech 36-inch Outdoor Fire Pit is designed for straightforward assembly. Follow the included instructions and use the accessory kit provided.

1. **Unpack Components:** Carefully remove all parts from the packaging and verify against the package contents list.
2. **Assemble Base:** Attach the three metal legs to the main fire bowl. Ensure all connections are secure.
3. **Attach Outer Ring:** Connect the sections of the outer barrier bar around the fire bowl. This ring enhances structure and provides handles for repositioning.
4. **Insert Log Grate:** Place the internal grate (with 3 angle iron bars) at the bottom of the fire bowl to raise logs and improve airflow.
5. **Position Spark Screen:** The mesh screen is designed to fit over the fire bowl. It has a ring handle for easy lifting.



Image: A comparison showing the Yaheetech fire pit's design with three angle steel bars to raise logs and nine bottom holes for improved airflow and combustion, contrasted with a less ventilated design.

OPERATING INSTRUCTIONS

1. **Placement:** Ensure the fire pit is placed on a stable, non-combustible surface, away from any flammable materials or structures.
2. **Fuel:** Use only seasoned firewood or charcoal. Do not overfill the fire bowl.
3. **Starting the Fire:** Place kindling and small pieces of wood on the log grate. Light the kindling. Gradually add larger pieces of wood as the fire grows.
4. **Spark Screen:** Always use the spark screen when the fire is burning to contain sparks and embers. Use the fire poker to lift and replace the screen.
5. **Adding Fuel:** Use the fire poker to carefully lift the spark screen and add more wood as needed.
6. **Extinguishing the Fire:** Allow the fire to burn down naturally. Do not use water to extinguish the fire as this can damage the metal and coating. Once the embers are cool, you can cover the fire pit with the rain cover.

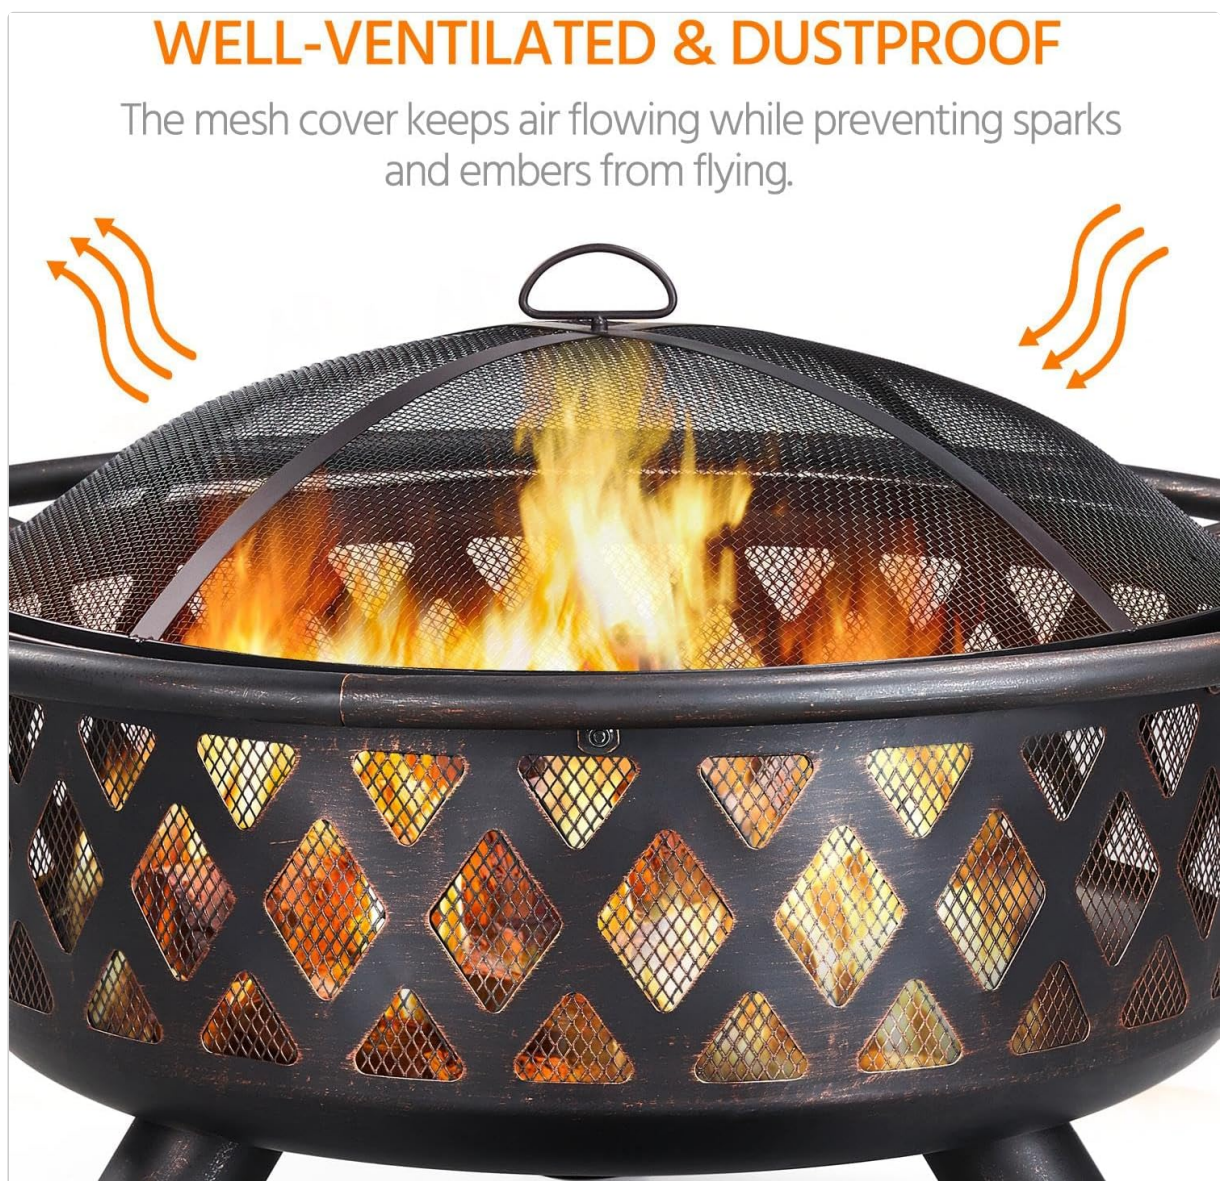


Image: A close-up view of the fire pit with the mesh spark screen in place, highlighting its well-ventilated design that allows air circulation while preventing sparks and embers from escaping.

MAINTENANCE

- **Cleaning:** After the fire pit has completely cooled, remove ashes and debris from the fire bowl. The

internal grate can be removed for easier cleaning.

- **Rust Prevention:** The iron material has a high-temperature bronze finish for rust resistance. To prolong its lifespan, keep the fire pit covered with the provided rain cover when not in use, especially during adverse weather conditions. Periodically inspect for any signs of rust and apply a water-based, high-temperature spray paint if needed to maintain the finish.
- **Storage:** Store the fire pit in a dry, covered area during extended periods of non-use to protect it from elements.



Image: A detailed view of the fire pit's interwoven pattern decoration and mesh screen, emphasizing the metal construction with high-temperature coating for durability and heat resistance.

TROUBLESHOOTING

- **Difficulty Starting Fire:** Ensure wood is dry and seasoned. Use adequate kindling. Check for proper airflow; clear any blockages in the bottom ventilation holes.
- **Excessive Smoke:** Use dry, seasoned wood. Avoid burning green wood or trash. Ensure good airflow.
- **Rust Appears:** This is common for metal outdoor products over time. Clean the rusted area, sand lightly if necessary, and apply a high-temperature, rust-resistant spray paint. Keep covered when not in use.
- **Stability Issues:** Ensure the fire pit is placed on a flat, level surface. Check that all leg and frame connections are securely tightened.

WARRANTY AND SUPPORT

This Yaheetech fire pit comes with a Limited Warranty. For specific details regarding warranty coverage, claims, or product support, please refer to the warranty card included in your package or contact Yaheetech customer service.

For further assistance, visit the official [Yaheetech website](#) or contact their customer support.