

ROIDMI X30 Plus

ROIDMI X30 Plus Cordless Vacuum Cleaner and Mop Instruction Manual

Model: X30 Plus

INTRODUCTION

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your ROIDMI X30 Plus Cordless Vacuum Cleaner and Mop. Please read this manual thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Do not use the appliance outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use without dust bin and/or filters in place.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.

- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
 - Store the appliance indoors. Put away after use to prevent accidents.
 - Disconnect the battery pack from the appliance before making any adjustments, changing accessories, or storing appliance.
 - Use only the charger supplied by the manufacturer to recharge.
 - When the battery pack is not in use, keep it away from other metal objects.
 - Under abusive conditions, liquid may be ejected from the battery; avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.
-

PACKAGE CONTENTS

Verify that all components are present in the package:

- ROIDMI X30 Plus Main Unit (with integrated dustbin and LED display)
- Extension Wand
- Electric Brush Head (for vacuuming)
- Electric Rotating Mop Head (with two rotating pads)
- Wall-mounted Magnetic Charging Dock
- Power Adapter
- User Manual (this document)



Image: TheROIDMI X30 Plus cordless vacuum cleaner assembled with the electric brush head.

PRODUCT OVERVIEW

Familiarize yourself with the main components of yourROIDMI X30 Plus:

- **Main Unit:** Contains the motor, dustbin, battery, and LED display. The handle provides ergonomic grip.
- **Extension Wand:** Connects the main unit to the cleaning heads, extending reach.
- **Electric Brush Head:** Designed for vacuuming various floor types, featuring a rotating brush bar.

- **Electric Rotating Mop Head:** Features two rotating pads for wet cleaning and scrubbing hard floors.
- **LED Display:** Provides real-time information such as battery level and operating mode.
- **Magnetic Charging Dock:** A wall-mountable unit for convenient storage and charging.



Image: Close-up view of the electric brush head and the electric rotating mop head accessories.



Image: The main unit of the ROIDMI X30 Plus showing the LED display and the wall-mounted magnetic charging dock.

SETUP

1. Assembly

1. **Attach the Extension Wand:** Insert the extension wand into the main unit until it clicks securely into place.
2. **Attach a Cleaning Head:** Select either the Electric Brush Head or the Electric Rotating Mop Head and attach it to the other end of the extension wand until it clicks.

2. Initial Charging

1. Before first use, fully charge the appliance.
2. **Using the Wall-mounted Magnetic Charging Dock:** Install the charging dock on a wall at a height of approximately 92 cm (as per manufacturer guidelines) to ensure proper contact with the vacuum's charging points. Connect the power adapter to the dock and a power outlet. Attach the vacuum to the dock; it will be held magnetically and begin charging.
3. Alternatively, you can plug the power adapter directly into the charging port on the main unit.

4. The LED display will indicate charging status.
-

OPERATING INSTRUCTIONS

1. Power On/Off and Mode Selection

- Press the power button on the main unit to turn the vacuum on or off.
- The LED display will show the current operating mode and battery level.
- Press the mode selection button to cycle through the available power modes:
 - **Normal Mode:** Up to 80 minutes runtime, suitable for light cleaning.
 - **Medium Mode:** Up to 35 minutes runtime, for moderate cleaning tasks.
 - **Turbo Mode:** Up to 10 minutes runtime, for maximum suction power on stubborn dirt.

2. Using the Electric Brush Head (Vacuuming)

- Attach the Electric Brush Head for dry vacuuming.
- Move the vacuum across the floor surface to collect dust and debris. This head is suitable for various floor types.

3. Using the Electric Rotating Mop Head (Wet Cleaning)

- Attach the Electric Rotating Mop Head for wet cleaning hard floors.
- Fill the mop head's water tank with clean water and a small amount of suitable floor cleaning solution, if desired. Ensure not to overfill.
- Attach the two rotating mop pads to the bottom of the mop head.
- Turn on the vacuum and select your desired power mode. The mop head will begin rotating and dispensing water.
- Guide the mop head across hard floor surfaces for effective scrubbing and cleaning.
- Note: The mop function operates separately from the vacuum suction. For optimal results, vacuum the area first, then use the mop head.



Image: The electric rotating mop head in operation, cleaning a wooden floor surface.

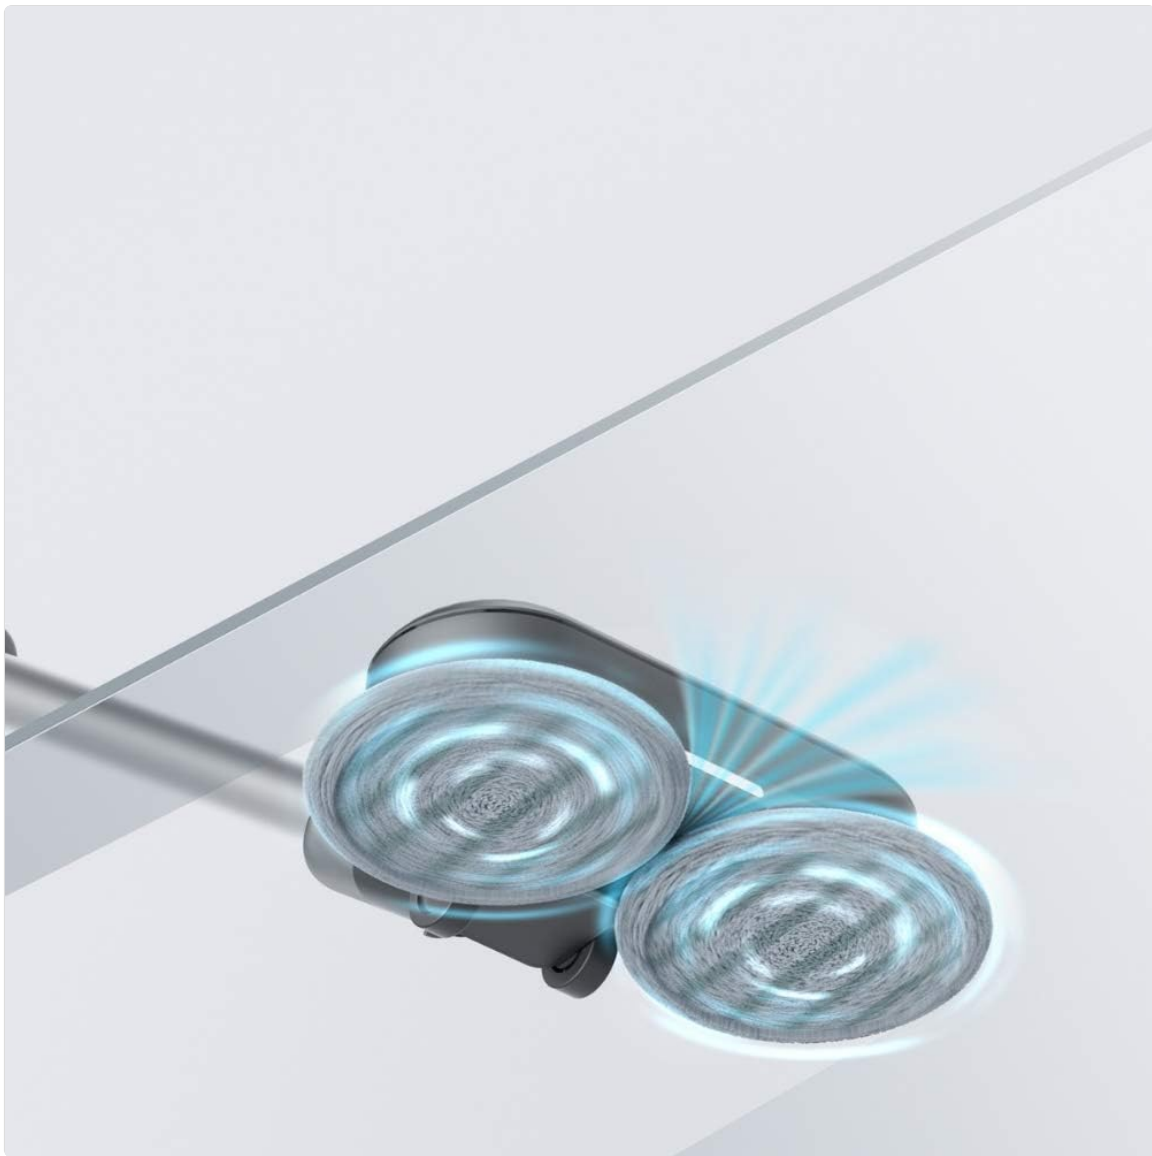


Image: A close-up view of the two rotating mop pads on the electric rotating mop head.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of yourROIDMI X30 Plus.

1. Emptying the Dustbin

- Empty the dustbin regularly, especially when the "MAX" line is reached.
- Detach the dustbin from the main unit.
- Open the dustbin lid and dispose of collected debris.
- Reattach the dustbin securely.

2. Cleaning Filters

- TheROIDMI X30 Plus uses a HEPA filter. Regularly check and clean the filter to maintain suction power.
- Remove the filter from the dustbin.
- Tap the filter gently to remove loose dust. If washable, rinse under cold running water until the

water runs clear.

- Allow the filter to air dry completely for at least 24 hours before reinserting. Do not use the vacuum with a wet filter.

3. Cleaning Brush Heads

- Periodically remove hair and debris tangled around the brush bar of the Electric Brush Head.
- The rotating mop pads on the Electric Rotating Mop Head should be removed and washed after each use.
- After using the mop head, empty any remaining water from the tank. Note that completely draining the tank can be challenging; allow it to air dry to prevent odor or mildew.

4. Battery Care

- To prolong battery life, avoid completely draining the battery before recharging.
- Store the vacuum in a cool, dry place when not in use.

TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
No power / Does not turn on	Battery is depleted.	Charge the vacuum fully.
Reduced suction power	Dustbin is full. Filter is clogged. Brush head or wand is blocked.	Empty the dustbin. Clean or replace the filter. Check and clear any blockages in the brush head or extension wand.
Mop head not dispensing water or cleaning effectively	Water tank is empty. Mop pads are dirty or worn.	Refill the water tank. Clean or replace the mop pads.
Vacuum falls from wall mount easily	Wall mount installed incorrectly or too low.	Ensure the wall mount is installed at the recommended height (approx. 92 cm) and securely fastened. The magnetic hold requires the vacuum to rest on the floor.
Battery indicator drops suddenly	Inconsistent battery sensor reading.	This can be a known characteristic. Continue use; if performance is severely affected, contact support.

SPECIFICATIONS







Feature	Detail
Brand	ROIDMI
Model Number	X30 Plus
Color	Grey
Dimensions (L x W x H)	20.4 x 34.5 x 60.9 cm
Weight	2.7 Kilograms
Power	435 Watts
Motor Speed	120,000 RPM
Suction Power	26,500 Pa
Battery Life	Up to 80 minutes (Normal Mode)
Special Feature	Cordless, LED Display, Dual Rotating Mop Heads
Filter Type	HEPA Filter
Surface Recommendation	Hard Floor
Power Source	Battery Powered (1 Lithium-ion battery included)

WARRANTY AND SUPPORT

Your ROIDMI X30 Plus comes with a comprehensive warranty when purchased through an official distributor:

- **Motor Warranty:** 5 years
- **Component Warranty:** 2 years

This warranty includes pickup and home delivery service. For warranty claims, technical support, or spare parts, please contact your official ROIDMI distributor or the point of purchase. Ensure you retain your proof of purchase.

	<p>ROIDMI Robot Vacuum and Mop Cleaner Operation Manual</p> <p>Comprehensive operation manual for the ROIDMI Robot Vacuum and Mop Cleaner, detailing safety instructions, product overview, installation, usage, maintenance, troubleshooting, and technical specifications.</p>
	<p>ROIDMI EVE PLUS Robot Vacuum and Mop Cleaner Operation Manual</p> <p>This operation manual provides detailed instructions for the ROIDMI EVE PLUS Robot Vacuum and Mop Cleaner, covering safety instructions, product overview, installation, usage, cleaning and maintenance, troubleshooting, and technical data.</p>
	<p>ROIDMI</p> <p>ROIDMI XCQ15RM/XCQ16RM</p>
	<p>ROIDMI X30 Pro RS60 Vacuum Cleaner: FCC & Compliance Specifications</p> <p>Official FCC and regulatory compliance information for the ROIDMI X30 Pro and RS60 vacuum cleaner models, including technical specifications and certifications.</p>
	<p>Manuel d'utilisation Robot Aspirateur ROIDMI EVE Plus - Guide Complet</p> <p>Guide complet pour le robot aspirateur et nettoyeur ROIDMI EVE Plus. Instructions d'installation, d'utilisation, d'entretien, dépannage, spécifications techniques et garantie.</p>
	<p>ROIDMI Cordless Vacuum Cleaner Operation Manual - User Guide</p> <p>Comprehensive operation manual for the ROIDMI Cordless Vacuum Cleaner, covering safety precautions, product description, installation, usage, cleaning, troubleshooting, and warranty information.</p>