

Carrera 370200997X



Carrera RC Nintendo Mario Kart Yoshi Quad Instruction Manual

Model: 370200997X

1. INTRODUCTION

This manual provides essential information for the safe and proper operation, maintenance, and care of your Carrera RC Nintendo Mario Kart Yoshi Quad remote control vehicle. Please read all instructions carefully before use and retain this manual for future reference.

Safety Warning: Choking Hazard - Small Parts. Not for children under 3 years. Recommended age: 6 years and up.

2. PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- 1 x Carrera RC Yoshi Quad Vehicle
- 1 x 2.4 GHz Remote Control
- 1 x LiFePO4 Rechargeable Battery (for vehicle)
- 1 x USB Charging Cable
- 2 x AAA Batteries (for remote control)



Image 1: Carrera RC Yoshi Quad Vehicle.

3. SETUP

3.1 Battery Installation (Remote Control)

1. Locate the battery compartment on the back of the remote control.
2. Open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Image 2: The 2.4 GHz remote control for the Yoshi Quad.

3.2 Vehicle Battery Charging

The vehicle uses a LiFePO4 rechargeable battery. Charge the battery before first use and whenever performance decreases.

1. Connect the USB charging cable to the vehicle's charging port.
2. Connect the other end of the USB cable to a powered USB port (e.g., computer, USB wall adapter).
3. The charging indicator light will show the charging status (refer to vehicle manual for specific light indications).
4. Once fully charged, disconnect the USB cable. Charging time may vary.

3.3 Pairing the Vehicle and Remote Control

The vehicle and remote control are typically pre-paired. If re-pairing is necessary:

1. Ensure both the vehicle and remote control are turned off.
2. Turn on the vehicle. The indicator light will flash.
3. Turn on the remote control.
4. The indicator lights on both devices should become solid, indicating a successful connection. If not, repeat the steps or consult the troubleshooting section.

4. OPERATING INSTRUCTIONS

4.1 Basic Controls

The 2.4 GHz remote control allows for precise vehicle movement:

- **Left Joystick:** Controls forward and backward movement.
- **Right Joystick:** Controls left and right steering.
- **ON/OFF Switch:** Powers the remote control on or off.

4.2 Driving Tips

- Operate the vehicle on clean, dry surfaces.
- Avoid water, sand, and excessive dust to prevent damage.
- Practice in an open area to familiarize yourself with the controls.
- The differential gear and pneumatic tires are designed for better handling on various terrains.



Image 3: The Yoshi Quad in action, demonstrating its movement capabilities.

Your browser does not support the video tag.

5. MAINTENANCE

5.1 Cleaning

- Turn off the vehicle and remote control before cleaning.
- Wipe the vehicle with a soft, damp cloth. Do not use harsh chemicals or solvents.
- Ensure no water enters the electronic components.

5.2 Battery Care and Storage

- Always remove batteries from the remote control if not in use for extended periods.
- Store the vehicle's rechargeable battery in a cool, dry place.
- Do not overcharge or completely discharge the LiFePO4 battery.
- Dispose of old batteries responsibly according to local regulations.

5.3 General Storage

Store the vehicle and remote control in a dry, cool environment away from direct sunlight and extreme temperatures.

6. TROUBLESHOOTING

If you encounter issues with your Carrera RC Yoshi Quad, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vehicle does not respond to remote.	Low batteries in vehicle or remote; not paired; power switch off.	Charge vehicle battery; replace remote batteries; ensure both are switched ON; re-pair devices.
Poor range or intermittent control.	Battery low; environmental interference; too far from vehicle.	Charge batteries; move to an area with less interference; operate within recommended range.
Vehicle moves slowly or lacks power.	Vehicle battery low.	Recharge the vehicle's LiFePO4 battery.

7. SPECIFICATIONS

Feature	Detail
Product Dimensions	7.5 x 6 x 8 inches
Item Weight	2.53 pounds
Model Number	370200997X

Feature	Detail
Manufacturer Recommended Age	6 years and up
Batteries Required	Vehicle: LiFePO4 rechargeable (included); Remote: 2 AAA (included)
Radio Frequency	2.4 GHz
Special Features	Differential gear, pneumatic tires

8. SAFETY INFORMATION

- Always supervise children during operation.
- Do not operate near people, pets, or obstacles.
- Avoid operating in wet conditions or on public roads.
- Do not modify the vehicle or remote control.
- Ensure proper battery installation and charging to prevent hazards.



Image 4: The Yoshi Quad alongside a Mario Quad, illustrating the product line.

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the official Carrera website or contact your retailer. Keep your proof of purchase for any warranty claims.

© 2026 Carrera. All rights reserved. Nintendo Mario Kart is a trademark of Nintendo.