

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Paladone](#) /

› [Paladone PlayStation 5 Icons Light XL Instruction Manual](#)

Paladone PP7917PS

Paladone PlayStation 5 Icons Light XL Instruction Manual

PRODUCT OVERVIEW

The Paladone PlayStation 5 Icons Light XL is designed to illuminate your space with the iconic PlayStation symbols. This mood light features multiple lighting modes, including standard illumination, dynamic color phasing, and sound-reactive functions, making it a versatile and engaging addition to any game room or bedroom setup.

THREE LIGHT MODES

Normal, Colour Phasing, and Sound Reactive



Image: Paladone PlayStation Icons Light XL displaying three light modes: Normal, Color Phasing, and Sound Reactive.

SETUP INSTRUCTIONS

Powering the Device

The PlayStation Icons Light XL can be powered in two ways:

- **USB Power:** Connect the included USB cable to the light and a compatible USB power source (e.g., a USB wall adapter or a computer USB port).
- **Battery Power:** Insert 3 x AAA batteries (not included) into the battery compartment located on the base of the light. Ensure correct polarity.

USB AND BATTERY POWERED



**151 cm (59.5 in) Micro USB Cord Included,
Batteries and USB Adaptor Not Included**

Image: Close-up of the Paladone PlayStation Icons Light XL base, showing the USB port and battery compartment for 3 AAA batteries.

OPERATING INSTRUCTIONS

Turning On/Off and Changing Modes

Locate the power button on the base of the light. Press the button to cycle through the available lighting modes:

- **Mode 1: Standard Lighting:** The light will display a steady blue illumination.
- **Mode 2: Color Phasing:** The light will transition through various colors.
- **Mode 3: Sound Reactive:** The light will react to ambient sounds and music, changing patterns and intensity.

To turn off the light, continue pressing the power button until the light switches off.

Video: Official product video demonstrating the three lighting modes of the Paladone PlayStation Icons Light XL: standard blue, color phasing, and sound reactive. The video shows the light changing patterns in response to music.

MAINTENANCE

Cleaning

To clean the light, gently wipe it with a soft, dry cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.

Battery Replacement

If using battery power, replace all 3 AAA batteries when the light dims or stops functioning. Ensure batteries are inserted with correct polarity.

TROUBLESHOOTING

- **Light does not turn on:**

- Check if the USB cable is securely connected to both the light and the power source.
- If using batteries, ensure they are inserted correctly and are not depleted.
- Try a different USB power source or fresh batteries.

- **Light is dim:**

- Replace batteries if using battery power.
- Ensure the USB power source provides sufficient power.

- **Sound reactive mode not working:**

- Ensure there is audible sound or music for the light to react to.
- Check that the light is in the correct sound-reactive mode.

PRODUCT SPECIFICATIONS

EXTRA LARGE DECOR

30 cm

12 in

29.5 cm

11.3 in



Image: Dimensions of the Paladone PlayStation Icons Light XL.

Feature	Detail
Brand	Paladone
Model Number	PP7917PS
Product Dimensions	12.4"D x 12"W x 2.44"H
Item Weight	3.53 ounces (100 Grams)
Material	Plastic
Light Source Type	LED
Light Color	Blue
Brightness	150 Lumen
Power Source	Battery Powered (3 x AAA, not included) or USB (cable included)
Battery Life	Approximately 10 Hours (on battery power)

Feature	Detail
Special Feature	Music Reactive
Control Method	Touch (button on base)
Indoor/Outdoor Usage	Indoor
Assembly Required	No

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the manufacturer's official website or contact Paladone customer service directly. Retain your proof of purchase for any warranty claims.

You can visit the Paladone Store for more information:[Paladone Store](#)