



[Manuals.plus](#) /

› [LIKE](#) /

› LIKE Talking ATM Savings Bank Model G972E User Manual

LIKE G972E

LIKE Talking ATM Savings Bank Model G972E User Manual

Your Guide to Operating and Maintaining Your Digital Piggy Bank

INTRODUCTION

The LIKE Talking ATM Savings Bank, Model G972E, is designed to simulate a real ATM machine, providing an interactive way for children to manage their savings. This digital piggy bank features a motorized bill feeder, coin reader, target and balance calculation, ATM card and password protection, a calculator, and a clock with an alarm function. This manual provides essential information for setting up, operating, and maintaining your ATM bank.



Figure 1: Overview of the ATM Savings Bank features.

SETUP

1. Battery Installation

The ATM Savings Bank requires 3 AA batteries (not included). To install:

1. Locate the battery compartment on the bottom of the unit.
2. Open the battery compartment cover.
3. Insert 3 AA batteries, ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.



Figure 4: Password, Target, and Balance buttons.

2. Depositing Coins

To deposit coins:

- Insert coins one by one into the coin slot on the right side of the unit.
- The bank will recognize and count the coins, adding them to your balance.



Figure 5: Coin input slot.

3. Depositing Bills

To deposit paper money:

- Insert bills into the bill feeder slot located below the keypad.
- The motorized feeder will draw the bill into the bank.
- You will need to manually enter the value of the bill using the keypad to update your balance.



Figure 6: Inserting a bill into the ATM bank.



Figure 7: Bill input slot.

4. Checking Balance

To view your current savings balance:

- Insert your ATM card and enter your password.

- Press the 'Balance' button. The current balance will be displayed on the LCD screen.

5. Withdrawing Money

To withdraw money:

- Insert your ATM card and enter your password.
- Press the 'Withdraw' button (often indicated by a downward arrow or similar icon).
- Enter the amount you wish to withdraw using the keypad.
- The money drawer at the bottom of the unit will open, allowing you to retrieve your funds.



Figure 8: Money drawer open for withdrawal.

6. Setting a Savings Target

To set a savings goal:

- Insert your ATM card and enter your password.
- Press the 'Target' button.

- Enter your desired savings target amount using the keypad.
- The bank will track your progress towards this goal.

7. Calculator Function

The ATM bank includes a basic calculator:

- Press the 'Calculator' button to activate the calculator mode.
- Use the number and operation keys (+, -, x, /) to perform calculations.

8. Adjusting Sound Volume

The sound volume of the ATM bank can be adjusted:

- Use the '+' and '-' keys on the keypad to increase or decrease the volume.

MAINTENANCE

1. Cleaning

To clean the ATM bank:

- Wipe the exterior with a soft, dry cloth.
- Avoid using abrasive cleaners or solvents, as these can damage the surface.
- Do not immerse the unit in water.

2. Battery Replacement

When the display dims or the functions become erratic, it is time to replace the batteries. Refer to the 'Battery Installation' section under Setup for instructions. Always replace all 3 AA batteries at the same time with new ones.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Unit does not power on.	Batteries are dead or incorrectly installed.	Check battery polarity and replace with new AA batteries.
Bill feeder is not working smoothly.	Bills are crumpled or too many bills are inserted.	Ensure bills are flat and insert one at a time. Do not force bills into the feeder.
Incorrect balance displayed.	Bill values were not manually entered correctly after deposit.	Ensure you manually enter the value of each bill after it is fed into the machine. If the discrepancy is significant, you may need to reset the device and re-enter your savings.

Problem	Possible Cause	Solution
Coin recognition issues.	Coins are not inserted correctly or the sensor is obstructed.	Ensure coins are inserted fully and one at a time. Clean the coin slot if necessary. Note that the device may not differentiate between all coin types with perfect accuracy.
Sound is too loud or too quiet.	Volume settings need adjustment.	Use the '+' and '-' keys on the keypad to adjust the volume to your preference.

SPECIFICATIONS

Model Number: G972E

Product Dimensions: 10 x 5.4 x 7.9 inches

Item Weight: 2.61 pounds

Power Source: 3 x AA Batteries (not included)

Material: High quality ABS plastics

Storage Capacity: Approximately 2000 coins and 500 paper bills

WARRANTY AND SUPPORT

Warranty information for the LIKE Talking ATM Savings Bank Model G972E is not specified in the provided product details. For any support inquiries or further assistance, please refer to the retailer or manufacturer's contact information provided at the point of purchase.