

[Manuals.plus](#) /

› [GUY-TECH](#) /

› GUY-TECH AC Power Charging Cord for MAXX 1200 Peak AMPS Power Pack Station

GUY-TECH B08YXJW89C

GUY-TECH AC Power Charging Cord Instruction Manual

Model: B08YXJW89C

INTRODUCTION

This instruction manual provides essential information for the safe and effective use of your GUY-TECH AC Power Charging Cord. This 6-foot compatible replacement power adapter is designed to supply power to various devices, including MAXX 1200 Peak AMPS Power Pack Stations, Car Battery Jump Starters, and Compressor Jump Start Power Supplies. It features built-in protection against over voltage, over current, and short circuits to ensure reliable operation.



Figure 1: GUY-TECH AC Power Charging Cord. This image displays the black power cord, featuring a standard two-prong male plug on one end and a two-slot female connector on the other, typically used for connecting to electronic devices. The cord is shown coiled, highlighting its length and flexibility.

SAFETY INSTRUCTIONS

Please read and understand all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- **Compatibility:** Ensure that this power cord is compatible with your device's power input requirements. Refer to your device's manual for specifications.
- **Indoor Use Only:** This product is intended for indoor use in dry locations. Do not expose to water, rain, or excessive moisture.
- **Inspect Before Use:** Before each use, inspect the cord for any signs of damage, including cuts, frayed wires, or bent prongs. Do not use if damaged.
- **Proper Connection:** Ensure all connections are secure and fully inserted. Loose connections can cause overheating.
- **Avoid Overloading:** Do not overload electrical outlets. Connect the cord to a properly grounded and rated power source.
- **Children and Pets:** Keep the power cord out of reach of children and pets to prevent accidental injury or damage.
- **Disconnect Safely:** Always grasp the plug, not the cord, when disconnecting from an outlet or device.

SETUP

Follow these steps to properly set up your GUY-TECH AC Power Charging Cord:

- 1. Identify Device Input:** Locate the AC power input port on your MAXX 1200 Peak AMPS Power Pack Station, Car Battery Jump Starter, or Compressor Jump Start Power Supply. This port typically matches the female end of the charging cord.
- 2. Connect to Device:** Firmly insert the female connector end of the GUY-TECH AC Power Charging Cord into the corresponding power input port on your device.
- 3. Connect to Power Outlet:** Plug the male two-prong plug end of the charging cord into a standard 100V-240V AC wall outlet. Ensure the outlet is functional and provides stable power.
- 4. Verify Connection:** Confirm that both ends of the cord are securely connected.

OPERATING INSTRUCTIONS

Once the power cord is properly connected, your device should begin to receive power or charge.

- Charging Indication:** Refer to your specific device's instruction manual for information on charging indicators (e.g., LED lights, display screens) and estimated charging times.
- Continuous Power:** For devices that require continuous AC power, the cord will supply power as long as it is connected to a live outlet and the device.
- Disconnection:** When charging is complete or when the device is not in use, disconnect the power cord from both the wall outlet and the device.

MAINTENANCE

Proper maintenance will extend the life of your power charging cord.

- Storage:** Store the cord in a cool, dry place away from direct sunlight and extreme temperatures. Avoid tightly coiling or bending the cord sharply.
- Cleaning:** Disconnect the cord from all power sources before cleaning. Wipe the cord and plugs with a soft, dry cloth. Do not use liquid cleaners or solvents.
- Inspection:** Periodically inspect the cord for any signs of wear, damage, or discoloration. If any damage is observed, discontinue use immediately and replace the cord.

TROUBLESHOOTING

If you encounter issues with your power charging cord, refer to the following troubleshooting steps:

Problem	Possible Cause	Solution
Device not receiving power/charging.	- Loose connection. - Faulty wall outlet. - Damaged power cord. - Device issue.	- Ensure both ends of the cord are securely plugged in. - Test the wall outlet with another known working appliance. - Inspect the cord for damage; replace if necessary. - Refer to your device's manual for troubleshooting its power input.
Cord or plug feels hot during use.	- Overload. - Internal damage. - Poor ventilation.	- Immediately disconnect the cord. - Ensure the device's power requirements do not exceed the cord's rating. - Inspect for damage; discontinue use if damaged. - Ensure the cord is not covered or in an enclosed space.

If problems persist after following these steps, please contact the seller for further assistance.

SPECIFICATIONS

Model Number (ASIN)	B08YXJW89C
Input Voltage	100V - 240V AC
Cord Length	6 feet (approximately 1.83 meters or 72 inches)
Item Weight	5 ounces (approximately 141.75 grams)
Safety Features	Over Voltage Output Protection, Over Current Output Protection, Short Circuit Output Protection
Compatibility	Compatible replacement for MAXX 1200 Peak AMPS Power Pack Station, Car Battery Jump Starter, Compressor Jump Start Power Supply

WARRANTY AND SUPPORT

This GUY-TECH AC Power Charging Cord is a compatible replacement product. For any issues or support inquiries, please contact the seller directly through the platform where the purchase was made. Refer to the platform's return policy for information regarding returns or replacements, typically within 30 days of purchase.

For specific warranty details, please consult the seller's terms and conditions at the time of purchase.

© 2024 GUY-TECH. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question