

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Aigostar](#) /

› [Aigostar Electric Coffee Grinder Instruction Manual](#)

Aigostar B08YYFFZHP

Aigostar Electric Coffee Grinder Instruction Manual

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Aigostar Electric Coffee Grinder. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always ensure the power supply matches the voltage specified on the appliance.
- Disconnect the power supply before disassembling, assembling, or adjusting any part of the product.
- If the power cord is damaged, contact customer service. Do not disassemble or repair the appliance yourself.
- This product is only suitable for grinding dry ingredients. Do not grind meat, vegetables, or fruits such as apples.
- Do not exceed the maximum cup volume.
- The maximum continuous working time is 60 seconds. Allow the appliance to cool down for 60 seconds between uses. Stop using for 5 minutes after 3 continuous uses.
- Ensure the grinding bowl and cover are firmly locked in place before operation to activate the safety micro-switch.
- Keep out of reach of children.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your Aigostar Electric Coffee Grinder:

- **Motor Unit:** The main body containing the motor and power button.
- **Removable Grinding Bowl:** Stainless steel bowl with integrated blades for grinding.
- **PP Lid:** Inner lid for the grinding bowl.
- **Transparent Lid:** Outer lid that covers the grinding bowl and activates the safety switch.
- **One-Touch Button:** For operating the grinder.
- **2-in-1 Spoon & Brush:** For measuring and cleaning.

GRIND COFFEE BEANS & MORE

Diverse and practical



Figure 1: Exploded view of the Aigostar Electric Coffee Grinder components. This image illustrates the transparent lid, seal ring, removable bowl, micro switch, safety lock, and the one-touch button.

Your browser does not support the video tag.

Video 1: This video demonstrates the unboxing and shows what is included in the Aigostar electric coffee grinder box, including the main unit, removable bowl, lids, and cleaning brush.

SETUP AND OPERATION

- Place Grinding Bowl:** Insert the removable grinding bowl into the motor unit, ensuring it is securely seated.
- Add Ingredients:** Use the provided spoon to add coffee beans, spices, herbs, or grains into the grinding bowl. Do not fill past the 'MAX' line.
- Secure Lids:** Place the PP lid over the grinding bowl, then position the transparent lid. Turn the transparent lid clockwise until it locks into place. This action activates the safety switch, allowing the grinder to operate.
- Grind:** Plug in the power cord. Press and hold the one-touch button to begin grinding. Release the button to stop.
- Check Fineness:** Observe the grinding process through the transparent lid. Grind for longer durations for finer results.
- Serve:** Once the desired fineness is achieved, unplug the grinder, unlock and remove the transparent lid, then remove the grinding bowl to pour out the ground contents.

1

Add Coffee Bean



2

Close the pp cover, cover the transparent cover, and then turn clockwise to activate the safety switch, otherwise the device will not work



3

Plug in the power supply of the device, press and hold the ON/OFF switch to start working



4

Pour out perfect coffee powder and enjoy the fresh coffee



Figure 2: Step-by-step guide for using the Aigostar Electric Coffee Grinder. It shows adding beans, securing the lid, pressing the button, and pouring the ground coffee.

Dual Security Lock



Only works when the base and lid are locked

(Only when the white rubber piece is pressed down by the cover will the micro switch be activated)

Figure 3: Illustration of the dual security lock feature, showing how the lid must be correctly aligned and turned to lock the grinder for operation.

Your browser does not support the video tag.

Video 2: This video demonstrates the general operation of the Aigostar Coffee Grinder, including adding ingredients, securing the lid, and grinding.

GRINDING GUIDE

The grinding time determines the fineness of your grind. Adjust according to your preferred brewing method:

- **French Press:** 5-10 seconds (coarse grind)
- **Drip Coffee:** 10-15 seconds (medium grind)
- **Espresso:** 15-20 seconds (fine grind)

Customize Fineness & Coarseness



Figure 4: Visual guide to achieving different grind fineness for various coffee brewing methods, including recommended grinding times.

The grinder is also suitable for various other dry ingredients:

- Nuts
- Spices
- Herbs
- Grains (e.g., flaxseed)



Figure 5: Examples of various dry ingredients that can be ground with the Aigostar Electric Coffee Grinder, such as coffee beans, nuts, spices, and flaxseed.

CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your grinder.

- 1. Unplug:** Always unplug the appliance from the power outlet before cleaning.
- 2. Remove Grinding Bowl:** Unlock and remove the transparent lid, then lift out the removable stainless steel grinding bowl.
- 3. Clean Bowl:** The removable bowl can be easily washed with water. Use the provided 2-in-1 spoon and brush to remove any residual grounds from the blades and interior of the bowl. Ensure the bowl is completely dry before reassembling.
- 4. Clean Motor Unit:** Wipe the exterior of the motor unit with a damp cloth. Do not immerse the motor unit in water or any other liquid.
- 5. Reassemble:** Once all parts are clean and dry, reassemble the grinder by placing the grinding bowl back into the motor unit, followed by the PP lid and transparent lid, ensuring it is locked.



Figure 6: The removable grinding bowl and the cleaning process, highlighting the ease of washing with water.

Your browser does not support the video tag.

Video 3: This video demonstrates the detachable and washable bowl feature of the Aigostar grinder, showing how to remove and clean it.

TROUBLESHOOTING

If your Aigostar Electric Coffee Grinder does not work, please follow these steps:

- 1. Check Lids:** Ensure both the PP plastic cover and the transparent cover are tightly closed and correctly aligned.
- 2. Lock Grinding Bowl:** Verify that the grinding bowl is firmly locked into position within the motor unit.
- 3. Activate Micro Switch:** The transparent lid has grooves that must align with a white plastic micro-switch on the base. Turn the transparent lid clockwise until it presses down on this white plastic piece, activating the micro-switch. If it's not pressed down, the device will not work. If the white plastic piece is not pressed down, pick up the lid, rotate it slightly, and try again until the white plastic piece is pressed down.



Figure 7: Visual troubleshooting steps for when the grinder does not work, focusing on lid and bowl alignment to activate the safety micro-switch.

Your browser does not support the video tag.

Video 4: This troubleshooting video provides a detailed guide on what to do if the Aigostar coffee grinder does not work, focusing on the safety lock mechanism.

If you cannot troubleshoot the issue yourself or have further questions, please contact Aigostar customer support for assistance.

SPECIFICATIONS

| Feature | Detail |
|--------------------|-------------------------------|
| Brand | Aigostar |
| Model | B08YYFFZHP |
| Color | Stainless Steel |
| Material | Stainless Steel |
| Product Dimensions | 4.09" L x 4.09" W x 7.91" H |
| Item Weight | 1.5 pounds |
| Capacity | 75g (up to 14 cups of coffee) |
| Power | 160-watt motor |
| Blade Material | Stainless Steel |

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your product packaging or visit the official Aigostar website. Our customer service team is available to assist you with any questions or concerns regarding your Aigostar Electric Coffee Grinder.