

[Manuals.plus](#) /

> [DICKIE TOYS](#) /

> Dickie Toys Fire Engine Instruction Manual

DICKIE TOYS 203302028

Dickie Toys Fire Engine Instruction Manual

Model: 203302028

1. INTRODUCTION

Welcome to the instruction manual for your new Dickie Toys Fire Engine. This toy vehicle is designed to provide hours of imaginative play for children aged 3 and up, featuring realistic lights, sounds, and a functional water spray. Please read this manual carefully to ensure safe and optimal use of the product.



Image: The Dickie Toys Fire Engine, showcasing its vibrant red color and illuminated blue lights on the roof, ready for action.

Safety Information

- Recommended for children aged 3 years and up.
- Adult supervision is recommended during play, especially when using the water spray function.

- Ensure all parts are securely attached before play.
- Do not aim the water spray at eyes or faces.
- Keep away from electrical outlets and devices when using water.

2. PRODUCT FEATURES

The Dickie Toys Fire Engine is packed with features to enhance playtime:

- **Realistic Lights and Siren:** Activate the built-in siren and flashing blue lights with a button press.
- **Water Spray Function:** A functional water cannon allows for real water spraying.
- **Rotating Wheels:** Equipped with swivel wheels for easy maneuverability on various surfaces.
- **Durable Construction:** Designed with rounded edges and robust materials for safe and long-lasting play.



Image: A detailed side view of the Dickie Toys Fire Engine, highlighting its robust wheels and the fire department emblem.

3. SETUP

Battery Installation

Your fire engine requires 2 AAA batteries, which are included.

1. Locate the battery compartment on the underside of the vehicle.
2. Using a small screwdriver (not included), open the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

Filling the Water Tank

To use the water spray function, fill the integrated water tank:

1. Locate the water tank opening, typically on the top or side of the vehicle near the water cannon.
2. Carefully open the cap.

3. Fill the tank with clean tap water. Do not overfill.
4. Securely close the cap to prevent leaks.

4. OPERATING INSTRUCTIONS

Activating Lights and Siren

Press the designated button, usually located on the top of the cabin, to activate the realistic siren sounds and flashing blue lights. Press again to turn off.

Using the Water Spray Function

Once the water tank is filled, press the button or lever associated with the water cannon to spray water. Ensure the nozzle is pointed in a safe direction.

Maneuvering the Vehicle

The fire engine features swivel wheels, allowing it to be easily pushed and steered by hand. It is suitable for both indoor and outdoor play.



Image: A child happily playing with the Dickie Toys Fire Engine, demonstrating its ease of use and engaging features.

5. MAINTENANCE

Cleaning

Wipe the fire engine with a damp cloth to clean. Do not immerse the toy in water, especially the electronic components. Avoid using harsh chemicals or abrasive cleaners.

Battery Care

- Remove batteries if the toy will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly.
- Do not mix old and new batteries, or different types of batteries.

Water Tank Care

After use, empty any remaining water from the tank to prevent mold or mildew buildup. Allow the tank to air dry completely before storing.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lights and/or siren not working.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with fresh AAA batteries.
Water spray is weak or not working.	Water tank is empty or nozzle is clogged.	Refill water tank. Check nozzle for obstructions and gently clear if necessary.
Vehicle not moving smoothly.	Wheels are obstructed or dirty.	Clean wheels and axles. Ensure no debris is caught.

7. SPECIFICATIONS

Product Dimensions: 5.91 x 3.35 x 4.92 inches
Item Weight: 4.6 ounces
Model Number: 203302028
Recommended Age: 3 years and up
Batteries: 2 AAA batteries (included)
Material: Durable plastic, saliva resistant

8. WARRANTY AND SUPPORT

For information regarding warranty, returns, or product support, please contact Dickie Toys customer service directly or visit their official website.
You can also visit the official Dickie Toys store on Amazon for more products and information:[Dickie Toys Amazon Store](#)

IMPORTANT NOTE ON VIDEOS

No official product videos were available in the provided data for embedding in this manual. If available, relevant videos demonstrating features like the water spray function or light/sound activation would typically be placed within the "Operating Instructions" section to provide visual guidance.



© 2025 Dickie Toys. All rights reserved.