

[Manuals.plus](#) /

› [DICKIE TOYS](#) /

› Dickie Toys - Mack Truck with Trailer and Boat Instruction Manual

DICKIE TOYS 203747009

Dickie Toys - Mack Truck with Trailer and Boat Instruction Manual

Model: 203747009

Brand: DICKIE TOYS



1. INTRODUCTION

This manual provides essential information for the safe and proper use of your Dickie Toys Mack Truck with Trailer and Boat. Please read these instructions carefully before operating the toy and retain them for future reference.

The Dickie Toys Mack Truck with Trailer and Boat is a detailed toy vehicle set designed for interactive play. It features a Mack truck with light and sound effects, a detachable trailer, and a boat equipped with a wind-up motor for water play.



Image 1.1: The complete Dickie Toys Mack Truck with Trailer and Boat set, showcasing the yellow Mack truck, orange trailer, and the boat.

2. PACKAGE CONTENTS

Ensure all components are present and in good condition upon opening the package. The standard package includes:

- 1 x Mack Truck (yellow)
- 1 x Detachable Trailer (orange)
- 1 x Boat with Wind-Up Motor (yellow and orange)
- 2 x AAA Batteries (pre-installed or included separately)



Image 2.1: All individual components of the Dickie Toys set, including the Mack truck, trailer, and boat, displayed outside their packaging.

3. SETUP

3.1 Battery Installation (Truck)

The Mack Truck requires 2 AAA batteries for its light and sound functions. These batteries are included. If replacement is needed:

1. Locate the battery compartment on the underside of the truck.
2. Using a small Phillips head screwdriver, unscrew the battery compartment cover.
3. Insert 2 AAA batteries, ensuring correct polarity (+/-) as indicated inside the compartment.
4. Replace the cover and secure it with the screw.

3.2 Attaching the Trailer

The trailer connects to the Mack Truck via a hitch mechanism.

1. Ensure the trailer's front support legs are extended (if applicable) to keep it stable.
2. Align the hitch on the rear of the Mack Truck with the coupling point on the front of the trailer.
3. Gently push the truck backward until the hitch clicks securely into place.
4. To detach, carefully lift the trailer from the hitch.



Image 3.1: The orange trailer component, showing the hitch connection point and support legs.

3.3 Preparing the Boat

The boat features a wind-up motor for propulsion in water.

1. Place the boat onto the trailer's designated cradles.
2. To activate the wind-up motor, twist the knob located at the rear of the boat clockwise several times. Do not over-wind.
3. For water play, ensure the boat is placed on a flat water surface after winding.



Image 3.2: Rear view of the boat, highlighting the wind-up motor and propeller assembly.

4. OPERATING INSTRUCTIONS

4.1 Truck Operation

The Mack Truck is designed for push-and-play action and includes interactive features.

- **Push-and-Go:** Simply push the truck forward or backward on a flat surface.
- **Lights and Sounds:** Press the button located on the top of the truck's cabin to activate realistic light and sound effects.



Image 4.1: Angled view of the Mack Truck, showing the illuminated lights on the cabin roof.

4.2 Boat Operation

The boat is intended for use in water with its wind-up motor.

- **Winding the Motor:** Before placing the boat in water, twist the wind-up knob at the rear of the boat clockwise until resistance is felt. Do not force or over-wind.
- **Water Play:** Place the wound boat gently onto a flat water surface (e.g., bathtub, shallow pool). The propeller will spin, propelling the boat forward.
- **Drying:** After water play, thoroughly dry the boat, especially the motor area, to prevent damage.



Image 4.2: Front view of the boat, ready for water play.

5. MAINTENANCE

5.1 Cleaning

- Wipe the truck and trailer with a damp cloth. Do not immerse the truck in water.
- For the boat, rinse with clean water after use and dry thoroughly, especially the wind-up mechanism.
- Do not use harsh chemicals or abrasive cleaners.

5.2 Battery Care

- Remove batteries from the truck if it will not be used for an extended period to prevent leakage.
- Dispose of used batteries responsibly according to local regulations.
- Do not mix old and new batteries, or different types of batteries.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Truck lights/sounds not working.	Batteries are dead or incorrectly installed.	Check battery polarity. Replace with fresh AAA batteries.
Boat motor not propelling.	Not wound sufficiently or propeller is obstructed.	Wind the motor fully. Check for debris around the propeller and clear it.
Trailer detaches easily.	Hitch not fully engaged.	Ensure the truck and trailer are aligned and pushed together until a secure connection is felt.

7. SPECIFICATIONS

- **Model Number:** 203747009
- **Product Dimensions (Truck with Trailer):** Approximately 16 inches (40.6 cm) in length
- **Boat Length:** Approximately 12 inches (30.5 cm)

- **Item Weight:** 10.6 ounces (approx. 300 grams)
- **Batteries:** 2 x AAA (included)
- **Recommended Age:** 3 years and up
- **Manufacturer:** Dickie Toys HK Ltd
- **Release Date:** May 1, 2021

8. WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in this manual. For details regarding warranty coverage, returns, or technical support, please refer to the product packaging or contact Dickie Toys customer service directly.

You may find contact information on the official Dickie Toys website or through the retailer where the product was purchased.

Important Safety Information: This toy contains small parts and is not suitable for children under 3 years due to choking hazards. Adult supervision is recommended during play, especially during water activities with the boat.



© 2025 DICKIE TOYS. All rights reserved.

This manual is for informational purposes only. Product specifications are subject to change without notice.