

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [EGOFIT](#) /
- › [Egofit Walker Pro-M1 Under Desk Treadmill Instruction Manual](#)

EGOFIT Pro-M1

Egofit Walker Pro-M1 Under Desk Treadmill Instruction Manual

INTRODUCTION

The Egofit Walker Pro-M1 is a compact and innovative under-desk treadmill designed to integrate seamlessly into your office or home workspace. This walking pad is engineered to help you achieve your exercise and weight loss goals daily, improve your health, build muscle, and boost energy while working. Its unique design features a fixed 5% incline to enhance calorie burning and a space-saving motor for maximum walking room.

This manual provides essential information for the safe and effective use of your Egofit Walker Pro-M1 treadmill. Please read it thoroughly before operation.


Office

Mode



Small Apartment

Mode

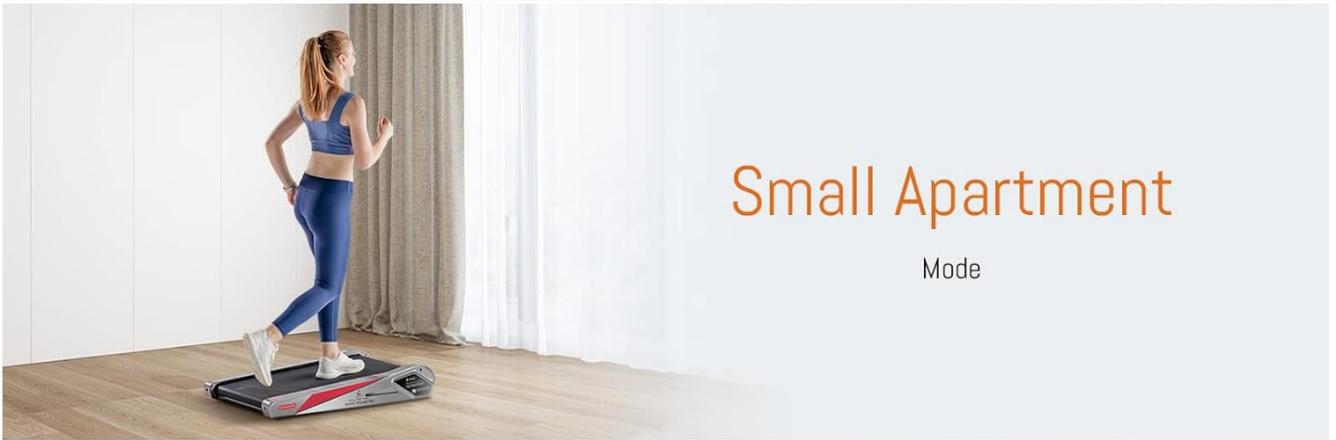

Home Office

Mode



The Egofit Walker Pro-M1 under desk treadmill, showcasing its sleek design and compact form factor.

WHAT'S IN THE BOX

Upon unboxing your Egofit Walker Pro-M1, you should find the following components:

- Lubricant
- Power Cord
- Remote Control
- Tool Kit
- User Manual



Included accessories with your Egofit Walker Pro-M1 treadmill.

SETUP

The Egofit Walker Pro-M1 requires no assembly. Simply remove it from the packaging and place it on a flat, stable surface. Ensure there is adequate space around the treadmill for safe operation. Connect the power cord to the treadmill and then to a power outlet.

For optimal performance and longevity, it is recommended to apply the provided lubricant to the running belt before first use, and periodically thereafter as instructed in the user manual.

Your browser does not support the video tag.

This video demonstrates the setup and placement of the Egofit Walker Pro-M1 under a standing desk, highlighting its suitability for office environments.

OPERATING INSTRUCTIONS

The Egofit Walker Pro-M1 can be controlled via its included remote control or through a dedicated mobile application. The integrated LCD display provides real-time workout metrics.

Remote Control Operation

- **Power On/Off:** Use the designated button on the remote to power the treadmill on or off.
- **Speed Adjustment:** Use the '+' and '-' buttons to increase or decrease the walking speed. The maximum speed is 3.1 miles per hour.
- **Start/Stop:** Press the play/pause button to start or stop the treadmill belt.

Mobile App Control

Download the Egofit mobile application (available for Android and iOS) to connect to your treadmill via Bluetooth. The app allows you to:

- Control the treadmill's speed.

- Monitor your workout data (calories, time, steps, distance).
- Access additional workout programs and features.

LCD Display

The integrated LCD display shows essential workout data, including calories burned, elapsed time, steps taken, distance covered, and current speed. This allows you to easily track your progress during your workout.

Your browser does not support the video tag.

This video provides a detailed overview of the EgoFit Walker Pro-M1, including demonstrations of its remote and app control functionalities.

KEY FEATURES

Compact Design

The EgoFit Walker Pro-M1 is designed to be the world's smallest under-desk treadmill, making it ideal for small apartments, home offices, and traditional office environments. Its compact dimensions (38.39"D x 21.85"W x 6.89"H) allow it to fit perfectly under adjustable standing desks, enabling you to walk while you work.

Big Strides, No Fear

Our Mini Treadmill's Under Sink Motor Design Delivers Comfortable Walking Experience

(User less than 6.3')



Under-Sink Motor Design



The compact design of the EgoFit Walker Pro-M1 allows for easy storage and use in various settings.

Fixed 5% Incline

This treadmill features an ergonomic fixed 5% incline. This design increases the intensity of your workout without requiring higher speeds, helping you burn more calories faster and engage more muscle groups for a more effective exercise session.

Get Moving With Ease

Our Easy-to-Store Treadmill Fits in Car Trunk.



Saving Space to carry with your round-trips,
travel or moving to a new house. 🚗

The fixed 5% incline feature of the EgoFit Walker Pro-M1 for enhanced calorie burning.

Powerful and Quiet Motor

Equipped with a 2.0 horsepower motor, the EgoFit Walker Pro-M1 delivers reliable performance for walking. The motor operates quietly (below 70dB), ensuring minimal disruption to your work or home environment.

Space Saving & Easy Storage

Under a sofa, bed, or anything with room



The powerful yet quiet motor ensures a smooth and unobtrusive workout experience.

Durable Construction & Weight Capacity

Constructed with a premium-grade alloy steel frame, the EgoFit Walker Pro-M1 is built for durability and longevity. It supports a maximum user weight of 220 lbs (110 kg), making it suitable for a wide range of users.



The robust construction supports users up to 220 lbs.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your EgoFit Walker Pro-M1 treadmill.

Lubrication

The running belt requires periodic lubrication to reduce friction and wear. Use the provided lubricant and follow the instructions in the user manual for application frequency. Typically, lubrication is recommended every few months depending on usage.

Belt Adjustment

Over time, the running belt may become loose or shift. Refer to the user manual for detailed instructions on how to check and adjust the belt tension and alignment using the included tool kit. Proper belt tension and alignment prevent slipping and ensure smooth operation.

TROUBLESHOOTING

If you encounter any issues with your Egofit Walker Pro-M1, please refer to the troubleshooting section in your user manual. Common issues and their solutions include:

- **Treadmill not starting:** Check power connection, ensure the power switch is on, and verify the remote control batteries.
- **Belt slipping or uneven:** Adjust belt tension and alignment as per the maintenance section.
- **Unusual noises:** Inspect for loose parts, ensure proper lubrication, and check for any obstructions.

For persistent problems, contact customer support for assistance.

SPECIFICATIONS

Feature	Detail
Brand	EGOFIT
Model Name	M1 (Egofit Walker Pro-M1)
Product Dimensions (LxWxH)	38.39" x 21.85" x 6.89"
Item Weight	48.5 Pounds
Material	Alloy Steel, Acrylonitrile Butadiene Styrene (ABS)
Maximum Speed	3.1 Miles per Hour
Minimum Speed	0.6 Miles per Hour
Maximum Incline Percentage	5% (Fixed)
Maximum Horsepower	2 Horsepower
Maximum Weight Recommendation	220 lbs (110 Kilograms)
Display Type	LCD (2.95 Inches Screen Size)
Metrics Measured	Distance, Time, Calories, Steps, Speed
Power Source	Corded Electric (550 Watts Input Power)
Connectivity Technology	Power cord, Bluetooth (for App control)

Assembly Required	No
-------------------	----

WARRANTY AND SUPPORT

Your EgoFit Walker Pro-M1 treadmill comes with a 1-year warranty. Please retain your proof of purchase for any warranty claims.

For customer support, technical assistance, or warranty inquiries, please refer to the contact information provided in your user manual or on the official EGOFIT website. You can also find additional support options through your retailer.