

Yosoo Yosoox9edug7fv61511

Yosoo Universal IR Remote Control for Android TV Boxes (x96, x96mini, x96w)

Model: Yosoox9edug7fv61511

1. PRODUCT OVERVIEW

This universal IR remote control is designed as a replacement for Android TV boxes, specifically compatible with x96, x96mini, and x96w models. It offers a straightforward, plug-and-play solution without the need for complex programming.

- **Durable Construction:** Made from high-quality ABS material, ensuring wear resistance and long-term durability.
- **Comfortable Design:** Features silicone buttons for a comfortable tactile experience.
- **Extended Range:** Provides a maximum control distance of approximately 10 meters (33 feet).
- **No Programming Required:** Functions immediately upon battery insertion.
- **Full Functionality:** Covers all original remote control functions.

Suitable for Android x96/x96mini/x96w

Maximum Remote Control Distance: Approx. 10m/33ft

- Made of ABS material
Wear-resistant and durable, ensuring long-term service life.
- No programming, plug in the battery, and it works.



Image 1.1: Front view of the Yosoo Universal IR Remote Control, highlighting its key layout and compatibility with Android x96/x96mini/x96w TV boxes.

2. SETUP

2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two AAA batteries (not included), ensuring correct polarity (+/-).
4. Close the battery compartment cover securely.

The remote control is ready for use immediately after battery installation. No additional programming or pairing is required for compatible Android TV boxes.



Image 2.1: Rear view of the remote control, illustrating the battery compartment with an 'OPEN' indicator.

3. OPERATING INSTRUCTIONS

This remote control provides direct access to all functions of your compatible Android TV box. Point the remote control directly at your TV box for optimal performance.

3.1 Key Functions

Button	Function
Power (Red)	Turns the TV box on or off.
Media Center	Accesses the media center application.
Navigation (Arrows & OK)	Navigates menus and confirms selections.
SETUP	Enters setup or settings menu.
APP	Opens the applications list.
VOL- / VOL+	Adjusts volume down or up.
KD	Dedicated key for Kodi (or similar media player).
Number Keys (0-9)	Direct channel access or input.
Home (House icon)	Returns to the home screen.
Back (Arrow icon)	Goes back to the previous screen.



Image 3.1: A hand holding the remote control, illustrating its ergonomic design for comfortable use.

4. MAINTENANCE

- **Avoid Humidity and High Temperatures:** Do not use or store the remote control in humid environments or areas with high temperatures. Extreme conditions can damage internal components and accelerate material degradation.
- **Cleaning:** To clean the remote's exterior, avoid using water, gasoline, or other corrosive organic cleaners. Use a soft, dry cloth.
- **Battery Removal:** If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage.
- **Internal Cleaning (Advanced):** If specific keys become unresponsive due to internal dirt, carefully open the remote. Gently wipe the surface of the conductive adhesive and the rubber circuit board buttons with a cotton swab lightly dampened with anhydrous alcohol. Ensure all parts are completely dry before reassembling. This procedure should only be attempted by users comfortable with small electronics repair.

5. TROUBLESHOOTING

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the right polarity.
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the TV box's IR receiver.
 - Verify that the remote is within the effective operating range (up to 10m).
- **Specific Keys Not Working:**
 - Refer to the "Internal Cleaning" section under Maintenance if you suspect dirt or debris under the buttons.
- **General Malfunction:**

- Do not attempt to open and repair the remote control yourself if you are not experienced. Instead, contact a qualified home appliance repair service.

6. SPECIFICATIONS

Feature	Detail
Item Type	Remote Control
Shell Material	ABS + Silicone Buttons
Color	As shown in product images (typically black)
Weight	Approx. 47.0g / 1.7oz
Remote Control Distance	Up to 10m / 33ft
Battery Type	2 x AAA Batteries (not included)
Compatibility	Android x96 / x96mini / x96w TV Boxes
Connectivity	Infrared (IR)
Model Number	Yosoox9edug7fv61511

7. WARRANTY & SUPPORT

For warranty information or technical support, please refer to the retailer where you purchased this product or visit the official Yosoo brand store. Keep your purchase receipt as proof of purchase.

Yosoo Brand Store: [Visit Yosoo Store on Amazon](#)



Image 7.1: An illustration representing customer support, indicating assistance is available.

© 2023 Yosoo. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08YYRH4KQ>

More documents and user manuals: **<https://manuals.plus/>**