

[Manuals.plus](#) /

› [WINFLIKE](#) /

› WINFLIKE RCR 192 AA3 Replacement Remote Control User Manual for RCA DVD Home Theater Systems

WINFLIKE RCR 192 AA3

WINFLIKE RCR 192 AA3 Replacement Remote Control User Manual

For RCA DVD Home Theater Systems RTD325W, RTD315W, RTD316W

1. INTRODUCTION

This manual provides instructions for the WINFLIKE RCR 192 AA3 Replacement Remote Control. This remote is designed to operate various RCA DVD Home Theater Systems, offering a direct replacement experience without the need for complex programming.

Compatible Models:

- RTRCR192AA3
- RCR192AA3
- RTD325W
- RTD315W
- RTD316W
- RCA192AA4
- RCR192AA1
- RCR192AA9
- RCR192AD2

Please ensure your system model is listed above for full compatibility.

2. SETUP

2.1 Battery Installation

The RCR 192 AA3 remote control requires two (2) AAA alkaline batteries (not included) for operation. Follow these steps to install the batteries:

1. Locate the battery compartment on the back of the remote control.
2. Press down on the latch and slide the battery cover downwards to open.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Figure 2.1: Angled view of the remote control, illustrating the general location of the battery compartment on the rear side.

2.2 Initial Use

No programming or setup is required for this replacement remote control. Once batteries are correctly installed, the remote is ready for immediate use with compatible RCA DVD Home Theater Systems.

3. OPERATING INSTRUCTIONS

Familiarize yourself with the button layout and their functions:





Figure 3.1: Front view of the RCR 192 AA3 remote control, displaying all operational buttons.

3.1 Basic Functions

- **ON-OFF (Power):** Turns the RCA DVD Home Theater System on or off.
- **DVD:** Selects the DVD input source.
- **TUNER:** Selects the Tuner input source.
- **COAXIAL:** Selects the Coaxial digital audio input.
- **AUX 1/2:** Selects auxiliary input 1 or 2.
- **Number Buttons (0-9):** Used for direct track selection, channel tuning, or menu navigation.
- **CLEAR:** Clears current input or selection.
- **INFO:** Displays information about the current track or system status.
- **TITLE:** Accesses the DVD title menu.
- **DISC MENU:** Accesses the DVD disc menu.

3.2 Navigation and Volume Controls

- **Directional Arrows (Up, Down, Left, Right):** Navigate through menus and selections.
- **OK:** Confirms a selection.
- **VOL + / VOL -:** Increases or decreases the system volume.
- **MUTE:** Silences the audio output. Press again to restore sound.
- **CH + / CH - (or TUNER + / TUNER -):** Changes channels or tuner presets.
- **SETUP:** Accesses the system setup menu.
- **RETURN:** Returns to the previous menu or screen.

3.3 Playback Controls

- **PLAY:** Starts or resumes playback.
- **PAUSE:** Pauses playback. Press again to resume.
- **STOP:** Stops playback.
- **REV (Rewind):** Rewinds playback.
- **FWD (Fast Forward):** Fast forwards playback.
- **PREV (Skip Back):** Skips to the beginning of the current track or previous track.
- **NEXT (Skip Forward):** Skips to the next track.
- **SLOW:** Activates slow-motion playback.

3.4 Advanced Functions

- **AUDIO:** Changes audio tracks or language during playback.
- **ANGLE:** Changes camera angles on compatible DVDs.
- **ZOOM:** Zooms in or out on the video display.
- **SUBTITLE:** Toggles or selects subtitle options.
- **MEMORY:** Stores or recalls settings/presets.
- **HDMI:** Selects the HDMI input source.
- **SUBWOOFER:** Adjusts subwoofer settings.
- **RANDOM:** Activates random playback mode.
- **REPEAT:** Repeats current track, chapter, or disc.
- **EQ LEVEL:** Adjusts equalizer settings.
- **DDVS:** Digital Direct Video System (specific function for some RCA models).

4. MAINTENANCE

4.1 Cleaning the Remote

To maintain the remote control's appearance and functionality:

- Wipe the remote with a soft, dry cloth.
- For stubborn dirt, lightly dampen the cloth with water or a mild, non-abrasive cleaner.
- Do not use harsh chemicals, solvents, or abrasive cleaning pads, as these can damage the remote's surface or internal components.

4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new AAA alkaline batteries. Do not mix old and new batteries, or

different types of batteries.

4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage and potential damage to the remote.

5. TROUBLESHOOTING

- **Remote is not responding:**

- Ensure the batteries are installed correctly with the correct polarity (+/-).
- Replace old batteries with new AAA alkaline batteries.
- Check for any obstructions between the remote control and the RCA DVD Home Theater System's infrared (IR) receiver.
- Ensure you are within the effective operating range (approximately 33 feet) and pointing the remote directly at the system.

- **Certain buttons are not working:**

- Verify that the button's function is supported by your specific RCA DVD Home Theater System model.
- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with button presses.

- **System is not turning on/off:**

- Confirm the RCA DVD Home Theater System is plugged into a working power outlet.
- Try using the power button directly on the system itself to rule out a system issue.

6. SPECIFICATIONS

Feature	Detail
Model Number	RCR 192 AA3 (WL-RCR192AA3 -S1-210315)
Brand	WINFLIKE
Connectivity Technology	Infrared (IR)
Compatible Devices	RCA DVD Home Theater Systems (RTD325W, RTD315W, RTD316W, etc.)
Special Features	Ergonomic, Lightweight, No Programming Required
Maximum Range	33 Feet (approx. 10 meters)
Battery Type	2 x AAA Alkaline Batteries (not included)
Item Weight	1 Ounce (approx. 28 grams)
Dimensions (L x W x H)	5"L x 1"W x 0.5"H (approx. 12.7cm x 2.54cm x 1.27cm)

7. WARRANTY AND SUPPORT

This WINFLIKE RCR 192 AA3 Replacement Remote Control is designed for reliable performance. While specific warranty details are not provided in this manual, WINFLIKE offers customer support for any issues you may encounter.

If you have any questions regarding the remote control's operation, compatibility, or require assistance, please contact WINFLIKE customer service. Refer to your purchase documentation or the seller's information for contact details.