

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Iris Ohyama](#) /

› [Iris Ohyama TV Cabinet SAB-100 Instruction Manual, Extendable, White Oak, L100 cm](#)

Iris Ohyama SAB-100

Iris Ohyama TV Cabinet SAB-100 Instruction Manual

Model: SAB-100 | Brand: Iris Ohyama

1. INTRODUCTION

Thank you for purchasing the Iris Ohyama SAB-100 Extendable TV Cabinet. This manual provides essential information for the safe assembly, proper use, and maintenance of your new TV cabinet. Please read these instructions carefully before beginning assembly and retain them for future reference.

2. SAFETY INFORMATION

WARNING: Assembly requires caution to avoid injury. Always follow the assembly steps precisely and use appropriate tools.

- Ensure all components are present and undamaged before starting assembly.
- Assemble the unit on a soft, clean surface to prevent scratches.
- Do not overtighten screws, as this may damage the material.
- Keep small parts away from children during assembly.
- Do not exceed the maximum weight capacities specified in this manual.
- Place the TV cabinet on a stable, level surface to prevent tipping.

3. PACKAGE CONTENTS

Verify that all the following items are included in your package:

- 1x Iris Ohyama TV Cabinet (components)
- 1x Assembly Instructions Manual
- 1x Bag of Accessories (screws, dowels, etc. - screwdriver not included)

4. SPECIFICATIONS

Model	SAB-100
-------	---------

Color	White Oak
Style	Extendable
External Dimensions (L x D x H)	Adjustable from 100 to 185 cm x 38.8 cm x 41.1 cm
Drawer Dimensions (L x D x H)	41 cm x 33.6 cm x 13.3 cm (holds up to 44 DVDs or 99 CDs)
Closed Niche Dimensions (L x D x H)	46.1 cm x 38.8 cm x 8 cm
Maximum TV Size	Up to 109 cm (43 inches)
Maximum Shelf Load	5 kg
Total Maximum Load	30 kg
Product Weight	23 kg
Material	Wood from sustainably managed forests

5. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly of this TV cabinet is designed to be straightforward, typically taking 10 to 20 minutes. You will need a manual or electric screwdriver (maximum 3.6V recommended to prevent damage).

- 1. Unpack and Inspect:** Carefully unpack all components and verify against the package contents list. Inspect each part for any damage.
- 2. Prepare Workspace:** Clear a spacious area and lay down a soft cloth or blanket to protect the furniture parts and your floor during assembly.
- 3. Follow Diagrammatic Instructions:** Refer to the detailed diagrammatic instructions provided in the included assembly manual. Each step will illustrate which parts to connect and how.
- 4. Assemble Base Units:** Begin by assembling the main base units, ensuring all connections are secure but not overtightened.
- 5. Attach Shelves and Drawers:** Install any internal shelves and drawer mechanisms as indicated in the manual.
- 6. Connect Extendable Sections:** If applicable, connect the extendable sections, ensuring they slide smoothly. The top half of the extendable section is designed to balance on the lower half, allowing for modular adjustment.
- 7. Final Check:** Once assembled, gently lift and move the cabinet to its desired location. Ensure all screws are snug and the cabinet is stable.



Image 1: The Iris Ohyama SAB-100 TV Cabinet in its extended configuration, featuring a white oak finish and a television placed on top.



Image 2: A top-down perspective of the Iris Ohyama SAB-100 TV Cabinet, highlighting its modular and extendable design in white oak.

6. OPERATING INSTRUCTIONS (USAGE)

The Iris Ohyama SAB-100 TV Cabinet is designed for versatility and functionality:

- **Extendable Design:** The cabinet is modular and extendable, allowing you to adjust its length from 100 cm to 185 cm to fit your space and needs. Simply slide the sections to achieve the desired width.
- **TV Placement:** It is perfectly suited for TV screens up to 109 cm (43 inches). Ensure the television's base fits securely on the top surface and does not exceed the maximum load capacity.
- **Storage:** Utilize the drawers for storing DVDs, CDs, remote controls, or other media accessories. The open niches are ideal for media players, game consoles, or decorative items.



Image 3: The TV cabinet integrated into a living room, showcasing its functionality with a television and various decorative items.



Image 4: The TV cabinet configured to fit neatly into a room corner, demonstrating its adaptable design.

7. MAINTENANCE

To ensure the longevity and appearance of your Iris Ohyama TV Cabinet, follow these simple maintenance

guidelines:

- **Cleaning:** Wipe the surfaces with a soft, damp cloth. Avoid using harsh chemicals, abrasive cleaners, or excessive moisture, as these can damage the finish.
- **Dusting:** Regularly dust the cabinet with a dry, soft cloth to prevent dust buildup.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or discoloration of the wood finish.
- **Check Connections:** Periodically check all screws and connections to ensure they remain tight. Retighten if necessary, but do not overtighten.

8. TROUBLESHOOTING

If you encounter any issues during assembly or use, consider the following:

- **Missing or Damaged Parts:** If any parts are missing or damaged upon arrival, please contact customer support immediately. Do not attempt to assemble the unit with incomplete or damaged components.
- **Assembly Difficulties:** Double-check the assembly instructions and diagrams. Ensure you are using the correct hardware for each step. Sometimes, parts may appear similar but have subtle differences.
- **Unstable Cabinet:** Ensure the cabinet is placed on a flat, level surface. Check that all screws are properly tightened.

9. WARRANTY AND SUPPORT

Your Iris Ohyama TV Cabinet is covered by a 30-day return policy from the date of receipt. For specific warranty details, exceptions, and conditions, please refer to the terms provided at the point of purchase or contact your retailer.

For customer support, assistance with assembly, or to report missing/damaged parts, please contact Iris Ohyama customer service through the retailer where the product was purchased.