

AAJK 150

AAJK 150-inch Outdoor Projector Screen Instruction Manual

Brand: AAJK | Model: 150

UPC: 653871336596

INTRODUCTION

Thank you for choosing the AAJK 150-inch Outdoor Projector Screen. This manual provides essential information for the safe and effective setup, operation, and maintenance of your new projector screen. Designed for both indoor and outdoor use, this washable, anti-crease screen offers a wide viewing angle and supports double-sided projection, making it versatile for various entertainment and presentation needs.

SAFETY INFORMATION

- Ensure the screen is securely mounted to prevent accidental falls, especially when used outdoors in windy conditions.
- Keep the screen away from open flames or extreme heat sources.
- Avoid using sharp objects on the screen surface to prevent damage.
- When cleaning, follow the recommended methods to maintain material integrity.

PACKAGE CONTENTS

Your AAJK 150-inch Outdoor Projector Screen package includes:

- 1 x AAJK 150-inch Projector Screen (16:9 aspect ratio, 132"W x 72"H viewing area)
- Mounting accessories (hooks, ropes, adhesive strips for wall mounting)

SETUP INSTRUCTIONS

The AAJK projector screen is designed for easy installation using various methods. Choose the method best suited for your environment.

1. Preparing the Screen

Unfold the screen carefully. The anti-crease polyester material is designed to minimize wrinkles. If minor creases are present, gentle stretching during installation or light ironing (as per maintenance instructions) can resolve them.


OURS



Natural, Clear and Bright Colors



Thicker than Other Screens.
Minimum Transparency
for front& rear projection

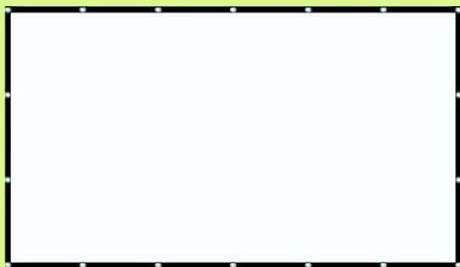

Our screen looks like a flat rectangle
No Crease after stretching.

PK


OTHERS



Blurry Image and Dim Color



Thin and Transparent

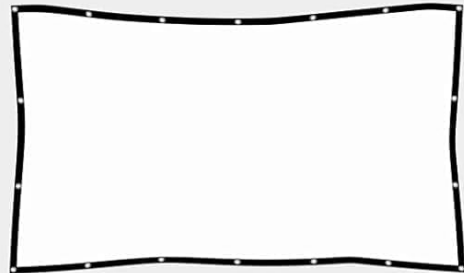

Many creases can be seen when
other screens are placed vertically

PK

PK

Image: A comparison graphic showing AAJK screen with natural, clear, bright colors, thicker material, and flat surface versus other screens with blurry, dim colors, thin material, and creases.

2. Mounting Options

The screen features reinforced grommets along its edges for secure attachment.

1. Using Hooks/Adhesive Strips (Indoor/Smooth Surfaces):

- Clean the wall surface thoroughly to ensure optimal adhesion.
- Peel the protective film from the adhesive strips on the hooks.
- Press the hooks firmly onto the desired mounting points on the wall, ensuring they align with the screen's grommets. Apply sufficient pressure for several seconds.
- Hang the screen by inserting the grommets onto the hooks. Adjust tension by repositioning hooks slightly if needed to achieve a flat surface.

2. Using Ropes (Outdoor/Temporary Setup):

- Thread the provided ropes through the grommets on the screen.

- b. Securely tie the ropes to stable anchor points such as trees, poles, or a frame.
- c. Adjust the tension of the ropes to stretch the screen taut and remove any slack.

3. Using Nails/Brackets (Permanent/Robust Installation):

- a. Mark the desired positions for nails or brackets on your mounting surface, ensuring they correspond to the screen's grommets.
- b. Install nails or brackets securely into the surface.
- c. Hang the screen by placing the grommets over the installed nails or hooks on the brackets.



Image: Illustration detailing how to set up the screen using hooks, ropes, and nails (not included), highlighting the grommets.

OPERATING INSTRUCTIONS

Your AAJK projector screen is ready for use once properly installed. It is designed to provide an optimal viewing experience with a wide range of projectors.

- **Projection:** The screen supports both front and rear projection, offering flexibility in projector placement.

- **Viewing Angle:** With a 160-degree wide viewing angle, the screen ensures clear images from various audience positions.
- **Optimal Viewing:** For the best experience, ensure your projector's focus and keystone correction are properly adjusted. Ensure the projection surface is clean and free from obstructions. Check the projector's distance from the screen for optimal image size and clarity.

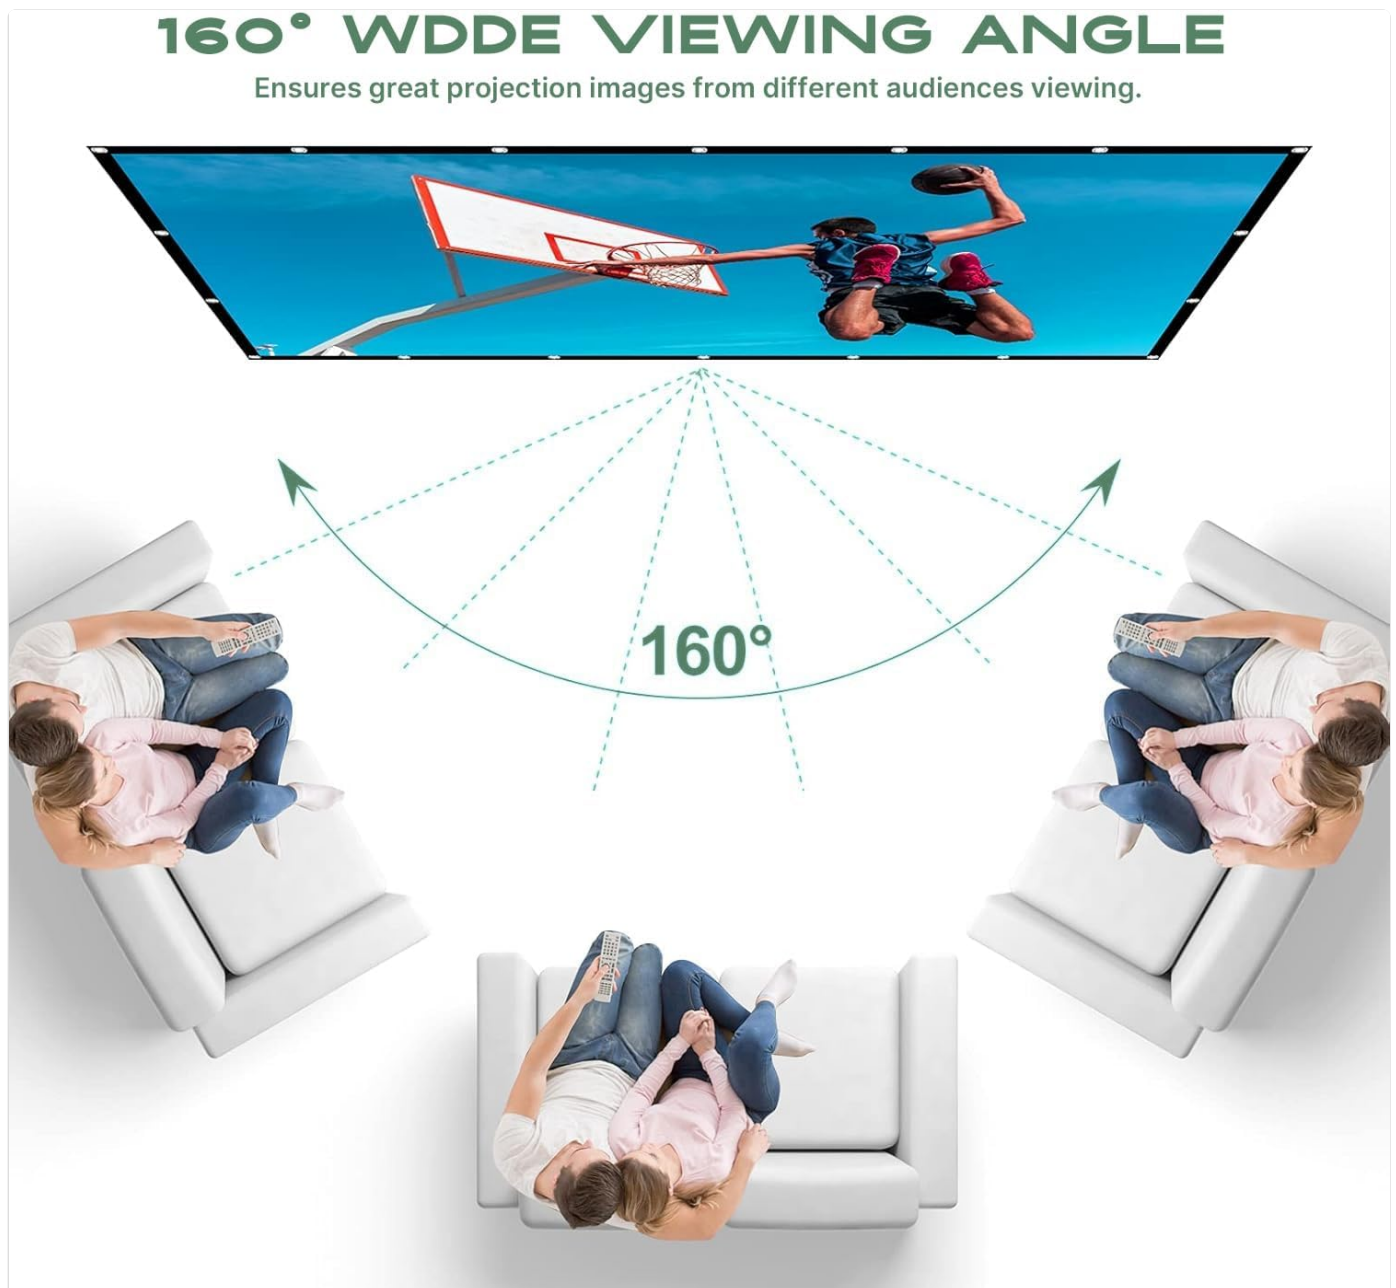 


Image: A top-down view showing a projector screen with a 160-degree wide viewing angle, indicating that viewers seated at various angles can enjoy the projection.

SUITABLE FOR MULTIPLE OCCASIONS



Outdoor



Party



Business Meetings



Education



Home Theater



Play Games

Image: A collage demonstrating the versatility of the projector screen for various applications, including outdoor movie nights, parties, business presentations, educational settings, home theater, and gaming.

MAINTENANCE & CARE

Proper care will extend the life and maintain the quality of your projector screen.

- **Cleaning:** The screen is made from washable polyester material. It can be washed by hand or in a washing machine using a gentle cycle with cold water and mild detergent. Do not use bleach.
- **Drying:** Air dry the screen completely. It supports ironing at a low temperature to remove any remaining wrinkles.
- **Storage:** When not in use, fold the screen neatly and store it in a dry, cool place to prevent damage. Its foldable design allows for compact storage in a backpack or suitcase.

HOW TO CLEAN AND DRY IT

Our projector screen is washable by hand or washing machine.



Supports ironing and air dry.



Image: A visual guide showing the screen being hand-washed, machine-washed, ironed, and air-dried, emphasizing its washable and anti-crease properties.

TROUBLESHOOTING

- **Wrinkles/Creases:**

The screen is designed to be anti-crease. If wrinkles appear, stretch the screen taut during installation. For stubborn creases, gently iron the screen on a low heat setting or use a steamer.

- **Unstable Mounting:**

Ensure all hooks, ropes, or nails are securely fastened to a stable surface. For outdoor use, consider additional anchoring to prevent movement in windy conditions.

- **Poor Image Quality:**

Verify that your projector's focus and keystone correction are properly adjusted. Ensure the projection surface is clean and free from obstructions. Check the projector's distance from the screen for optimal image size and clarity.

SPECIFICATIONS

Brand	AAJK
Model Number	150

Material	Polyester
Display Dimensions (Diagonal)	150 inches
Viewing Area (W x H)	132"W x 72"H
Aspect Ratio	16:9
Viewing Angle	160 Degrees
Operation Mode	Manual
Mounting Type	Wall Mount (Hooks, Brackets, Nails, Double-sided Tape)
Washable	Yes (Hand or Machine)
Anti-Crease	Yes
Double-Sided Projection	Yes
Item Weight	2.84 Pounds

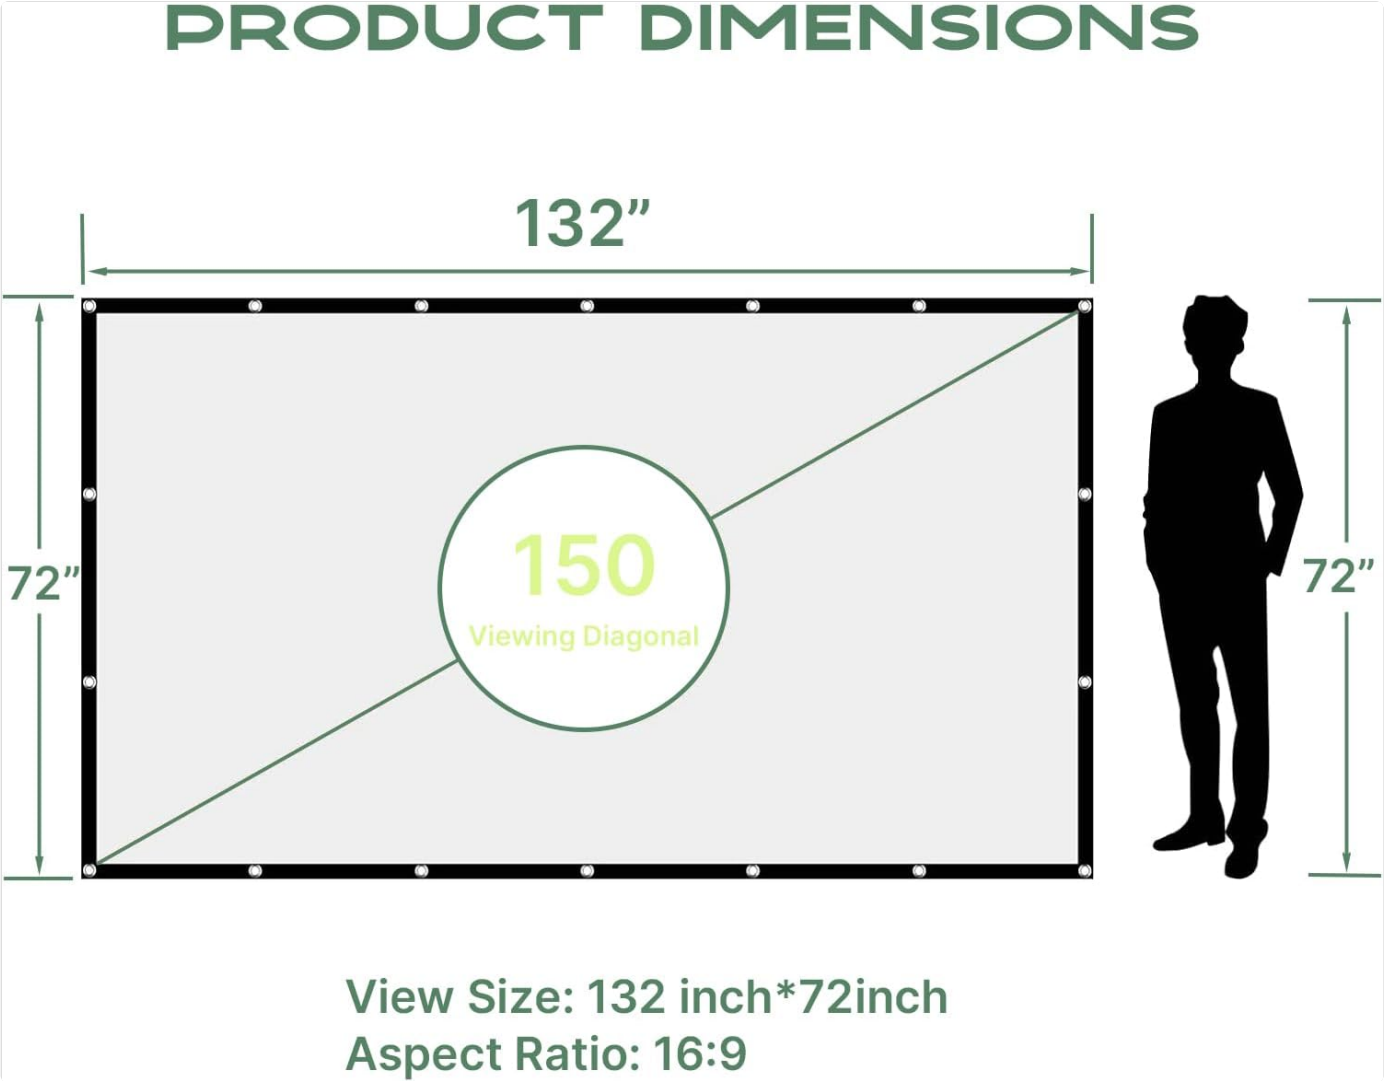 


Image: A graphic illustrating the physical dimensions of the 150-inch screen, including its 132-inch width and 72-inch height, and the 150-inch diagonal measurement.

WARRANTY & SUPPORT

The AAJK 150-inch Outdoor Projector Screen comes with a **30-day warranty**. For any issues or support inquiries, please contact

Ask a question about this manual

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question