

TEMI 9825

TEMI 4-in-1 Sand Water Table Instruction Manual

Brand: TEMI | Model: 9825

1. INTRODUCTION

The TEMI 4-in-1 Sand Water Table is designed to provide an engaging sensory play experience for children. This versatile activity table can be filled with water, sand, snow, or soil, offering multiple exploration opportunities. It encourages creative and active play, fostering parent-child interaction and enhancing developmental skills.

Key Features:

- **4-in-1 Play Options:** Designed with four separate parts for water, sand, snow, or soil.
- **32-Piece Accessory Set:** Includes a water windmill, tree water tower, excavator, boat, castle bucket, watering can, shovel, scoop, rake, sieve, crab and crocodile sand molds, and small stools.
- **Durable Construction:** Made from high-quality ABS material for lasting use.
- **Sensory Development:** Encourages tactile activities, hand-eye coordination, and imagination through water flow, sand molding, and interactive accessories.
- **Easy Portability:** Lightweight and easy to move for indoor or outdoor play.

2. COMPONENTS INCLUDED

The TEMI 4-in-1 Sand Water Table comes with the following parts and accessories:

- Main table base (4 sections)
- Table legs (4 pieces)
- Water windmill
- Tree water tower
- Excavator

- Boat
- Castle bucket
- Watering can
- Shovel
- Scoop
- Rake
- Sieve
- Crab sand mold
- Crocodile sand mold
- Small stools (quantity may vary)
- Non-leak drain plugs (4 pieces)



Figure 2.1: All included components of the TEMI 4-in-1 Sand Water Table.

3. SETUP INSTRUCTIONS

Follow these steps to assemble your TEMI 4-in-1 Sand Water Table:

1. **Unpack Components:** Carefully remove all parts from the packaging and verify that all components listed in Section 2 are present.
2. **Assemble Table Base:** Connect the four separate sections of the table base. Ensure they fit securely together to form the complete tabletop.
3. **Attach Legs:** Insert the four table legs into the designated slots on the underside of the assembled table base. Press firmly until they click into place, ensuring stability.
4. **Install Drain Plugs:** Place the non-leak drain plugs into the drain holes located at the bottom of each section of the table. Ensure they are fully sealed to prevent leakage during play.
5. **Position Accessories:** Place the water windmill, tree water tower, and other interactive accessories onto their designated spots on the table. Some accessories may have specific attachment points.
6. **Arrange Play Toys:** Distribute the 32 beach water toys around the table for easy access during play.



Figure 3.1: Fully assembled TEMI 4-in-1 Sand Water Table.

4. OPERATING INSTRUCTIONS

To begin playing with your TEMI 4-in-1 Sand Water Table:

1. **Fill with Medium:** Choose your desired play medium (water, sand, snow, or soil) and fill the appropriate sections of the table. Ensure drain plugs are securely in place if using water.
2. **Engage with Accessories:** Use the included accessories to interact with the chosen medium. For water play, pour water into the tree water tower to create a waterfall effect, or onto the water windmill to make it spin.
3. **Creative Play:** Encourage children to use the sand molds to create shapes, the excavator to dig, and the watering can to pour.
4. **Supervision:** Always supervise children during play, especially when water is involved.

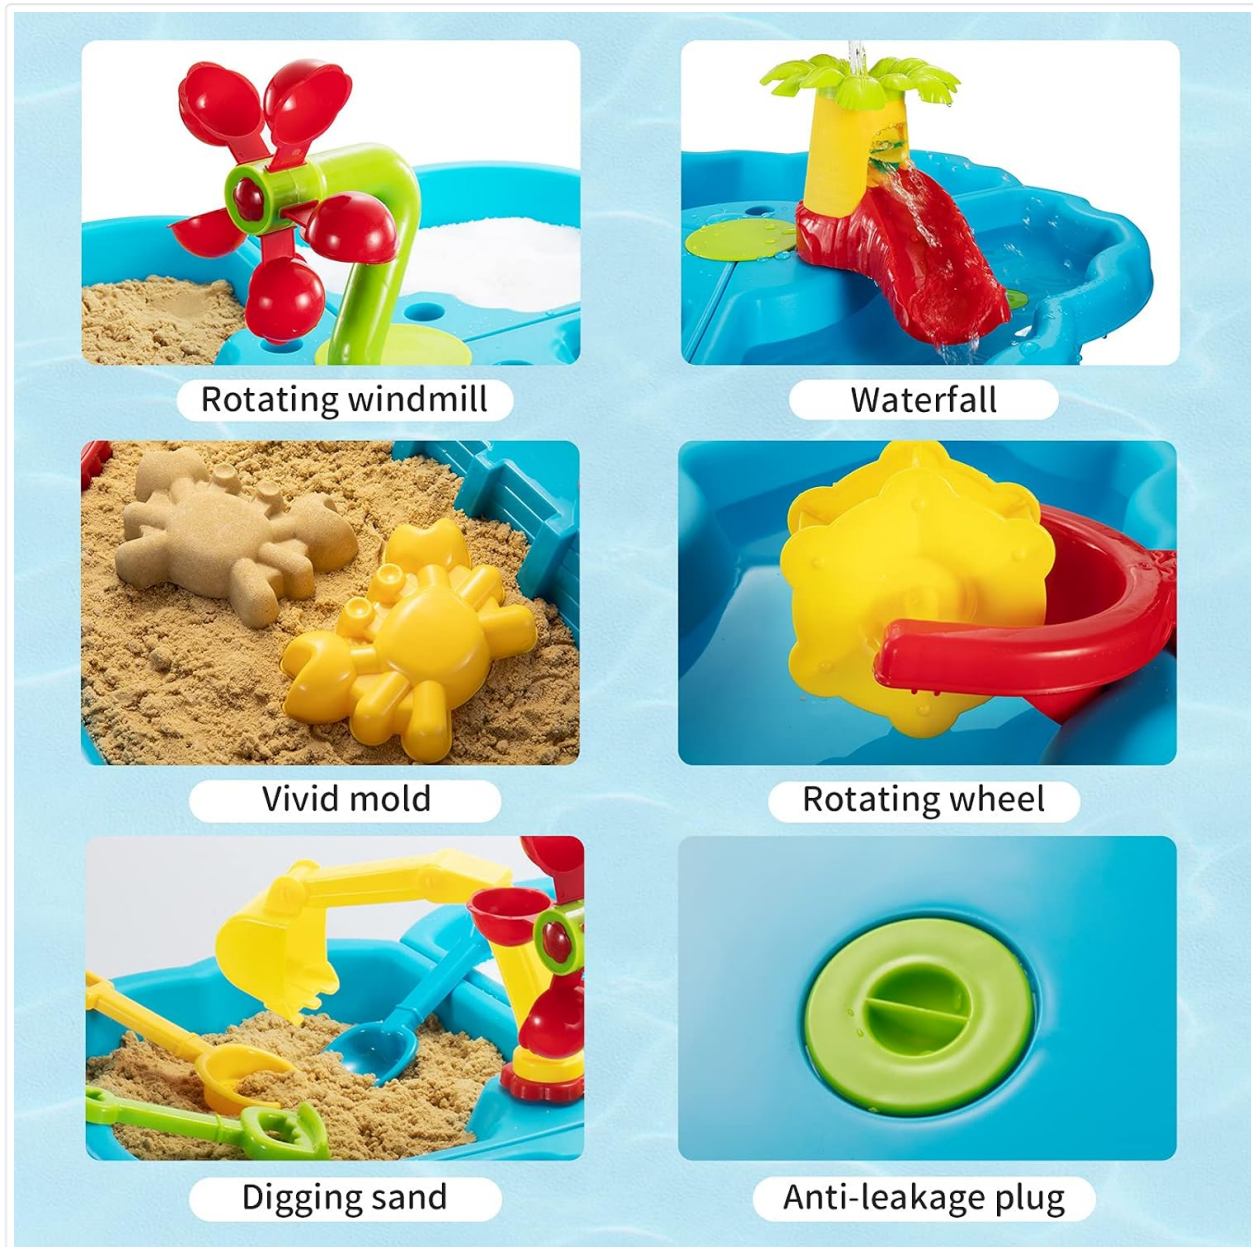


Figure 4.1: Detailed view of interactive features like the water windmill and drain plug.

5. MAINTENANCE AND CARE

Proper maintenance ensures the longevity and hygiene of your sand water table:

- **Draining Water:** After each use, remove the non-leak drain plugs to empty the water from the table.
- **Cleaning:** Clean the table and all accessories with mild soap and water. Rinse thoroughly and allow to air dry completely before storage.
- **Storage:** Store the table and accessories in a cool, dry place away from direct sunlight when not in use.

This helps prevent material degradation and keeps the toys clean.

- **Regular Inspection:** Periodically check all parts for any signs of wear or damage. Replace any broken or worn-out components to ensure safe play.

6. TROUBLESHOOTING

Here are some common issues and their solutions:

- **Water Leakage:** Ensure all drain plugs are securely inserted and fully sealed. Check for any cracks or damage in the table sections.
- **Unstable Table:** Verify that all four legs are correctly and firmly attached to the table base. Ensure the table is placed on a flat, even surface.
- **Accessories Not Functioning:** If water-activated accessories (like the windmill or water tower) are not working, check for blockages or ensure sufficient water flow is being applied.

7. PRODUCT SPECIFICATIONS

Feature	Detail
Brand	TEMI
Model Number	9825
Package Dimensions	17.4 x 13.5 x 7.6 inches
Item Weight	5.55 pounds
Recommended Age	36 months - 5 years
Material	Durable High-Quality ABS

8. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact TEMI customer service. Refer to your purchase documentation for specific contact details or visit the official TEMI website.