

BONSEN L3402

BONSEN A3 Laminator L3402 User Manual

Model: L3402

1. INTRODUCTION

Thank you for choosing the BONSEN A3 Laminator L3402. This device is designed to protect and preserve your important documents, photos, and creative projects with ease and efficiency. Featuring advanced anti-jam technology, precise NTC temperature control, and rapid lamination capabilities, it is ideal for use in homes, schools, and offices. Please read this manual thoroughly before operation to ensure safe and optimal performance.

2. SAFETY INSTRUCTIONS

To prevent injury or damage to the laminator, always follow these safety guidelines:

- Do not insert empty laminating pouches into the machine.
- Always insert the sealed edge of the laminating pouch first.
- Ensure the pouch is aligned parallel to the laminator's entry slot.
- Center the item within the pouch, leaving a border on each side.
- Do not join multiple pouches together.
- Do not cut laminating pouches before lamination.
- Avoid using deformed or damaged pouches.
- Laminate only one pouch at a time.
- Keep hands and loose clothing away from the entry and exit slots during operation.
- Unplug the laminator when not in use or before cleaning.

Ampio utilizzo in multiscena



Figure 1: Important Notes for Safe and Effective Lamination

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- 1 x BONSEN A3 Laminator L3402
- 50 x A4 Laminating Pouches
- 25 x A5 Laminating Pouches
- 25 x A6 Laminating Pouches
- 1 x Paper Cutter
- 1 x Corner Rounder

4. PRODUCT OVERVIEW

The BONSEN A3 Laminator L3402 is designed for user-friendly operation. Key features include a wide entry for various document sizes, precise temperature control, and an anti-jam release function.

MAXIMAL 33 CM BREITER EINTRAG

Geeignet für A3/A4/A5



Figure 2: Laminator with 33 cm Wide Entry



Figure 3: Product Dimensions and Weight

5. SETUP

Follow these steps to set up your laminator:

1. Place the laminator on a stable, flat surface.
2. Ensure there is enough space around the machine for proper ventilation and for documents to pass through freely.
3. Plug the power cord into a suitable electrical outlet.
4. Turn on the laminator using the ON/OFF switch.

Your browser does not support the video tag.

Video 1: Unboxing and Initial Setup of the Laminator

6. OPERATING INSTRUCTIONS

6.1. Power On and Preheating

1. Turn on the laminator using the ON/OFF switch.
2. Wait approximately 3 minutes for the machine to preheat. The indicator light will change from red to green when ready.

ZWEI-WALZEN-LAMINATOR

Effizient und reibungslos



Figure 4: Quick Warm-up and Lamination Speed

6.2. Selecting Lamination Mode

The laminator offers flexible heating levels for various materials:

- **80mic:** For standard documents.
- **125mic:** For thicker documents or enhanced durability.
- **Photo:** Optimized setting for laminating photographs.
- **Cold:** For heat-sensitive documents using self-adhesive cold laminating pouches.

EINSTELLBARE DICKE

Dicke des Beutels: 80mic/ 125mic/Photo



Figure 5: Adjustable Pouch Thickness Settings

6.3. Laminating a Document

Once the laminator is preheated and the correct mode is selected:

1. Place your document or photo inside a laminating pouch of the appropriate size.
2. Insert the sealed edge of the pouch into the laminator's entry slot, ensuring it is straight and centered.
3. The machine will automatically feed the pouch through. Do not pull or push the pouch.
4. Once the lamination process is complete, remove the laminated document from the exit slot.

Facile da usare



Figure 6: Easy-to-Use Lamination Steps

Your browser does not support the video tag.

Video 2: Demonstrating the Lamination Process and ABS Release

6.4. Anti-Jam (ABS) Release

In case of a paper jam, the laminator is equipped with an ABS release function:

1. If a pouch gets stuck, immediately press and hold the ABS lever located on the side of the machine.
2. Gently pull the jammed pouch out of the entry slot.
3. Release the ABS lever once the pouch is removed.



Figure 7: ABS Release Button for Jam Prevention

6.5. Using the Paper Cutter and Corner Rounder

The included accessories enhance your laminated documents:

- **Paper Cutter:** Use the paper cutter to trim excess laminating film or to cut documents to desired sizes after lamination. Place the laminated document under the cutting guide and slide the blade for a clean cut.
- **Corner Rounder:** For a professional finish and to prevent sharp edges, use the corner rounder on your laminated documents. Insert the corner of the document into the rounder and press down.

Your browser does not support the video tag.

Video 3: Lamination Process and Use of Accessories

7. MAINTENANCE

Proper maintenance ensures the longevity of your laminator:

- Always unplug the laminator before cleaning.
- Wipe the exterior of the machine with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Regularly check the entry and exit slots for any debris or adhesive residue. Clean gently if necessary.
- Store the laminator in a cool, dry place when not in use.

8. TROUBLESHOOTING

If you encounter issues with your laminator, refer to the following common problems and solutions:


Problem	Possible Cause	Solution
Pouch is jammed	Incorrect insertion, pouch too thick, or foreign object.	Press and hold the ABS release lever and gently pull out the pouch. Ensure correct insertion and appropriate pouch thickness.
Poor lamination quality (bubbles, wrinkles)	Incorrect temperature setting, old pouches, or uneven insertion.	Ensure the correct temperature mode (80mic, 125mic, Photo) is selected. Use fresh, high-quality pouches. Insert pouches straight and centered.
Laminator does not heat up	Not plugged in, power switch off, or internal fault.	Check power connection and ensure the ON/OFF switch is in the 'ON' position. If the issue persists, contact customer support.

ANTI-STAU-DESIGN

Sorgt für reibungsloses und problemloses Laminieren und schützt Ihre wertvollen Fotos und Dokumente

Bonsen

Druckplatte verhindert, dass das Papier in die Trommel rollt

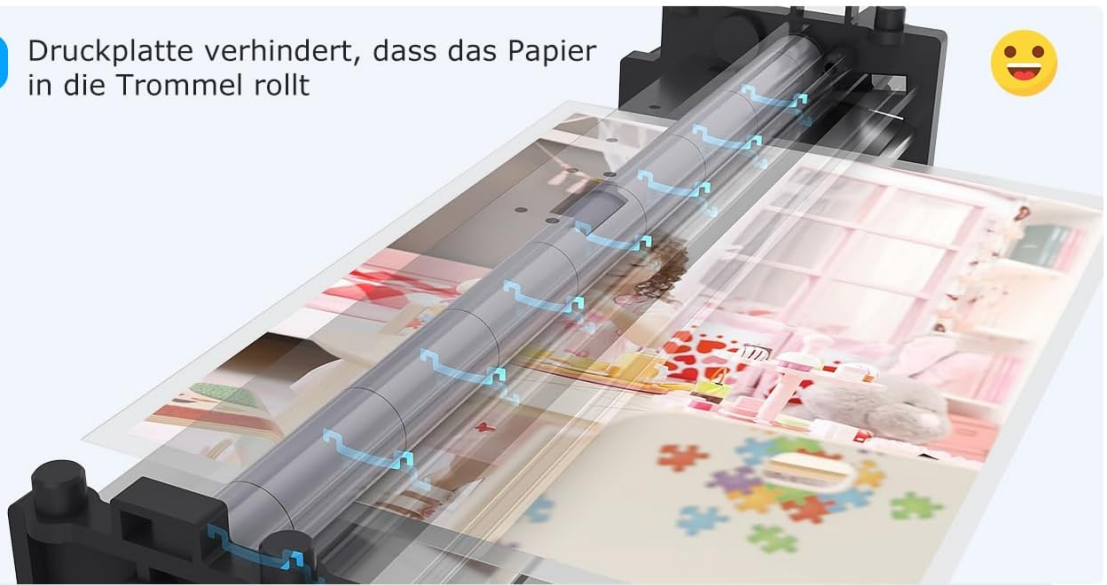

Andere

Papier kann sich leicht in den Walzen verfangen



Figure 8: Anti-Jam Technology for Smooth Lamination

NTC PRÄZISION TEMP

Genaue Kontrolle der Temperatur



Bonsen



Andere

Figure 9: NTC Precise Temperature Control

9. SPECIFICATIONS

Feature	Specification
Brand	BONSEN
Model	L3402
Color	Dark Grey
Max. Lamination Width	33 cm (13 inches)
Compatible Sheet Sizes	A3, A4, A5, A6
Preheating Time	Approx. 3 minutes
Lamination Speed	300 mm/min
Pouch Thickness Settings	80mic, 125mic, Photo, Cold

Feature	Specification
Anti-Jam Feature	ABS Release Button
Product Dimensions (L x W x H)	42.6 x 15.7 x 8.1 cm
Item Weight	2.4 kg

10. WARRANTY AND SUPPORT

The BONSEN A3 Laminator L3402 comes with a 2-year protection period, ensuring peace of mind regarding product quality and performance. For any technical assistance, troubleshooting beyond this manual, or warranty claims, please contact BONSEN customer support through your retailer or the official BONSEN website. Please have your product model and purchase information ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question