

[Manuals.plus](#) /

> [NEBO](#) /

> NEBO Rambler 20K Power Bank Instruction Manual - Model NR20000PBL

## NEBO NR20000PBL

# NEBO Rambler 20K Power Bank Instruction Manual

Model: NR20000PBL

## 1. INTRODUCTION

The NEBO Rambler 20K Power Bank is a portable charging device designed to provide power to your electronic devices on the go. It features a high-capacity battery, multiple charging ports, and an integrated floodlight. This manual provides essential information for the safe and efficient use of your Rambler 20K Power Bank.



Image 1.1: The NEBO Rambler 20K Power Bank, showcasing its design and branding.

## 2. SAFETY INFORMATION

Please read all safety instructions before using this product. Failure to follow these instructions may result in electric shock, fire, or injury.

- Do not disassemble, open, or attempt to repair the device.
- Keep the device away from water, moisture, and extreme temperatures.
- Avoid dropping, impacting, or subjecting the device to strong vibrations.
- Do not expose the device to fire or direct sunlight for prolonged periods.
- Use only approved charging cables and adapters.
- Dispose of the device according to local regulations for electronic waste.
- This device is TSA and FAA approved for carry-on luggage; however, always verify current airline regulations before travel.

### 3. PACKAGE CONTENTS

---

Verify that all items are present in your package:

- NEBO Rambler 20K Power Bank (Model NR20000PBL)
- 1x 24-inch USB-C to USB-C Cable

### 4. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Rambler 20K Power Bank:

- **Digital Display:** Shows the current battery percentage.
- **USB-C Port:** Bi-directional port for charging the power bank and charging external devices.
- **USB-A Port:** For charging external devices.
- **Power Button:** Activates the digital display and controls the floodlight.
- **COB Floodlight:** Integrated light source for illumination.
- **Kickstands:** Dual integrated kickstands for cable management and adjusting floodlight angle.

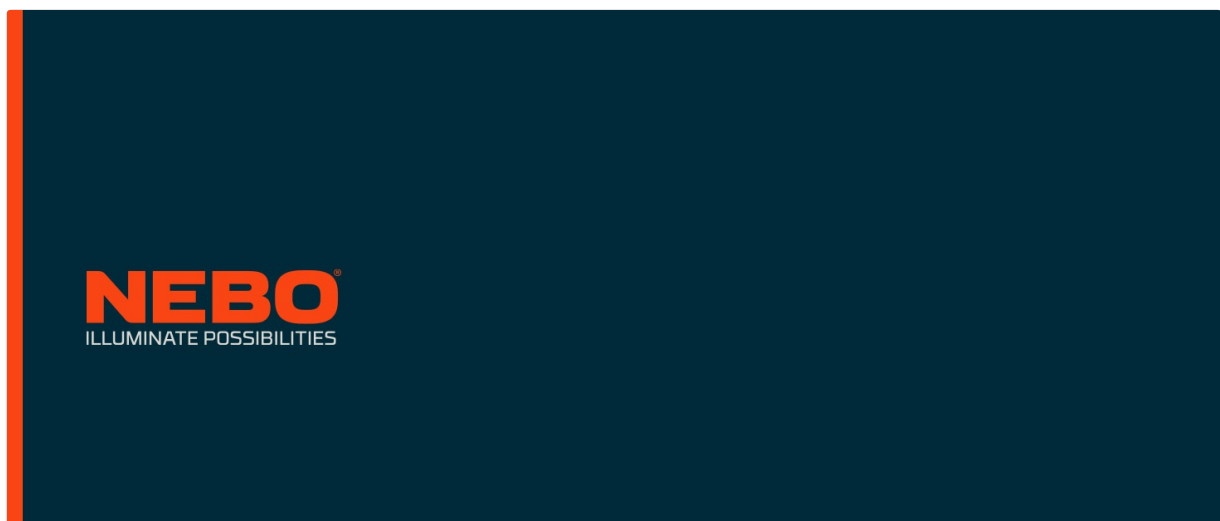


Image 4.1: The NEBO Rambler 20K Power Bank highlighting its illuminated floodlight and digital display.

### 5. SETUP

---

## 5.1 Initial Charging of the Power Bank

1. Connect the included USB-C to USB-C cable to the USB-C port on the Rambler 20K Power Bank.
2. Connect the other end of the cable to a compatible USB wall adapter (not included) or a powered USB-C port.
3. The digital display will show the charging progress. Allow the power bank to fully charge to 100% before first use. A full charge takes approximately 5.5 hours.



Image 5.1: The digital display indicating a full 100% charge.

## 6. OPERATING INSTRUCTIONS

---

### 6.1 Charging External Devices

The Rambler 20K Power Bank can charge up to two devices simultaneously using its USB-A and bi-directional USB-C ports. It supports 18W Quick Charge and 20W Power Delivery for efficient charging.

1. Connect your device's charging cable to either the USB-A or USB-C port on the power bank.
2. Connect the other end of the cable to your electronic device.
3. The power bank will automatically begin charging your device. The digital display will show the remaining battery percentage of the power bank.
4. **Pass-Through Charging:** The power bank supports pass-through charging, allowing it to be recharged while simultaneously charging connected devices.

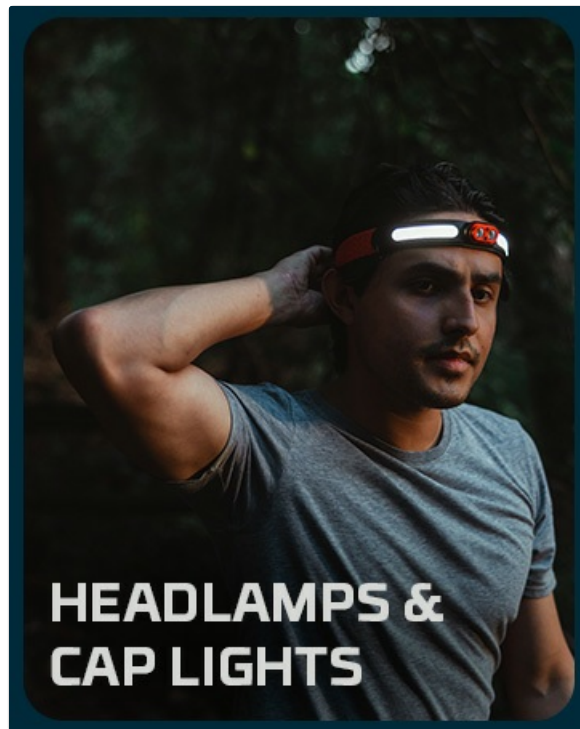


Image 6.1: Charging an external device using the NEBO Rambler 20K Power Bank.

## 6.2 Using the COB Floodlight

The integrated COB floodlight provides 200 lumens of illumination.

1. Press the Power Button once to activate the digital display.
2. Press and hold the Power Button to turn the floodlight ON/OFF.
3. The dual kickstands can be used to angle the floodlight up or down for directional lighting.



## **INTEGRATED FLOODLIGHT**

The 200 lumen floodlight offers vibrant illumination. Angle it up or down with the dual kickstands.

Image 6.2: The NEBO Rambler 20K Power Bank demonstrating its adjustable floodlight feature.

### **6.3 Cable Management**

The dual kickstands also serve as a cable management solution.

- Wrap your charging cables around the extended kickstands to keep them organized and prevent tangling.



## CABLE MANAGEMENT

Use the dual kickstands to wrap cables for a tidy cable management solution.

Image 6.3: Cable management using the integrated kickstands.

## 7. MAINTENANCE

- **Cleaning:** Wipe the device with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the power bank in a cool, dry place away from direct sunlight and extreme temperatures. For long-term storage, charge the power bank to approximately 50-70% every 3-6 months to maintain battery health.
- **Battery Care:** Avoid fully discharging the battery frequently, as this can reduce its lifespan.

## 8. TROUBLESHOOTING

Issue	Possible Cause	Solution
Power bank not charging	Faulty cable or adapter; USB-C port issue	Try a different USB-C cable and wall adapter. Ensure connections are secure.

Issue	Possible Cause	Solution
Device not charging from power bank	Power bank battery low; faulty cable; device incompatibility	Check power bank battery level. Try a different charging cable. Ensure your device is compatible with USB charging.
Floodlight not working	Power bank battery low; incorrect operation	Charge the power bank. Ensure you are pressing and holding the power button to activate the floodlight.
Slow charging	Cable quality; device input limits; multiple devices charging	Use high-quality cables. Some devices may have slower charging limits. Charging multiple devices simultaneously may reduce individual charging speeds.

If issues persist, please contact customer support.

## 9. SPECIFICATIONS

Feature	Detail
Model Number	NR20000PBL
Battery Capacity	20,000 mAh (74Wh)
Battery Type	Lithium Ion
Input	USB-C
Output	1x USB-C (bi-directional), 1x USB-A
Charging Technology	18W Quick Charge (QC), 20W Power Delivery (PD)
Recharge Time	Approximately 5.5 hours (full charge)
Integrated Light	COB Floodlight (200 Lumens)
Dimensions	2.95 x 5.7 x 1.14 inches
Weight	0.98 lbs (15.68 ounces)
Color	Storm Gray
Included Accessories	1x 24-inch USB-C to USB-C Cable

## 10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official NEBO website. Keep your proof of purchase for warranty claims.

