

Philips Senseo Original Plus CSA210/90 Coffee Machine User Manual

Model: CSA210/90

1. INTRODUCTION

Welcome to the Philips Senseo Original Plus CSA210/90 coffee machine user manual. This guide provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your new coffee machine. Please read these instructions carefully before first use and retain them for future reference.

Key Features:

- **Coffee intensity selection:** Choose between strong, mild, long, or short coffee.
- **Coffee Boost Technology:** Senseo Coffee Boost technology with 45 aroma nozzles extracts the best from the coffee pad for a fuller, more intense taste.
- **Crema Plus:** The patented Senseo Crema system ensures an even better fine-pored crema with every coffee.
- **Sustainable Design:** Constructed from 28% recycled plastic for parts not in contact with food.
- **Versatile Brewing:** Prepare one or two cups of Senseo coffee in under a minute.

2. IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury to persons.

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.

- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to 'off', then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. SETUP AND FIRST USE

Unpacking

Carefully remove all packaging materials from the coffee machine. Ensure all components are present: the machine, drip tray, pod holders (for 1 and 2 cups), and water reservoir.

Rinsing the Machine

Before first use, rinse the machine to ensure optimal coffee taste and hygiene.

1. Fill the water reservoir with fresh cold water up to the MAX indication.
2. Place the 1-cup pod holder without a coffee pad in the machine. Close the lid and lock the lever.
3. Place a bowl under the coffee spout to collect the water.
4. Press the 2-cup button. The machine will start the rinsing cycle.
5. Repeat this process at least twice until the water reservoir is empty.

Filling the Water Reservoir

The water reservoir is located on the side of the machine. Remove it by pulling it upwards. Fill it with fresh, cold tap water up to the MAX level indicated. Do not exceed the MAX level. Place the reservoir back onto the machine, ensuring it is seated correctly.



Image: The Philips Senseo Original Plus coffee machine, showing the water reservoir on the side, ready for filling.

4. OPERATING YOUR COFFEE MACHINE

Preparing Your Coffee

1. Ensure the water reservoir is filled with fresh water.
2. Open the lid and place one or two coffee pads into the appropriate pod holder. Use the 1-cup pod holder for one pad and the 2-cup pod holder for two pads.
3. Close the lid and firmly push the lever down until it locks into place.
4. Place one or two cups on the drip tray under the coffee spout.
5. Press the desired coffee button (1-cup or 2-cup). The machine will heat up and then start brewing.
6. Once brewing is complete, the machine will automatically switch off.



Image: A user's hand interacting with the control panel, pressing a button to initiate coffee brewing.

Intensity Selection

The Senseo Original Plus allows you to choose your preferred coffee intensity. Use the dedicated intensity selector button to switch between a regular long coffee and a shorter, more intense coffee. The selected intensity will be indicated by a light.

Brewing One or Two Cups

Your machine is designed to brew either one or two cups of coffee simultaneously. Use the corresponding 1-cup or 2-cup pod holder and press the respective button on the control panel.



Image: The Philips Senseo Original Plus coffee machine in operation, filling two cups with freshly brewed coffee.

5. MAINTENANCE AND CLEANING

Daily Cleaning

- After each use, remove and empty the drip tray and coffee spout. Rinse them under hot water.
- Wipe the exterior of the machine with a damp cloth. Do not use abrasive cleaning agents.
- Remove and rinse the used coffee pad(s) from the pod holder.

Descaling

Regular descaling is crucial for maintaining your coffee machine's performance and extending its lifespan. The descaling frequency depends on your water hardness and usage. A descaling indicator light may illuminate when descaling is required.

1. Use a descaling agent specifically designed for coffee machines. Follow the instructions on the descaling agent packaging.
2. Never use vinegar as a descaling agent, as it can damage your machine.

3. Typically, the descaling process involves filling the water reservoir with a descaling solution and running several brewing cycles without coffee pads.
4. After descaling, rinse the machine thoroughly by running several cycles with fresh water to remove any descaling residue.

6. TROUBLESHOOTING GUIDE

If you encounter issues with your coffee machine, consult the table below for common problems and solutions.

Problem	Possible Cause	Solution
No coffee is dispensed.	Water reservoir is empty; machine is not descaled; pod holder is clogged.	Fill water reservoir; descale the machine; clean the pod holder.
Coffee is too weak.	Incorrect coffee pad; intensity setting is too mild; machine needs descaling.	Use appropriate Senseo coffee pads; select a stronger intensity; descale the machine.
Machine leaks water.	Water reservoir not properly seated; drip tray is full; internal component issue.	Ensure water reservoir is correctly placed; empty drip tray; contact customer support if issue persists.
Machine does not turn on.	Not plugged in; power outage; faulty power cord.	Check power connection; verify power supply; contact customer support.

7. TECHNICAL SPECIFICATIONS

Specification	Detail
Brand	PHILIPS
Model Number	CSA210/90
Color	Red
Product Dimensions (L x W x H)	21.01 x 32 x 32.99 cm
Voltage	230.0 V
Material	Plastic
Automatic Shut-off Function	Yes
Features	Timer
Item Weight	1.72 Kilograms
Country of Origin	Romania

8. WARRANTY AND SUPPORT

Your Philips Senseo Original Plus CSA210/90 coffee machine comes with a standard manufacturer's warranty. For detailed information regarding warranty terms, conditions, and duration, please refer to the warranty card included with your product or visit the official Philips website.

For technical support, spare parts, or service, please contact Philips Customer Support. Contact details can typically be found on the Philips website or in the product packaging.

© 2024 PHILIPS. All rights reserved.