

[manuals.plus](#) /

› [ProfiCook](#) /

› [ProfiCook PC-GG 1219 Gas Barbecue User Manual](#)

ProfiCook PC-GG 1219

ProfiCook PC-GG 1219 Gas Barbecue User Manual

Model: PC-GG 1219 | Manufacturer: ProfiCook

INTRODUCTION

Thank you for choosing the ProfiCook PC-GG 1219 Gas Barbecue. This manual provides essential information for the safe and efficient assembly, operation, maintenance, and troubleshooting of your new gas grill. Please read this manual thoroughly before first use and keep it for future reference.



Figure 1: ProfiCook PC-GG 1219 Gas Barbecue Overview.

SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this gas barbecue to reduce the risk of fire, explosion, or injury.

- Read all instructions before operating the appliance.
- Use outdoors only. Do not operate indoors or in an enclosed area.
- Keep the barbecue area clear and free from combustible materials, gasoline, and other flammable vapors and liquids.
- Do not obstruct the flow of combustion and ventilation air.
- Keep children and pets away from the barbecue at all times.
- Do not leave the barbecue unattended while in use.
- Always ensure proper gas connection and leak testing before each use.
- Wear protective gloves when handling hot components.

SETUP AND ASSEMBLY

The ProfiCook PC-GG 1219 Gas Barbecue requires assembly. Follow these steps carefully.

Unpacking and Inspection

1. Carefully remove all components from the packaging.
2. Check the packing list to ensure all parts are present.
3. Inspect all parts for any damage. Do not assemble if parts are damaged. Contact customer support.

Assembly Steps

Assembly typically involves attaching the main body to the frame, installing side shelves, burners, grill grates, and connecting the gas hose.



Figure 2: Key features for assembly and use, including grill surface and burner details.

- Assemble the base frame and attach the wheels (2 of which are lockable for stability).
- Mount the main barbecue body onto the frame.
- Install the three stainless steel burners and the additional side hob burner.

- Place the two cast iron grill grates (66 x 38 cm total cooking surface) and the enameled warming rack.
- Attach the side shelves. The left side shelf is foldable for space-saving storage.
- Ensure the integrated bottle opener is securely in place.
- The large cabinet with two doors and magnetic closure is designed to accommodate a 5 kg gas bottle.

Gas Connection

This barbecue comes with a gas pressure reducer and gas hose suitable for Germany and Austria.

- Connect the gas hose to the barbecue's gas inlet and the gas pressure reducer to the gas bottle.
- Ensure all connections are tight.
- Perform a leak test using soapy water on all connections. Bubbles indicate a leak. Do not use the barbecue if a leak is detected.



Figure 3: Working height, bottle opener, and gas connection components.

OPERATING INSTRUCTIONS

Pre-heating

- Open the barbecue lid.
- Turn on the gas supply at the bottle.
- Push and turn a control knob to the 'HIGH' position. Press the igniter button (if applicable) or use a long lighter to ignite the burner.
- Once ignited, repeat for other burners as needed.
- Close the lid and allow the barbecue to pre-heat for 10-15 minutes. The integrated temperature indicator on the double-walled stainless steel hood will show the internal temperature.



Figure 4: Temperature display and soft-touch control knobs for precise temperature adjustment.

Grilling

- Place food on the grill grates.

- Adjust the temperature using the soft-touch control knobs for continuous temperature regulation. The three heating zones allow for individual temperature control.
- Use the additional side hob for preparing sauces, soups, or other dishes.



Figure 5: Side burner functionality and integrated storage.



Figure 6: Detailed view of the side burner in operation.

Shutting Down

- Turn all control knobs to the 'OFF' position.
- Turn off the gas supply at the gas bottle.
- Allow the barbecue to cool completely before cleaning or moving.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will extend the life of your ProfiCook PC-GG 1219 Gas Barbecue.

After Each Use

- Once the grill has cooled, brush off any food residue from the grill grates.
- The large, removable grease drip tray facilitates easy cleaning. Remove and clean it regularly.

- Wipe down the stainless steel surfaces and powder-coated steel cabinet with a damp cloth.

Periodic Maintenance

- Check gas hose and connections for wear or damage. Replace if necessary.
- Clean burner ports to ensure even flame distribution.
- Inspect the igniter for proper function.

TROUBLESHOOTING

Refer to this section for common issues and their solutions.

| Problem | Possible Cause | Solution |
|---------------------|---|--|
| Burner not igniting | No gas flow; clogged burner port; faulty igniter. | Check gas bottle and connections; clean burner; check igniter electrode. |
| Uneven flame | Clogged burner ports. | Clean burner ports. |
| Low heat output | Low gas pressure; gas bottle nearly empty. | Check gas bottle level; ensure regulator is functioning correctly. |

If problems persist, contact ProfiCook customer support.

SPECIFICATIONS

| Feature | Detail |
|------------------------|---|
| Model Number | PC-GG 1219 (501219) |
| Brand | ProfiCook |
| Dimensions (L x W x H) | 130 x 53 x 110 cm |
| Weight | 5 kg (Note: This weight seems unusually low for a gas barbecue of this size and material. Please verify with product packaging if discrepancies arise.) |
| Cooking Surface | 66 x 38 cm (composed of 2 cast iron grill grates) |
| Burners | 3 Stainless Steel Burners + 1 Additional Side Hob |
| Material | Stainless Steel (hood, control panel, burners), Powder-coated Steel (cabinet, housing, side shelves) |
| Working Height | 85 cm |
| Wheels | 4 (2 lockable) |
| Included Components | Gas pressure reducer and gas hose (for Germany and Austria) |

| Feature | Detail |
|--------------------|-----------------------------|
| Gas Bottle Storage | Cabinet for 5 kg gas bottle |



Figure 7: Product dimensions.

WARRANTY AND SUPPORT

For warranty information, technical support, or spare parts inquiries, please contact ProfiCook customer service.

- Refer to your purchase documentation for specific warranty terms and conditions.
- For assistance, visit the official ProfiCook website or contact their customer support line.
- Spare parts availability information is not provided in the product details.

Related Documents - PC-GG 1219

| | |
|--|---|
| | <p>ProfiCook PC-KAV 1281 Coffee Machine: Cleaning and Descaling Guide</p> <p>Comprehensive guide for monthly cleaning and descaling of the ProfiCook PC-KAV 1281 automatic coffee machine, ensuring optimal performance and longevity.</p> |
| | <p>Bedienungsanleitung ProfiCook PC-FR 1286 H Heißluft-Fritteuse</p> <p>Umfassende Bedienungsanleitung für die ProfiCook PC-FR 1286 H Heißluft-Fritteuse. Enthält Informationen zur sicheren Bedienung, Einrichtung, Fehlerbehebung und technischen Daten.</p> |
| | <p>ProfiCook Glass Water Kettle PC-WKS 1190 G Instruction Manual</p> <p>This manual provides instructions for the ProfiCook Glass Water Kettle PC-WKS 1190 G, covering operation, cleaning, descaling, troubleshooting, and technical specifications. It includes safety warnings and usage guidelines.</p> |
| | <p>ProfiCook PC-FR 1287 H Double Hot Air Fryer Instruction Manual</p> <p>Comprehensive instruction manual for the ProfiCook PC-FR 1287 H Double Hot Air Fryer, covering operation, safety, troubleshooting, and technical specifications in multiple languages.</p> |
| | <p>ProfiCook PC-TKS 1056 Tea/Coffee Station User Manual</p> <p>Comprehensive user manual for the ProfiCook PC-TKS 1056 Tea/Coffee Station, covering operation, safety, cleaning, and troubleshooting. Includes detailed instructions for both the kettle and the tea/coffee maker functions.</p> |
| | <p>ProfiCook PC-BQS 1303 Barbecue Grill - EU Declaration of Conformity</p> <p>EU Declaration of Conformity for the ProfiCook PC-BQS 1303 Barbecue Grill, confirming compliance with relevant EU directives and harmonized standards.</p> |