

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [ANJANK](#) /

› [ANJANK AC190-DE Digital Radio Alarm Clock with Wireless Charging User Manual](#)

ANJANK AC190-DE

ANJANK AC190-DE Digital Radio Alarm Clock with Wireless Charging User Manual

PRODUCT OVERVIEW

The ANJANK AC190-DE is a versatile digital radio alarm clock designed to enhance your daily routine. It features a 10W fast wireless charger, a convenient USB charging port, and a clear, dimmable LED display. Enjoy your favorite stations with its integrated FM radio, complete with a programmable sleep timer. For private listening, a 3.5mm audio jack is included. The device operates on mains power and includes a battery backup system to retain settings during power interruptions.



The ANJANK AC190-DE Digital Radio Alarm Clock, showcasing its wooden finish and clear LED display.



Drei in einem



Wecker



Fm-Radio



Kabelloses
Ladegerät


This infographic highlights the three primary functions of the device: an alarm clock, an FM radio, and a wireless charger.

SETUP INSTRUCTIONS

- Power Connection:** Connect the provided DC 9V power adapter to the "DC9V" port on the back of the unit. Plug the adapter into a standard wall outlet.
- Battery Backup:** For retaining time and alarm settings during power outages, insert two AAA batteries (not included) into the battery compartment located on the bottom of the unit.
- FM Antenna:** For optimal FM radio reception, fully extend the integrated FM antenna.

OPERATING THE DEVICE

Controls Overview

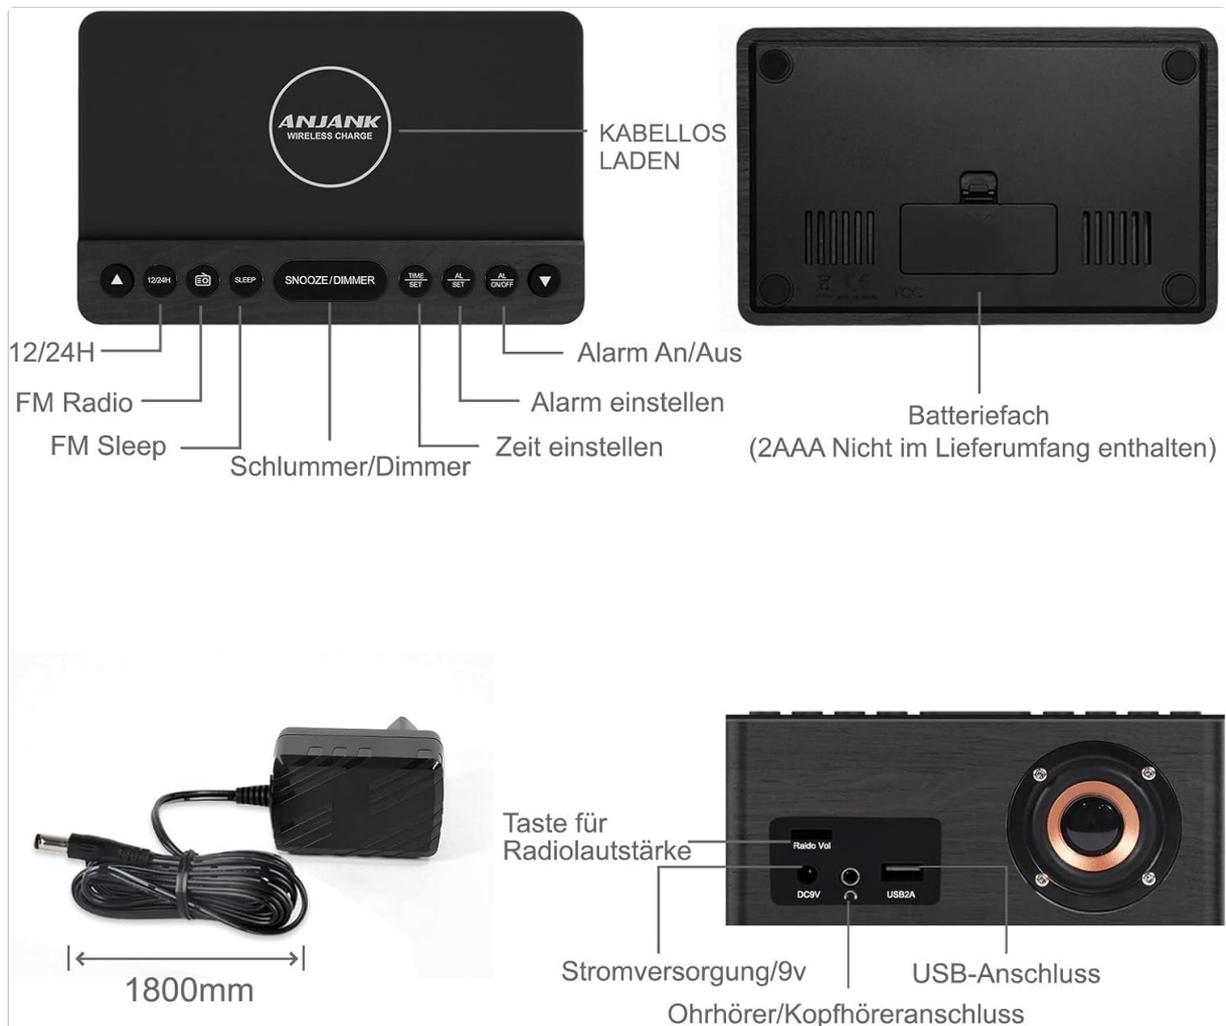

This diagram illustrates the location and function of the control buttons on the top panel and the ports on the rear of the ANJANK AC190-DE Digital Radio Alarm Clock. Key controls include 12/24H, FM Radio, Sleep, Snooze/Dimmer, Alarm On/Off, Time Set, and Alarm Set. Rear ports include DC9V power input, 3.5mm headphone jack, and USB 2A charging port.

Setting the Time

1. Press and hold the **TIME SET** button. The hour digits will begin to flash.
2. Use the **UP** or **DOWN** buttons to adjust the hour.
3. Press **TIME SET** again to confirm the hour and proceed to minute adjustment.
4. Use the **UP** or **DOWN** buttons to adjust the minutes.
5. Press **TIME SET** to save the current time.
6. To switch between 12-hour and 24-hour format, press the **12/24H** button. In 12-hour format, "AM" or "PM" indicators will be displayed.

Setting Alarms

The device supports two independent alarms (AL1 and AL2).

1. Press and hold the **ALARM SET** button. "AL1" will flash, and the hour digits will begin to flash.
2. Use the **UP** or **DOWN** buttons to set the desired alarm hour for Alarm 1.
3. Press **ALARM SET** to confirm the hour and move to minute adjustment.
4. Use the **UP** or **DOWN** buttons to set the desired alarm minutes for Alarm 1.
5. Press **ALARM SET** to select the alarm source: Buzzer or FM Radio. Use **UP** or **DOWN** to choose.

6. Press **ALARM SET** to set the alarm volume (for FM Radio alarm). Use **UP** or **DOWN** to adjust.
7. Press **ALARM SET** to save Alarm 1 settings.
8. Repeat steps 1-7 for Alarm 2 by pressing **ALARM SET** until "AL2" flashes.
9. To activate or deactivate an alarm, press the **ALARM ON/OFF** button repeatedly until the desired alarm indicator (AL1 or AL2) appears or disappears on the display.
10. **Snooze Function:** When an alarm sounds, press the **SNOOZE/DIMMER** button to temporarily silence it for 9 minutes. The alarm will sound again after 9 minutes.
11. **Stopping an Alarm:** To stop an alarm completely, press any button other than **SNOOZE/DIMMER**. The alarm will reset for the next day.

FM Radio Operation



This image highlights the FM radio capabilities of the ANJANK AC190-DE, including its frequency range of 87.5-108 MHz, adjustable volume, sleep timer (10-120 minutes), and support for headphones.

1. **Turn On/Off:** Press the **FM Radio** button to turn the radio on or off.
2. **Auto Scan:** Press and hold the **FM Radio** button to automatically scan and save available FM stations. The device can store up to 30 stations.
3. **Manual Tuning:** Use the **UP** or **DOWN** buttons to manually tune to a specific frequency.
4. **Volume Control:** Use the **Radio Vol** knob on the back of the unit to adjust the radio volume.

5. **Sleep Timer:** While the radio is playing, press the **SLEEP** button repeatedly to set a sleep timer (10-120 minutes). The radio will automatically turn off after the selected duration.
6. **Headphone Use:** Connect 3.5mm headphones to the headphone jack on the back for private listening.

Wireless Charging



This image demonstrates the dual charging capabilities of the ANJANK AC190-DE, showing a smartphone being wirelessly charged on the top pad and a smartwatch connected to a laptop via USB, illustrating the convenience of charging multiple devices.

universelle Kompatibilität

10W Schnellladung für

iPhone17/17Air/17Pro/17ProMax
iPhone16/16Plus/16Pro/16ProMax
iPhone15/15Plus/15Pro/15ProMax
iPhone14/14Plus/14Pro/14ProMax
iPhone13/13Pro/13ProMax/13mini
SamsungS25/S24/S23/S22Galaxy

7.5W Schnellladung für

iPhone 8/ 8 Plus
iPhone X/ XS/ XS Max/ XR
iPhone 11/ 11 Pro/ 11 Pro Max
iPhone 12mini /12 / 12pro / 12promax

5W Schnellladung für

and other enabled wireless
charging phones/ devices

Wireless Earbuds

Galaxy Buds
Pixel Buds



This infographic provides details on the universal compatibility of the wireless charging feature, specifying 10W fast charging for newer iPhone and Samsung models, 7.5W for other iPhone models, and 5W for other wireless charging phones and devices, including wireless earbuds.

1. Place your Qi-compatible smartphone or device on the wireless charging pad located on the top surface of the clock.
2. Ensure the device is centered on the charging pad for optimal charging.
3. The charging indicator on the clock (if available) or on your device will confirm charging status.
4. The charger supports 5W, 7.5W, and 10W adaptive charging.

USB Charging

1. Connect your device's USB charging cable to the **USB2A** port on the back of the clock.
2. This port provides 2A output for charging other electronic devices like a second phone, power bank, or smartwatch.

Display Dimmer



5-stufiger Dimmer

Finden Sie Ihre optimale Helligkeit



This image demonstrates the 5-level dimmer function of the ANJANK AC190-DE, allowing users to adjust the LED display brightness from maximum to completely off, ensuring comfort in various lighting conditions.

1. Press the **SNOOZE/DIMMER** button (when no alarm is sounding) to cycle through the 5 brightness levels of the LED display.
2. Select the brightness level that is most comfortable for your environment.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Placement:** Avoid placing the unit in direct sunlight, near heat sources, or in areas with high humidity.
- **Power:** Disconnect the power adapter if the unit will not be used for an extended period.

TROUBLESHOOTING

- **No Power/Display Off:**
 - Ensure the power adapter is securely connected to the unit and a working power outlet.
 - Check if the display dimmer is set to the lowest (off) level. Press **SNOOZE/DIMMER** to increase brightness.

- Verify battery backup if applicable.
- **Wireless Charging Not Working:**
 - Ensure your device is Qi-compatible and properly centered on the charging pad.
 - Remove any thick phone cases or metallic objects between the phone and the charging pad.
 - Check if the clock is powered on.
- **Poor FM Radio Reception:**
 - Fully extend and reposition the FM antenna.
 - Try moving the unit to a different location to improve signal.
 - Perform an auto-scan again to find stronger stations.
- **Alarm Not Sounding:**
 - Ensure the alarm is activated (AL1 or AL2 indicator visible on the display).
 - Check if the alarm volume is set appropriately (for radio alarm).
 - Verify the time and alarm settings are correct.

SPECIFICATIONS

Feature	Detail
Brand	ANJANK
Model Number	AC190-DE
Color	Grey + FM
Product Dimensions	12.3 x 3.81 x 10.2 cm
Item Weight	720 grams
Power/Wattage	10 watts
Material	Wood
Special Features	Adjustable Brightness, Adjustable Volume, Alarm, Charging Port, Charging Station, Programmable, Radio, Snooze, Timers
Power Source	Wired
Item Shape	Rectangular
Theme	Music
Frame Material	Wood
Batteries Included	No (Requires 2x AAA for backup)



This image provides the physical dimensions of the ANJANK AC190-DE Digital Radio Alarm Clock.

WARRANTY INFORMATION

ANJANK offers a 30-day return policy for this product. Please refer to your purchase documentation or retailer's policy for specific terms and conditions regarding returns and warranty claims.

CUSTOMER SUPPORT

For any inquiries or assistance, ANJANK provides 24-hour customer service. Please refer to the product packaging or the official ANJANK website for contact details and further support resources.