

[Manuals.plus](#) /

› [Plodon](#) /

› Plodon Baby Food Maker Mini Food Processor HAY-809 Instruction Manual

Plodon HAY-809

Plodon Baby Food Maker Mini Food Processor HAY-809 Instruction Manual

INTRODUCTION

Thank you for choosing the Plodon Baby Food Maker Mini Food Processor, Model HAY-809. This compact and versatile appliance is designed to simplify food preparation, especially for baby purees, but also suitable for chopping various ingredients for the whole family. Please read this manual thoroughly before first use to ensure safe and efficient operation.

PRODUCT COMPONENTS

Your Plodon Baby Food Maker includes the following parts:

- **Motor Unit:** The main power unit with the control button.
- **Glass Bowl (300ml):** A durable borosilicate glass container for processing food.
- **8-Blade Assembly:** Stainless steel blades for efficient chopping and blending.
- **Splash Cover:** A plastic cover to prevent food splashing during operation.
- **Scraping Spoon:** For easy removal of processed food.
- **Anti-slip Mat:** Integrated into the base of the glass bowl for stability.

Small Capacity Freshly Made
Every Meal(10OZ/1.3CUP)

300ml



Overview of the Plodon Baby Food Maker components.



Thoughtful product details for enhanced safety and performance.

SETUP INSTRUCTIONS

Follow these steps to assemble your food maker before use:

1. Place the 8-blade assembly onto the central pin inside the glass bowl. Ensure the blade protection sleeve is removed before use.
2. Add your desired food ingredients into the glass bowl. For purees, add some water or liquid as needed.
3. Place the transparent splash cover securely over the glass bowl.
4. Position the motor unit on top of the splash cover. Gently rotate the motor unit until it locks securely into the slot. This ensures proper alignment and safety.
5. Plug the power cord into a standard US electrical outlet.

SAFETY INSTRUCTIONS:

- ① Seal lid AND blender head fully before attaching cup.
- ② Hold Cup Firmly:
Hold cup with one hand;
press switch with the other.
- ③ Never blend >30s –
overheating triggers
AUTO-SHUTOFF.



If stopped, unplug and cool ≥ 60 minutes before reuse.

Step-by-step assembly and usage guide.

Video demonstrating correct assembly and usage tips for the baby food maker.

OPERATING INSTRUCTIONS

Once assembled, operate your food maker as follows:

1. Ensure the motor unit is securely locked onto the glass bowl.
2. Place one hand firmly on the motor unit and the other hand holding the glass bowl for stability.
3. Press down on the top of the motor unit to activate the blades. For best results and to prevent overheating, operate in short bursts of 2-3 seconds.
4. Release the pressure to stop the blades. Repeat as necessary until the desired consistency is achieved.
5. Do not operate continuously for more than 30 seconds. The machine has an overheat protection device and will automatically shut down if operated for too long. If this occurs, unplug the unit and allow it to cool for approximately 30-60 minutes before resuming use.



Press down on the motor unit to start processing.

Video demonstrating the baby food maker in action, creating smooth purees.

MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and hygiene of your food maker:

1. Always unplug the appliance from the power outlet before cleaning.
2. Disassemble all removable parts: the motor unit, splash cover, blade assembly, and glass bowl.
3. The motor unit should never be immersed in water. Wipe it clean with a damp cloth.
4. The glass bowl, blade assembly, and splash cover can be hand-washed with warm water and mild dish soap. Rinse thoroughly.
5. Exercise extreme caution when handling the blades as they are very sharp. Use the provided scraping spoon to safely remove food residue.
6. This product is **NOT** dishwasher safe.
7. Allow all parts to dry completely before reassembling or storing.

SAFETY INSTRUCTIONS

To prevent injury or damage, please adhere to the following safety guidelines:

- Read all instructions before using the appliance.
- Ensure the motor unit is securely rotated to lock the slot on the glass bowl before pressing the switch to start.
- Always hold the glass bowl firmly with one hand while operating the motor unit with the other.
- Do not operate the appliance continuously for more than 30 seconds. Prolonged use can cause overheating and trigger the automatic shut-off.
- If the appliance stops due to overheating, unplug it and allow it to cool for at least 60 minutes before attempting to use it again.
- The blades are extremely sharp. Handle them with extreme care, especially during assembly, disassembly, and cleaning. Keep them out of reach of children.
- Do not attempt to blend raw, hard ingredients directly without cooking or adding liquid, as this may result in an uneven texture or strain the motor. For fine purees, ensure food is cooked and add some water.
- This product is designed for US voltage and plug only. Do not use with voltage converters or adapters unless specifically approved.
- Keep hands and utensils out of the container while blending to reduce the risk of severe injury to persons or damage to the food chopper.

POWERFUL MOTOR

35000 rpm

FAST MIXING

...

4 LAYERS 8 KNIVES

3D stirring makes food
more delicate ...



Thicken Borosilicate Glass
safe and durable



Important safety instructions for operation.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not start.	Motor unit not securely locked.	Ensure the motor unit is fully rotated and locked into the slot on the splash cover.
Appliance stops during operation.	Overheating protection activated.	Unplug the unit and allow it to cool for 30-60 minutes before resuming use. Avoid continuous pressing for more than 30 seconds.
Food is not smoothly pureed.	Raw or hard ingredients without sufficient liquid.	Ensure food is cooked and add appropriate amount of water or liquid for a finer puree. Operate in short bursts.

SPECIFICATIONS

Feature	Detail
Brand	Plodon
Model Name	HAY-809
Color	Spaceman-Blue
Product Dimensions	4.13"D x 4.13"W x 8.07"H
Item Weight	1.1 pounds
Bowl Capacity	0.3 Liters (300ml)
Blade Material	Stainless Steel
Number of Speeds	1
Power Source	AC
Wattage	200 watts
Product Care Instructions	Clean after Use, Hand Wash
Is Dishwasher Safe	No

WARRANTY AND SUPPORT

For any questions or concerns regarding your Plodon Baby Food Maker, please feel free to contact us. We are committed to providing excellent product quality and customer satisfaction.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08Z7J74PY>

More documents and user manuals: <https://manuals.plus/>