

[manuals.plus](#) /

› [UYIKOO](#) /

› [UYIKOO Mini Hidden Spy Camera 1080P HD User Manual](#)

UYIKOO Mini Hidden Spy Camera 1080P HD

UYIKOO Mini Hidden Spy Camera 1080P HD User Manual

Model: Mini Hidden Spy Camera 1080P HD | Brand: UYIKOO

1. INTRODUCTION

Thank you for choosing the UYIKOO Mini Hidden Spy Camera. This compact device, designed to resemble a car key fob, offers high-definition 1080P video recording, motion detection, night vision, and audio recording capabilities. It is ideal for discreet surveillance and capturing important moments. This manual provides detailed instructions to help you set up, operate, and maintain your camera effectively.



Image 1.1: The UYIKOO Mini Hidden Spy Camera, designed as a car key fob, with its hidden lens highlighted.

2. PRODUCT OVERVIEW AND COMPONENTS

Familiarize yourself with the various parts and controls of your UYIKOO Mini Hidden Spy Camera.

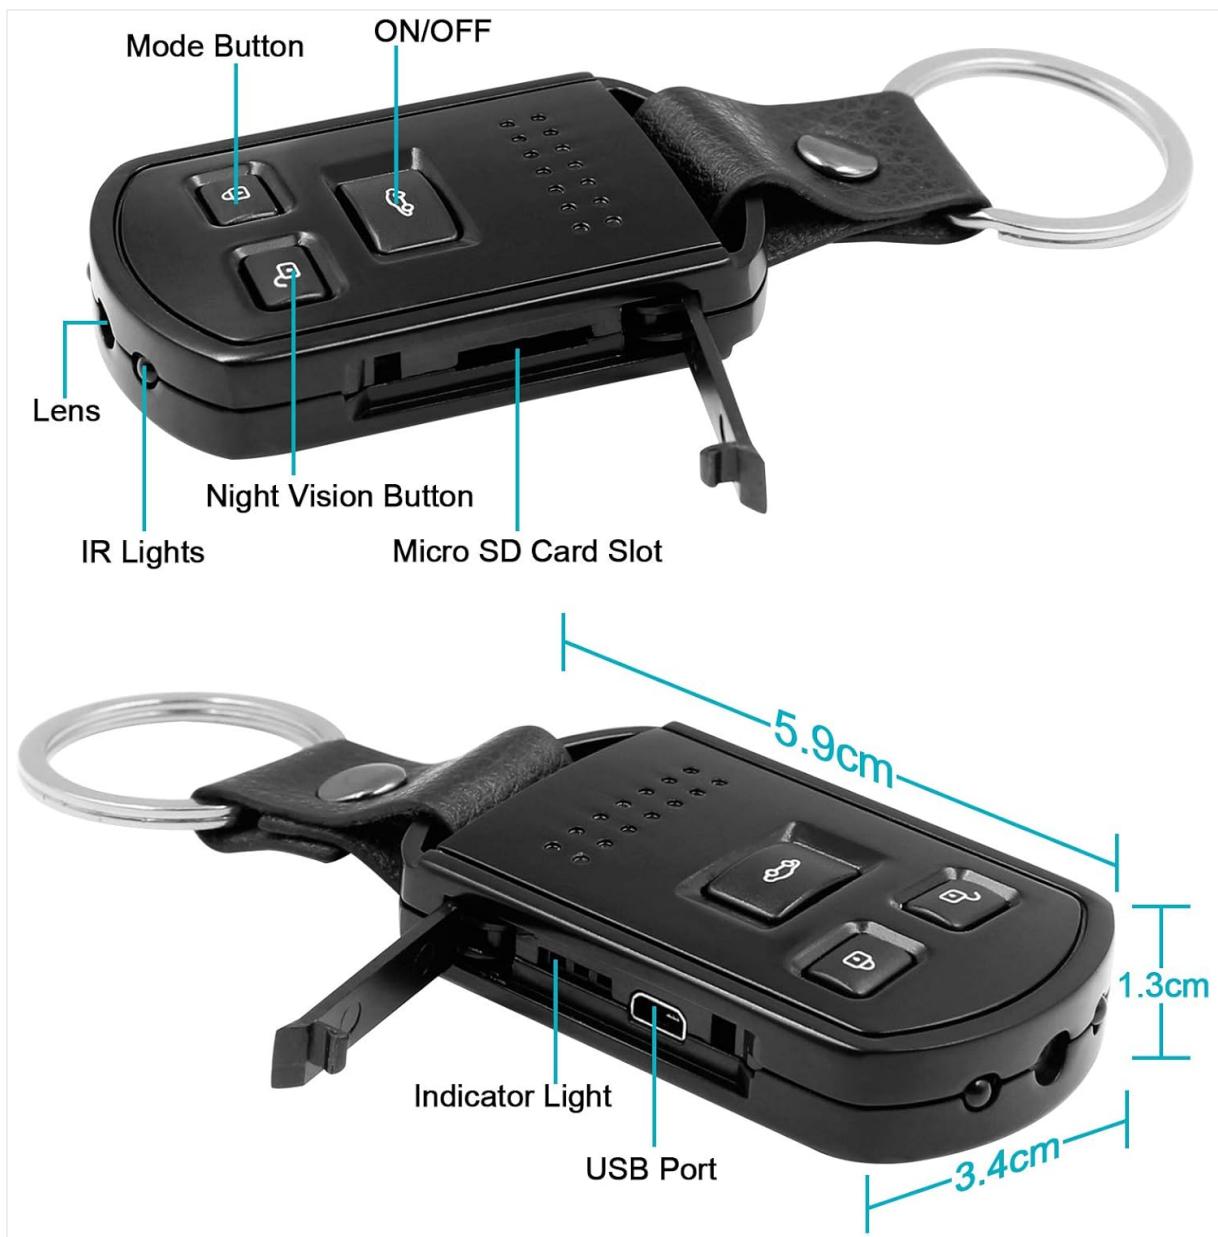


Image 2.1: Detailed view of the camera's components and controls.

- **ON/OFF Button:** Powers the device on or off.
- **Mode Button:** Switches between different recording modes (e.g., video, motion detection, audio).
- **Night Vision Button:** Activates or deactivates infrared night vision.
- **Lens:** The camera's recording lens.
- **IR Lights:** Infrared lights for night vision functionality.
- **Micro SD Card Slot:** Insert your Micro SD card here (supports up to 32GB).
- **USB Port:** For charging the device and connecting to a computer for file transfer.
- **Indicator Light:** Provides status feedback (e.g., power on, recording, charging).

3. SETUP

3.1. Inserting the Micro SD Card

Before using the camera, you must insert a Micro SD card (not included) into the designated slot. The camera supports cards up to 32GB. Ensure the card is inserted correctly with the gold contacts facing the correct direction, as indicated by the diagram on the device or in the manual. A click sound usually confirms proper insertion.

3.2. Initial Charging

For optimal performance, fully charge the camera before its first use. Connect the camera to a USB power source using the provided USB cable. The indicator light will typically show a specific color or pattern during charging and change when fully charged. A full charge provides up to 70 minutes of continuous operation.



Image 3.1: Charging the camera using various power sources.

4. OPERATING INSTRUCTIONS

4.1. Power On/Off

- **To Power On:** Press and hold the ON/OFF button until the indicator light illuminates.
- **To Power Off:** Press and hold the ON/OFF button again until the indicator light turns off.

4.2. 1080P HD Video Recording

Once the camera is powered on, press the Mode button to select video recording mode. Press the ON/OFF button briefly to start recording. The indicator light will flash to confirm recording is in progress. Press the ON/OFF button again to stop recording and save the file.



1080P
Full HD

1080P HD Mini Camera

Image 4.1: The camera capturing 1080P Full HD video.

4.3. Motion Detection Recording

To activate motion detection, power on the camera and then press the Mode button until the indicator light shows the specific pattern for motion detection mode. Once activated, the camera will only record when motion is detected, conserving battery life and storage space. Recording will automatically stop when motion ceases and resume when detected again.



Motion Detection

Image 4.2: Illustrating the motion detection feature.

4.4. Night Vision

To enable night vision, power on the camera and press the Night Vision button. The IR lights will activate, allowing the camera to record clear video in low-light conditions or complete darkness. Press the Night Vision button again to deactivate it.



Night Vision



Image 4.3: Comparison of day and night vision recording.

4.5. Audio Recording Only

The camera can also function as a standalone audio recorder. Power on the device and use the Mode button to cycle through modes until you reach the audio-only recording setting. Press the ON/OFF button to start and stop audio recording.

Record Voice Only



Image 4.4: The camera's audio recording function.

5. FILE MANAGEMENT

To access and manage your recorded files, you have two primary options:

- **Direct USB Connection:** Connect the camera to your computer using the provided USB cable. The camera will appear as a removable disk, allowing you to copy, move, or delete files.
- **Micro SD Card Reader:** Remove the Micro SD card from the camera and insert it into a card reader. Connect the card reader to your computer to access the files.

Built-in Rechargeable Battery

Supports recording while charging



Image 5.1: Methods for accessing recorded files.

6. CHARGING THE DEVICE

The UYIKOO Mini Hidden Spy Camera features a built-in rechargeable lithium-ion battery. To charge, connect the camera to any standard USB power source using the included USB cable. This can include:

- A computer's USB port.
- A USB wall adapter.
- A power bank.
- A car charger with a USB port.

The indicator light will signal the charging status. The device supports recording while charging, offering extended operational time when connected to a continuous power source.

7. TROUBLESHOOTING

If you encounter issues with your UYIKOO Mini Hidden Spy Camera, please refer to the following common problems and solutions:

- **Camera does not turn on:**

- Ensure the battery is fully charged. Connect to a power source and allow sufficient charging time.
- Try resetting the device (if a reset button is available, refer to the product diagram).

- **Camera does not record:**

- Check if a Micro SD card is properly inserted.
- Ensure the Micro SD card has sufficient free space.
- Verify the Micro SD card is formatted correctly (FAT32 is usually recommended).
- Confirm you are in the correct recording mode (video, motion detection, audio).

- **Poor video/audio quality:**

- Ensure the lens is clean and free from smudges or dust.
- Record in well-lit environments for best video quality, or ensure night vision is properly activated in low light.
- Ensure the microphone is not obstructed for clear audio.

- **Battery drains quickly:**

- Ensure the camera is fully charged before use.
- Continuous recording consumes more battery than motion detection.
- Battery performance can degrade over time; consider replacing the device if it's significantly old.

- **Micro SD card not recognized or not fitting:**

- Ensure the card is inserted in the correct orientation.
- Use a high-quality Micro SD card from a reputable brand.
- Verify the card capacity does not exceed 32GB.

If these steps do not resolve your issue, please contact UYIKOO customer support for further assistance.

8. SPECIFICATIONS

Feature	Detail
Brand	UYIKOO
Model	Mini Hidden Spy Camera 1080P HD
Video Capture Resolution	1080p
Effective Video Resolution	1080 Pixels
Viewing Angle	120 Degrees
Connectivity Technology	Wired (USB for data/charging)
Wireless Communication Technology	Wi-Fi (Note: Product specifications list Wi-Fi, but feature bullets do not detail Wi-Fi functionality for direct streaming. This may refer to general connectivity or a potential variant.)

Feature	Detail
Special Features	Night Vision, Motion Detection
Illumination Type	Infrared
Power Source	Battery Powered (Lithium-ion)
Battery Life	Up to 70 minutes continuous operation
Memory Capacity	32 GB (MicroSD)
Removable Memory	MicroSD
Material	Plastic
Item Weight	140 grams
Dimensions	12 x 9.7 x 3.6 cm (Packaging)
Compatible Devices	Desktop Computer
Controller Type	Manual
Mounting Type	Tabletop Mount (Implied, due to portable nature)
Indoor/Outdoor Use	Indoor

9. SAFETY INFORMATION

Please read and follow these safety guidelines to ensure safe and proper use of your UYIKOO Mini Hidden Spy Camera:

- **Legal Use:** Ensure that the use of this device complies with all local, state, and federal laws regarding surveillance and privacy. It is the user's responsibility to use the product legally and ethically.
- **Battery Safety:** Do not expose the battery to extreme temperatures, direct sunlight, or fire. Do not disassemble, puncture, or modify the battery. Dispose of batteries according to local regulations.
- **Water Exposure:** This device is not waterproof. Avoid exposure to water, moisture, or high humidity.
- **Operating Temperature:** Operate the camera within recommended temperature ranges to prevent damage.
- **Cleaning:** Use a soft, dry cloth to clean the device. Do not use harsh chemicals or abrasive cleaners.
- **Children:** Keep the device out of reach of children to prevent accidental ingestion of small parts or misuse.

10. WARRANTY AND SUPPORT

UYIKOO is committed to providing high-quality products and excellent customer service. Your UYIKOO Mini Hidden Spy Camera comes with a **2-Year Warranty**.

For any technical assistance, questions, or concerns, UYIKOO offers **Lifetime Professional Technical Support**. Our customer service team is dedicated to providing **Quick Response** to your inquiries.

Please refer to your purchase documentation or the UYIKOO official website for contact information and further details regarding warranty claims and support services.

Il Cliente Prima di Tutto



Risposta Rapida



Tecnica
Professionale
a Vita




2 Anni di Garanzia

Image 10.1: UYIKOO Customer Service Commitment.

Related Documents - Mini Hidden Spy Camera 1080P HD

 <p>H01 Camera User Manual (English)</p> <p>Product Overview</p> <p>1. USB data Port 2. Camera body 3. Micro SD card slot 4. Power button 5. Micro USB port 6. Microphone 7. Speaker 8. LED light 9. Power port 10. Micro SD card slot 11. Micro USB port 12. Power button</p> <p>Power ON/OFF</p> <p>Press the power button for 1 second, the camera will turn on. Press and hold the button for 2 seconds, the camera will turn off. If you hold the power button for 3 seconds, the camera will enter the Power OFF mode. Once you release the power button, the camera will turn on again.</p>	<p>H01 Camera User Manual and Power Bank Guide</p> <p>This manual provides instructions for the H01 Camera, covering its features, operation, charging, and reset procedures. It also details its functionality as a power bank.</p>
 <p>UYIKOO Mini Action Cam: User Manual and Operating Instructions</p> <p>Comprehensive guide to operating the UYIKOO Mini Action Cam, covering power, recording, photography, file viewing, charging, and safety precautions for this 1080P HD sports camera.</p>	

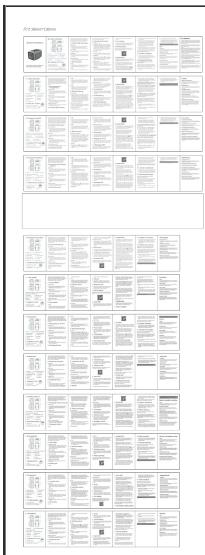

[UYIKOO 4K Mini Action Camera: WiFi, 120° Sports Camera for Motorcycles & Bikes](#)

Explore the UYIKOO 4K Mini Action Camera, a versatile WiFi-enabled sports camera with a 120° wide-angle lens, perfect for motorcycle, bike, and helmet recording. Features include 4K video and robust connectivity.



[SpyCentre 6809 Key FOB Hidden Camera: User Manual & Instructions](#)

Comprehensive guide to operating the SpyCentre 6809 Key FOB Hidden Camera, including charging, recording, playback, and file management. Learn how to use its features like motion detection and night vision.



[IXIUM Spy Key Fob User Manual: Operation and Features](#)

Comprehensive user manual for the IXIUM Spy Key Fob, detailing its features, operation, charging, and timestamp settings for capturing photos and videos.



[H01 Camera User Manual and Power Bank Guide](#)

This manual provides instructions for the H01 Camera, covering its features, operation, charging, and reset procedures. It also details its functionality as a power bank.