



[Manuals.plus](#) /

› [Konstsmide](#) /

› Konstsmide Positano 7813-750 USB Table Lamp Instruction Manual

## Konstsmide 7813-750

# Konstsmide Positano 7813-750 USB Table Lamp Instruction Manual

## 1. INTRODUCTION

Thank you for choosing the Konstsmide Positano 7813-750 USB Table Lamp. This portable and versatile lamp is designed to provide adjustable lighting for various indoor and outdoor settings. Featuring a built-in rechargeable battery, stepless dimming, and adjustable color temperature, it offers convenience and ambiance. Please read this manual carefully before use to ensure proper operation and maintenance.



Image 1.1: Konstsmide Positano 7813-750 USB Table Lamp.

## 2. SAFETY INSTRUCTIONS

Always follow basic safety precautions when using electrical products to reduce the risk of fire, electric shock, and personal injury.

- Do not immerse the lamp in water. The IP54 rating indicates protection against dust and splashing water, but not submersion.
- Do not attempt to open or modify the lamp. There are no user-serviceable parts inside.
- Use only the provided charging station and USB-C cable, or a certified equivalent, for charging.
- Keep the lamp away from extreme temperatures, direct sunlight, and open flames.
- Ensure the charging port is dry before connecting the charging cable.
- Dispose of the battery according to local regulations. Do not dispose of batteries in household waste.

## 3. PACKAGE CONTENTS

Verify that all components are present in the package:

- 1 x Konstsmide Positano 7813-750 USB Table Lamp (with fixed LED bulb)
- 1 x Charging Station
- 1 x USB-C Cable (1.5 m)
- 1 x Instruction Manual

## 4. PRODUCT FEATURES

- **Model:** Positano 7813-750
- **Light Source:** Integrated LED
- **Dimming:** Stepless dimmer function
- **Color Temperature:** Adjustable (2700-3000 K)
- **Power:** 2.2 Watts
- **Luminous Flux:** 180 lm
- **Battery:** 2 Lithium-ion (included)
- **Protection Rating:** IP54 (dust protected, splash-proof)
- **Material:** Aluminum
- **Switch Type:** Push-button

## 5. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Charge:** Before first use, fully charge the lamp. Connect the USB-C cable to the charging station, then connect the other end to a suitable USB power adapter (not included) or a powered USB port. Place the lamp onto the charging station. Refer to the 'Charging' section for more details.
3. **Placement:** Place the lamp on a stable, flat surface. Ensure it is not exposed to direct rain or submerged in water, despite its IP54 rating.



Image 5.1: Lamp with USB charging cable for initial setup.

## 6. OPERATING INSTRUCTIONS

The Konstsmide Positano lamp features a push-button switch located on the top of the lamp for control.

- **Power On/Off:** Briefly press the push-button switch to turn the lamp ON or OFF.
- **Adjust Brightness (Dimming):** When the lamp is ON, press and hold the push-button switch. The brightness will gradually increase or decrease. Release the button when the desired brightness level is reached.
- **Adjust Color Temperature:** While the lamp is ON, quickly double-press the push-button switch to cycle between the available color temperatures (2700 K warm white and 3000 K neutral white).



Image 6.1: Top control button for power, dimming, and color temperature adjustment.



Image 6.2: Lamp in use, demonstrating its portability and suitability for outdoor environments.

## 7. CHARGING

The lamp is powered by two integrated Lithium-ion batteries and is rechargeable via the included charging station and USB-C cable.

1. Connect the USB-C cable to the charging station.
2. Plug the USB-A end of the cable into a compatible USB power adapter (e.g., smartphone charger, computer USB port) or a power bank.
3. Place the Konstsmide Positano lamp securely onto the charging station. Ensure the lamp is properly seated for charging to begin.
4. A charging indicator (if present, typically a small LED) on the lamp or charging station will show the charging status. (Note: Specific indicator behavior is not detailed in product information, observe for changes or refer to product packaging for details).
5. Once fully charged, disconnect the lamp from the charging station.

## 8. MAINTENANCE

- **Cleaning:** Wipe the lamp with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** When not in use for extended periods, store the lamp in a cool, dry place. It is recommended to charge the battery fully before storage and recharge it every 3-6 months to maintain battery health.
- **Battery Care:** Avoid completely draining the battery frequently. Recharge the lamp when the light output becomes noticeably dim.

## 9. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is depleted.	Charge the lamp fully.
Lamp does not turn on.	Lamp is faulty.	Contact customer support.
Lamp is not charging.	Charging cable or adapter is faulty.	Try a different USB-C cable or power adapter.
Lamp is not charging.	Lamp not properly seated on charging station.	Ensure the lamp is correctly placed on the charging station.
Light output is dim or flickering.	Low battery.	Recharge the lamp.

## 10. SPECIFICATIONS

Feature	Detail
Brand	Konstsmide
Model Number	7813-750
Dimensions (L x W x H)	11 x 11 x 35 cm
Weight	750 grams

Feature	Detail
Material	Aluminum
Color	Black
Power (Max)	2.2 Watts
Voltage	3.7 Volts (AC)
Luminous Flux	180 lm
Color Temperature Range	2700-3000 K
Color Rendering Index (CRI)	80
IP Rating	IP54
Battery Type	2 Lithium-ion (included)
Switch Style	Push-button
Components Included	Fixed LED bulb, charging station, 1.5m USB-C cable

## 11. WARRANTY AND SUPPORT

Konstsmide guarantees the availability of spare parts for this product for 2 years from the date of purchase.

For technical support, warranty claims, or further assistance, please contact your retailer or the Konstsmide customer service department. Refer to your purchase documentation for contact details.

