



Manuals.plus /

› **Fakir** /

› Fakir Maxi Clean Steam Cleaner Instruction Manual

Fakir Maxi Clean

Fakir Maxi Clean Steam Cleaner

INSTRUCTION MANUAL

Introduction

Thank you for choosing the Fakir Maxi Clean Steam Cleaner. This powerful 10-in-1 steam mop is designed for hygienic and chemical-free cleaning of various surfaces in your home. Utilizing hot water steam, it efficiently removes dirt and grease, eliminating 99% of bacteria and pathogens. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your device. Please read it thoroughly before first use and keep it for future reference.



Figure 1: Fakir Maxi Clean Steam Cleaner. This image displays the upright design of the steam cleaner, featuring its handle, main body, and the floor cleaning head.

Setup and Assembly

Before using your Fakir Maxi Clean Steam Cleaner, please follow these steps for proper setup and assembly.

1. **Unpack Contents:** Carefully remove all components from the packaging. Ensure all parts listed in the "Included Components" section are present.
2. **Assemble the Handle:** Insert the handle into the main body of the steam cleaner until it clicks securely into place.
3. **Attach the Floor Head:** Connect the desired floor head or attachment to the main unit. For floor cleaning, attach the floor attachment and secure a microfiber cloth.

4. **Fill the Water Tank:** Locate the water tank (capacity 330 ml). Open the cap and use the provided funnel to fill the tank with clean tap water. It is recommended to use distilled or demineralized water to prolong the life of the appliance and prevent limescale buildup, especially if your tap water is hard. Close the cap securely.
5. **Anti-Limescale Filter:** The device is equipped with an anti-limescale filter to prevent calcification. Ensure it is properly installed.

Operating Instructions

Follow these instructions for effective and safe operation of your steam cleaner.

1. **Power On and Heat-Up:** Plug the power cord into a suitable electrical outlet. The steam cleaner will begin to heat up. It is ready for use after approximately 30 seconds.
2. **Steam Activation:** Activate the steam function using the switch located on the handle.
3. **Cleaning Surfaces:**
 - **Floors:** For tiles, laminate, and other hard floors, use the floor attachment with a microfiber cloth. Move the steam cleaner slowly over the surface to allow the steam to penetrate and clean effectively.
 - **Carpets:** Use the carpet glider frame over the floor attachment for refreshing carpets.
 - **Hard-to-Reach Areas:** The practical Multi-Flex joint on the guide rod allows for easy access to difficult areas with full floor contact.
 - **Other Surfaces:** Utilize the various attachments for specific cleaning tasks:
 - **Window/Floor Nozzle:** For windows and smooth surfaces.
 - **Crevice Nozzle:** For narrow gaps and corners.
 - **Jet Nozzle:** For concentrated steam on stubborn dirt.
 - **Small Brush:** For scrubbing tough spots.
 - **Spatula Attachment:** For scraping off dried-on grime.
 - **Clothing Attachment:** For steaming garments and textiles.
4. **Action Radius:** The 6-meter action radius provides ample freedom of movement, reducing the need to frequently change power outlets.
5. **Steam Regulation:** Adjust the steam output as needed for different surfaces and cleaning requirements.
6. **Overheating Protection:** The device is equipped with overheating protection for safety.

Maintenance and Care

Regular maintenance ensures the longevity and optimal performance of your Fakir Maxi Clean Steam Cleaner.

- **Empty Water Tank:** After each use, unplug the device and allow it to cool down. Empty any remaining water from the tank.
- **Clean Microfiber Cloths:** Remove and wash microfiber cloths after each use. They can typically be machine washed.
- **Clean Attachments:** Clean all attachments with water and mild detergent as needed. Ensure they are dry before storage.
- **Anti-Limescale Filter Maintenance:** The anti-limescale filter helps prevent mineral buildup. Depending on water hardness and frequency of use, the filter may need to be cleaned or replaced periodically. Refer to the manufacturer's guidelines for specific instructions on filter maintenance.
- **Exterior Cleaning:** Wipe the exterior of the steam cleaner with a damp cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the steam cleaner in a cool, dry place. The cable can be conveniently wound around the guide rod for

tidy storage.

Troubleshooting

If you encounter issues with your Fakir Maxi Clean Steam Cleaner, refer to the following common problems and solutions.

| Problem | Possible Cause | Solution |
|-------------------------------|--|--|
| No steam or low steam output. | Water tank empty; Device not heated sufficiently; Limescale buildup; Nozzle blocked. | Refill water tank; Wait for 30 seconds heat-up time; Clean or replace anti-limescale filter; Clean nozzle. |
| Water leaking from the unit. | Water tank cap not closed properly; Overfilling the tank; Damaged seal. | Ensure water tank cap is tightly closed; Do not overfill; Contact customer support if seal is damaged. |
| Device does not turn on. | Not plugged in; Power outlet fault; Internal electrical issue. | Check power connection; Try a different outlet; Contact customer support. |

If the problem persists after attempting these solutions, please contact Fakir customer support.

Specifications

| Feature | Detail |
|---------------------|--|
| Brand | Fakir |
| Model Name | Maxi Clean |
| Model Number | 4954003 |
| Color | Silver |
| Product Dimensions | 110 x 27 x 15 cm |
| Item Weight | 4 Kilograms |
| Power | 1300 Watt |
| Voltage | 230 Volt |
| Action Radius | 6 Meters |
| Water Tank Capacity | 330 ml |
| Heat-up Time | Approx. 30 seconds |
| Included Components | Steam Cleaner (1300 Watt), Anti-Limescale Filter, Window/Floor Nozzle, Crevice Nozzle, Jet Nozzle, Small Brush, Floor Attachment, Floor Pad, Spatula Attachment, Clothing Attachment, 2 Microfiber Cloths for floor, Carpet Glider Frame, Funnel |
| Special Features | 10-piece accessory set, Overheating protection, Steam regulation, Cable winding on guide rod, Multi-Flex joint |

Warranty and Support

Fakir products are manufactured to high quality standards. For information regarding the warranty period and terms for your Fakir Maxi Clean Steam Cleaner, please refer to the warranty card included with your purchase or visit the official

Fakir website.

For technical support, spare parts, or any other inquiries, please contact Fakir customer service. Contact details can typically be found on the official Fakir website or in the product packaging.

Official Fakir Website: www.fakir.de

