



Manuals.plus /

› Unbranded /

› Unbranded DP-KK99 WiFi Panoramic Security Camera User Manual

Unbranded DP-KK99

Unbranded DP-KK99 WiFi Panoramic Security Camera User Manual

Model: DP-KK99

1. INTRODUCTION

This manual provides detailed instructions for the installation, operation, and maintenance of your Unbranded DP-KK99 WiFi Panoramic Security Camera. Please read this manual thoroughly before using the product to ensure proper functionality and safety. This camera offers 360-degree panoramic surveillance, motion detection, night vision, and two-way audio communication for comprehensive home monitoring.



Image 1.1: The Unbranded DP-KK99 WiFi Panoramic Security Camera, showing its bulb-like design, a 32GB Micro SD card, and a smartphone displaying the camera's panoramic view.

2. PACKAGE CONTENTS

Please check the package contents upon receipt. If any items are missing or damaged, contact your retailer.

- Unbranded DP-KK99 WiFi Panoramic Security Camera
- 32GB Micro SD Card (pre-installed or included separately)
- Mounting Bracket
- User Manual (this document)

3. SETUP GUIDE

3.1 Installation

The camera is designed for easy installation into a standard E27 lamp base.

1. Ensure the power to the E27 lamp base is turned off before installation.
2. Screw the camera firmly into the E27 lamp base.
3. Turn on the power to the lamp base. The camera will power on and begin its startup sequence.



Image 3.1: Visual guide for screwing the camera into a standard E27 lamp base for installation.

3.2 App Download and Connection

The camera operates via the 'iCsee' mobile application.

1. **Download the App:** Scan the QR code provided on the product packaging or search for "iCsee" in your smartphone's app store (iOS/Android).
2. **Register an Account:** Open the iCsee application and register a new account using your email address. Phone numbers are not required for registration.
3. **Add Camera:** Tap the '+' icon within the app to add a new device. Follow the on-screen prompts to select

"Add Camera."

4. **Connect to Wi-Fi:** Enter your 2.4GHz Wi-Fi network password. The camera only supports 2.4GHz Wi-Fi. Ensure the Wi-Fi name and password are spelled correctly.
5. **Initial Connection Tips:** For the first connection, place the camera within 2 meters of your Wi-Fi router.
6. **Set New Password:** Once successfully connected, set a new password for your camera for security.

3.3 Important Connection Notes

- Only 2.4GHz Wi-Fi networks are supported. 5GHz networks are not compatible.
- Ensure your Wi-Fi name and password are entered accurately.
- For initial setup, keep the camera close to your Wi-Fi router (within 2 meters).

4. OPERATING INSTRUCTIONS

4.1 Remote Viewing and Control

Once connected, you can view live footage and control camera functions remotely through the iCsee app.

- **Live View:** Access the camera feed to see a clear, all-round view of your monitored area. The 360-degree fisheye lens provides comprehensive coverage without blind spots.
- **Capture:** Use the app to capture pictures and record videos directly from the live feed.

360°

No dead ends



1*360° Camera surveillance perspective Equal to 5*old-fashioned monitors



Image 4.1: The camera's 360-degree panoramic view eliminates blind spots, providing coverage equivalent to multiple standard cameras.

4.2 Two-Way Audio Communication

The camera features a built-in microphone and speaker, enabling two-way audio communication.

- From the iCsee app, you can initiate audio calls and conversations with individuals near the camera.
- The clear microphone ensures effective vocal transmission.

Two Way Intercom/Audio

The IP camera features built in mic and speaker to communicate with family and friends remotely.



Image 4.2: The camera supports two-way intercom/audio, allowing remote communication with family members.

4.3 Motion Detection and Alerts

The camera is equipped with a motion detection function to enhance security.

- When abnormal motion is detected, the camera will send an alert message directly to your mobile phone via the iCsee app.
- This feature helps keep your home or office secure by notifying you of unusual activity.

Support Motion Detection

Alarm Notifications/Alarm SD REC/E-mail Alarm with Pictures/Save Snapshots
on FTP Server/Save Video on FTP Server



Image 4.3: The camera supports motion detection, sending alarm notifications to your smartphone upon detecting activity.

4.4 Night Vision

The camera provides excellent night vision capabilities for monitoring in low-light or dark conditions.

- It features built-in infrared night vision and white light full-color night vision dual mode.
- This dual mode ensures clear visibility and security around the clock.

4.5 Light Function

The integrated light can be controlled via the app.

- You can set the light to turn on automatically in the dark, manually control it, or schedule it to turn on at specific times.

4.6 Storage Options

The camera supports both local and cloud storage for recorded footage.

- **Micro SD Card:** Live viewing and recording are supported directly to the included 32GB Micro SD card.
- **Cloud Storage:** Cloud storage options may be available through the iCsee app for additional backup and

Support SD card storage & cloud storage

Multi-person sharing, multi-end viewing



Image 4.4: The camera supports both Micro SD card and cloud storage for recording and viewing.

5. SPECIFICATIONS

Feature	Detail
Model Number	DP-KK99
Connectivity Technology	Wireless (Wi-Fi)
Connectivity Protocol	Wi-Fi (2.4GHz only)
Compatible Devices	Smartphone (iOS/Android)
Power Source	AC/DC (E27 Lamp Base)
Mounting Type	Ceiling Mount
Form Factor	Dome
Color	White
Item Dimensions (L x W x H)	6.5 x 3.94 x 3.54 inches
Item Weight	7.8 ounces
Special Features	Motion Sensor, Night Vision (Infrared & Full-Color), Two-Way Audio
Indoor/Outdoor Usage	Indoor
Video Capture Format	MPEG-4
International Protection Rating	IP67

6. TROUBLESHOOTING

If you encounter issues with your camera, please refer to the following common solutions:

- **Connection Failure:**
 - Ensure your Wi-Fi network is 2.4GHz. The camera does not support 5GHz Wi-Fi.
 - Verify that the Wi-Fi name (SSID) and password are entered correctly in the iCsee app.
 - During initial setup, ensure the camera is within 2 meters of your Wi-Fi router.
 - **Resetting the Camera:** If connection fails, insert a thimble or small pin into the reset hole on the camera. Press and hold for 10 seconds until you hear a prompt or see an indicator light change. Wait 2 minutes for the camera to restart, then attempt to reconnect.
- **Hotspot Mode Activation:** If you need to activate hotspot mode, insert a thimble into the reset hole and click 3 times. Then, search for a Wi-Fi network starting with "camera" on your phone. The default password for this hotspot is 1234567890.
- **No Picture/Offline:** Check the power supply to the E27 lamp base. Ensure the camera is securely screwed in and receiving power. Verify your Wi-Fi connection is stable.
- **Poor Image Quality:** Ensure the camera lens is clean and free from dust or obstructions. Check your internet connection speed.
- **SD Card Not Recording:** Ensure the 32GB Micro SD card is properly inserted. Format the SD card through the app if necessary.

7. MAINTENANCE

- **Cleaning:** Gently wipe the camera lens and body with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.
- **Placement:** Ensure the camera is installed in a dry, indoor environment. Avoid direct exposure to water or extreme temperatures.
- **Firmware Updates:** Periodically check the iCsee app for available firmware updates to ensure optimal performance and security.

8. WARRANTY AND SUPPORT

Specific warranty details for this Unbranded product are not provided in this manual. For warranty information, technical support, or service inquiries, please contact your original retailer or the seller directly. Keep your purchase receipt as proof of purchase.

