

[Manuals.plus](#) /

› [KENNEAS](#) /

› KENNEAS Wireless Controller for Switch/OLED/Lite Instruction Manual

KENNEAS B0FPFYT3N6

KENNEAS Wireless Controller for Switch/OLED/Lite Instruction Manual

Model: B0FPFYT3N6

PRODUCT OVERVIEW

The KENNEAS Wireless Controller is designed for use with Nintendo Switch, Switch OLED, and Switch Lite consoles. It features customizable options and enhanced controls for an immersive gaming experience.

FOR SWITCH/SWITCH LITE/SWITCH OLED



Image: Front view of the KENNEAS Wireless Controller, highlighting its ergonomic design and button layout.

- **Dual Faceplate Design:** Includes two magnetic panels for customizable aesthetics: a Fashionable Color Gradient and a Frosted Transparent shell.
- **8-Color LED Lighting:** Features 8 LED colors with three dynamic lighting modes: Monochrome Breathing, Monochrome Solid, and RGB Breathing.
- **Long-Lasting Battery:** Equipped with an 850 mAh Li-Ion battery, providing up to 15 hours of continuous gameplay on a single charge.

- **Advanced Controls:** Includes two programmable back buttons, manual/auto turbo modes, motion control, and one-touch wake-up for the console.
- **Immersive Vibration:** Dual vibration motors offer rich, adjustable feedback.
- **Ergonomic Grip:** Diamond-textured grip and ergonomic design ensure comfortable handling during extended gaming sessions.

SETUP AND PAIRING

Follow these steps to connect your KENNEAS Wireless Controller to your Nintendo Switch console.

1. **Initial Charge:** Before first use, fully charge the controller using the provided USB-C cable. Connect the cable to the USB-C port on the top of the controller and to a power source.
2. **Pairing Mode:** On your Nintendo Switch, navigate to the "Controllers" menu, then select "Change Grip/Order."
3. **Activate Controller:** On the back of the KENNEAS controller, locate and press the small pairing button. The LED indicators on the controller will begin to flash, indicating it is in pairing mode.
4. **Complete Pairing:** Once the controller appears on the Switch screen and the LED indicators stabilize, the pairing is complete.

MAGNETIC REPLACABLE FACEPLATE



Image: Rear view of the controller, highlighting the pairing button and USB-C charging port.

OPERATING INSTRUCTIONS

Customizing Faceplates

The controller comes with two magnetic faceplates. To change them, gently lift the current faceplate from the edges. The new faceplate will snap into place magnetically.



Image: Illustration showing the magnetic replaceable faceplates of the KENNEAS Wireless Controller.

LED Lighting Modes

The controller features 8 LED colors and 3 lighting modes. Refer to the included quick start guide for specific button combinations to cycle through colors and modes (Monochrome Breathing, Monochrome Solid, RGB Breathing).

8 COLORS LED LIGHT, 3 LIGHT MODE



Image: The controller displaying its 8-color LED lighting and indicating 3 light modes.

Turbo Function

The Turbo function allows for rapid, repeated input of a button press. To activate, press and hold the desired action button (A, B, X, Y, L, R, ZL, ZR) and then press the Turbo button. Repeat the process to adjust Turbo speed or deactivate.

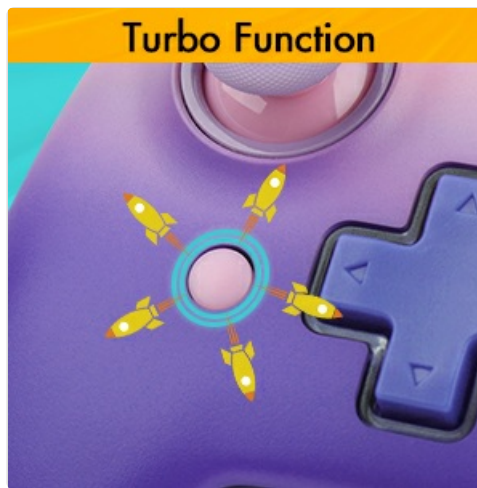


Image: Close-up of the controller highlighting the Turbo function button.

Programmable Back Buttons

The controller features two programmable back buttons (MR and ML). These can be mapped to replicate other button inputs for customized gameplay. Consult the full instruction manual for detailed programming steps.



Image: Close-up of the controller's rear, showing a programmable back button (MR).

Motion Control and Vibration

The integrated 6-axis gyroscope enables motion control in compatible games. The dual vibration motors provide haptic feedback, which can often be adjusted within the game settings or via specific controller button combinations (refer to the full manual).



Image: The controller illustrating its 6-Axis Sensor for motion control capabilities.

**850MAH BIG BATTERY,
15 HOURS PLAYTIME**



Programmable Button

Non-Slip Grip

Image: The controller highlighting its 3-level HD vibration feature and precise analog sticks.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the controller. Avoid using harsh chemicals or abrasive materials.
- **Storage:** Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the controller frequently. Charge it regularly, even if not in constant use.

TROUBLESHOOTING

Controller Not Pairing:

Ensure the controller is fully charged. Verify that the Switch is in "Change Grip/Order" mode. Press and hold the pairing button on the back of the controller until LEDs flash. If issues persist, restart both the Switch and the controller.

Buttons Unresponsive or Sticking:

Clean around the buttons with a soft, slightly damp cloth to remove any debris. If a button is physically stuck, gently try to dislodge it. If the issue is persistent, contact customer support.

Short Battery Life:

Ensure the controller is fully charged before use. Reduce LED brightness or turn off LED effects to conserve battery. If battery life significantly degrades, contact customer support.

Motion Control Issues:

Ensure the game supports motion controls. Try recalibrating the motion sensors through the Nintendo Switch system settings.

SPECIFICATIONS

Model Number	B0FPFYT3N6
Brand	KENNEAS
Compatibility	Nintendo Switch, Switch OLED, Switch Lite
Battery Capacity	850 mAh Li-Ion
Playtime	Up to 15 hours
Connectivity	Wireless
Charging Port	USB-C
Dimensions	3.15 x 2.36 x 1.57 inches
Weight	11.99 ounces

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An overview of the KENNEAS Wireless Controller, showcasing its features such as replaceable faceplates, LED lighting, battery life, Turbo function, mappable back buttons, adjustable vibration, and motion control. This video is provided by the seller.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided in the product packaging or visit the official KENNEAS website. Keep your purchase receipt for warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08ZJ6GCQ4>

More documents and user manuals: <https://manuals.plus/>