

[Manuals.plus](#) /

› [Homdox](#) /

› Homdox Electric Pressure Washer User Manual

Homdox dg

Homdox Electric Pressure Washer User Manual

Model: dg

Brand: Homdox

INTRODUCTION

This user manual provides comprehensive instructions for the safe and efficient operation, assembly, and maintenance of your Homdox Electric Pressure Washer. Please read this manual thoroughly before using the product and keep it for future reference. This high-power cleaner is ideal for various tasks around your car, home, and garden.

IMPORTANT SAFETY INSTRUCTIONS

Always follow basic safety precautions when using this electric pressure washer to reduce the risk of fire, electric shock, and personal injury.

- Ensure the power source is a grounded outlet with GFCI (Ground Fault Circuit Interrupter) protection. The power cord is equipped with a GFCI device for added safety.
- Never point the spray gun at people, pets, or electrical devices. High-pressure spray can cause serious injury.
- Always engage the safety lock switch on the spray gun when not in use to prevent accidental discharge.
- The Total Stop System (TSS) automatically shuts off the pump when the trigger is not engaged, prolonging pump life and ensuring safety.
- Wear appropriate personal protective equipment, including eye protection, during operation.
- Do not operate the pressure washer if any parts are damaged or missing.
- This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. Wash hands after handling.

LARGE RANGE OF EXTENSION

20ft Pressure Hose &
35ft Power Cord



Figure 1: Key safety features including GFCI device, Total Stop System, and Safety Lock.

PRODUCT COMPONENTS

Your Homdox Electric Pressure Washer comes with the following components:

- Main Pressure Washer Unit (1500W motor)
- High-Pressure Hose (20 Feet)
- Spray Gun with Safety Lock
- Stainless Steel Wand Extension
- 4 Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- Soap Bottle / Detergent Dispenser
- Universal Threaded Hose Connector
- Power Cord with GFCI Protection
- User Manual and Assembly Hardware



Figure 2: All components included with the Homdox Electric Pressure Washer.



Figure 3: Detailed view of the pressure washer unit, spray gun, wand, nozzles, and hose with key dimensions.

SETUP AND ASSEMBLY

Follow these steps to assemble your pressure washer before first use:

- 1. Attach the Handle:** Slide the top handle into the designated slots on the main unit until it clicks into place. Secure with the provided screws.
- 2. Attach the Hose Reel:** If your model includes a separate hose reel, attach it to the handle assembly as per the instructions.
- 3. Attach the Gun Handle Holder and Cord Hanger:** Snap the gun handle holder onto the side of the unit. Secure the cord hanger to the back of the unit using the provided screws.
- 4. Connect the Pigtail Hose:** Connect the short pigtail hose from the main unit to the hose reel (if applicable) or directly to the high-pressure outlet. Ensure a tight, leak-free connection.
- 5. Connect the High-Pressure Hose to the Spray Gun:** Screw the high-pressure hose securely onto the spray gun.
- 6. Attach the Wand Extension:** Insert the stainless steel wand extension into the front of the spray gun until it locks.
- 7. Attach a Nozzle:** Select the desired quick-connect nozzle and push it firmly into the end of the wand extension until it clicks into place.

8. **Connect Water Supply:** Attach your garden hose to the universal threaded hose connector on the pressure washer's water inlet. Ensure the water supply is turned on before powering the unit.
9. **Connect Power:** Plug the GFCI-protected power cord into a suitable grounded electrical outlet.

Your browser does not support the video tag.

Video 1: Homdox Electric Pressure Washer Unboxing and Assembly Guide. This video demonstrates the step-by-step process of unboxing and assembling the pressure washer, including attaching the handle, hose reel, and connecting hoses and accessories.

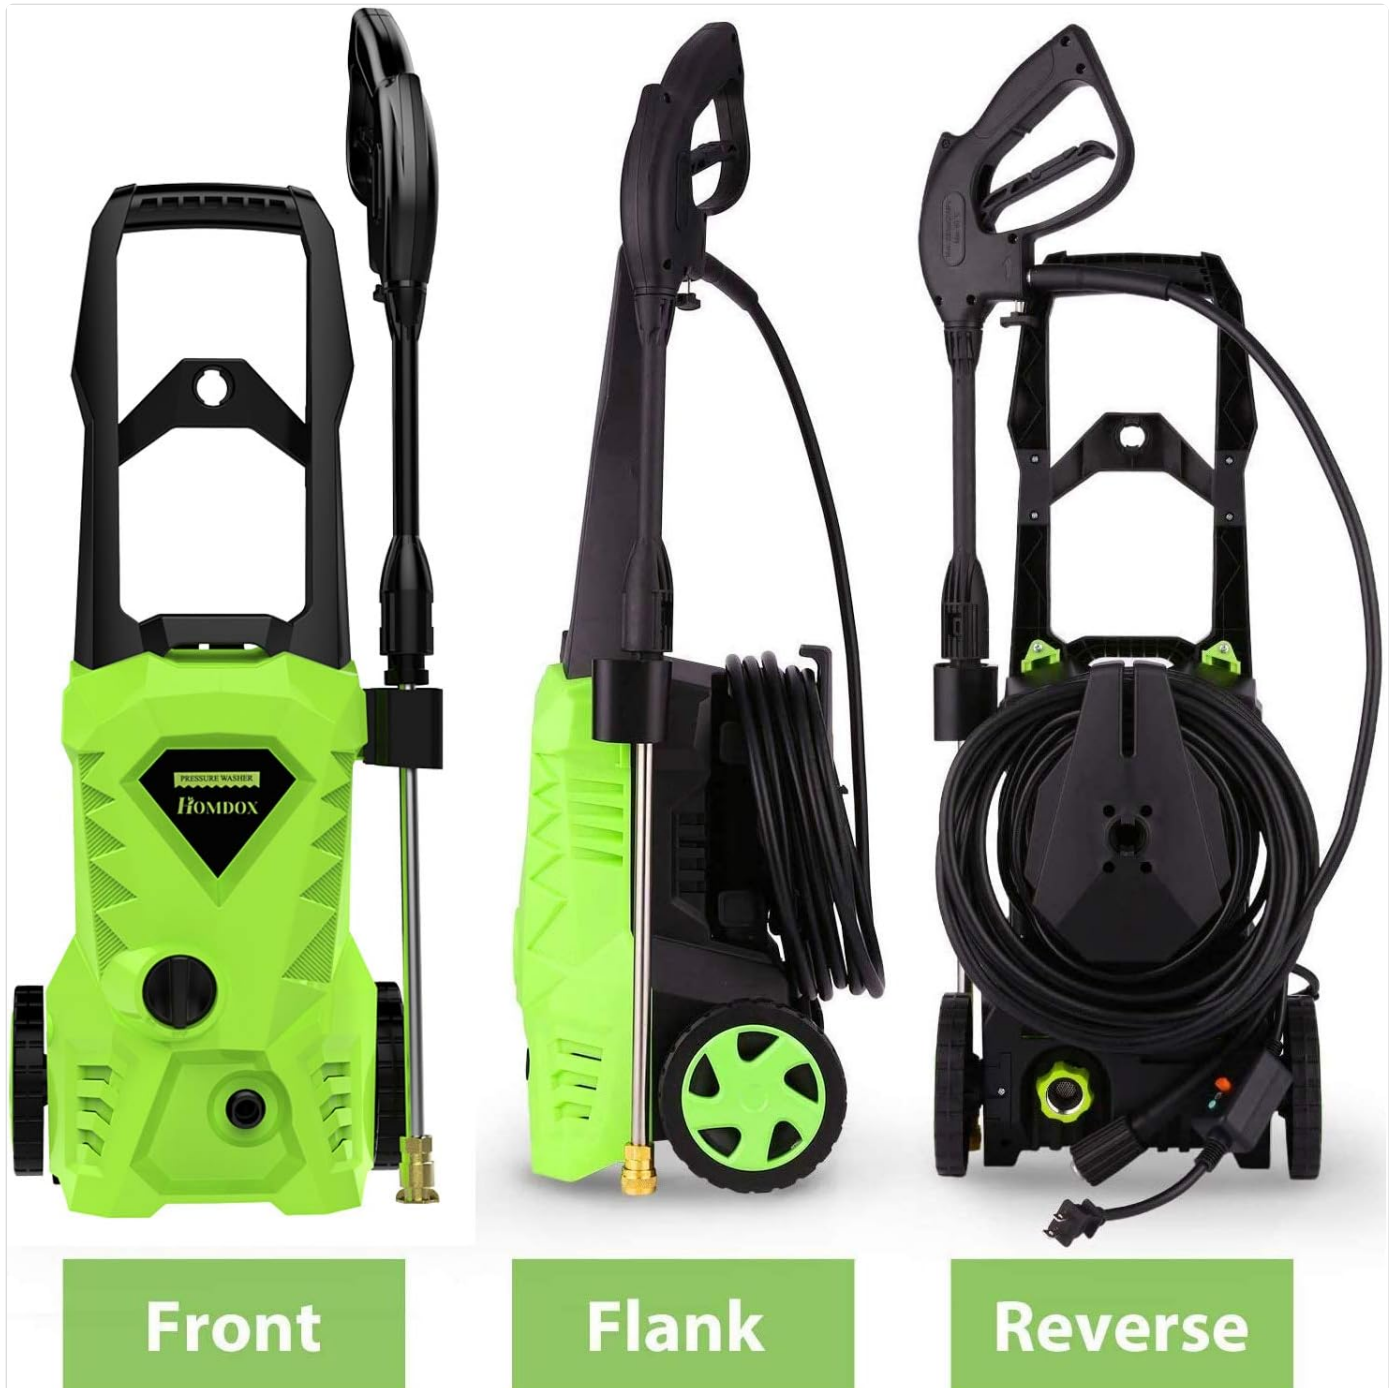


Figure 4: Visual guide for connecting the high-pressure hose, attaching nozzles, and connecting the water inlet.

OPERATING INSTRUCTIONS

Once assembled and connected to water and power, your pressure washer is ready for use.

General Operation:

1. Turn on the water supply to the pressure washer.
2. Turn the pressure washer's power switch to the "ON" position.

3. Press the ON button on the gun handle.
4. Pull the trigger on the spray gun to begin the high-pressure water flow.
5. When finished, turn the power switch to "OFF" and unplug the power cord.
6. Turn off the water supply and pull the trigger to release any remaining pressure in the system.

Nozzle Selection:

The Homdox pressure washer includes 4 quick-connect nozzles for various cleaning tasks:

- **0° (Red):** Pin-point jet for intense cleaning of stubborn stains. Use with extreme caution.
- **15° (Orange):** Narrow fan spray for concentrated cleaning on hard surfaces.
- **25° (Green):** Medium fan spray for general cleaning of most surfaces.
- **40° (White):** Wide fan spray for gentle cleaning of delicate surfaces or large areas.



Figure 5: Different quick-connect nozzles and their corresponding spray patterns, including the soap nozzle.

Soap Application:

For effective cleaning with detergent:

1. Unscrew the detergent dispenser bottle and fill with appropriate pressure washer detergent.
2. Close the detergent bottle and attach it to the spray gun.
3. Use the soap quick-connect nozzle (black) for optimal detergent application.
4. Apply detergent to the surface, allowing it to soak for a few minutes before rinsing with a high-pressure nozzle.



Figure 6: Demonstrating soap application for car washing, which can improve efficiency.

Typical Applications:

- **Car Washing:** Use the 40° or soap nozzle for gentle cleaning, then rinse with 25° nozzle.
- **Patio and Deck Cleaning:** Use the 25° or 15° nozzle for effective removal of dirt and grime.
- **Fence Cleaning:** The 25° nozzle is suitable for cleaning fences, removing weathered layers.
- **General Home Cleaning:** Ideal for siding, driveways, and outdoor furniture.



Figure 7: The pressure washer is suitable for smooth operation, strong power, less vibration, and low noise across various cleaning tasks.

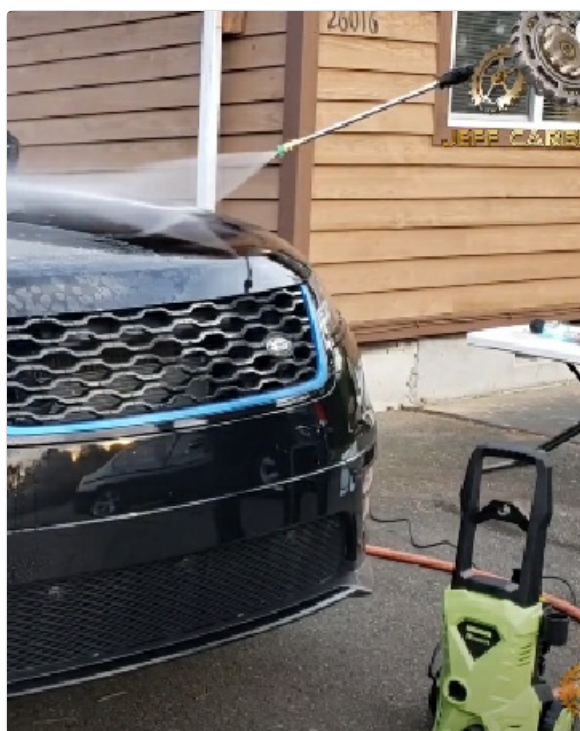


Figure 8: Visual comparison of a dirty car before and after cleaning with the pressure washer, showing renewed appearance.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- After each use, disconnect the water supply and power. Depressurize the system by pulling the trigger.
- Drain all water from the pump and hoses to prevent freezing in cold weather.
- Clean the nozzles regularly to prevent clogging. Use the included nozzle cleaning tool if necessary.
- Store the pressure washer in a dry, protected area away from freezing temperatures.
- Periodically check all connections and hoses for wear or damage. Replace any worn parts immediately.

TROUBLESHOOTING

If you encounter issues with your pressure washer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Pressure washer does not start	No power supply; GFCI tripped; Power switch off	Check power connection; Reset GFCI; Turn power switch ON
Low pressure	Insufficient water supply; Clogged nozzle; Air in pump	Ensure adequate water flow; Clean nozzle; Purge air from pump
Motor runs continuously	Air in pump; Leak in hose/gun; Inlet filter clogged	Purge air; Check connections; Clean filter
Water leaking	Loose connections; Damaged O-rings/seals	Tighten connections; Replace O-rings/seals

SPECIFICATIONS

- **Brand:** Homdox
- **Model:** dg
- **Power Source:** Corded Electric
- **Color:** Yellow
- **Maximum Pressure:** 2300 Pound per Square Inch (PSI)
- **Maximum Flow Rate:** 2.6 Gallons Per Minute (GPM)
- **Item Weight:** 12 Pounds
- **Hose Length:** 20 Feet
- **Product Dimensions:** 11.41"L x 10.15"W x 25.98"H
- **Manufacturer:** Homdox

WARRANTY & SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the official Homdox website. Keep your purchase receipt as proof of purchase for any warranty claims.

© 2023 Homdox. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Answered questions about this manual

Why does the power switch on my Homdox HD-AMD005226 electric pressure washer spring back to the OFF position when I try to turn it ON?

If the power switch on your Homdox HD-AMD005226 pressure washer will not stay in the "ON" position and springs back to "OFF," it typically indicates a mechanical failure of the switch assembly or an...

[Read full answer](#)

Open the live page

<https://manuals.plus/asin/B08ZMPNG4D>

More documents and user manuals: <https://manuals.plus/>