

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [DREAME](#) /

› [DREAME Cordless Stick Vacuum T20 Instruction Manual](#)

DREAME T20

DREAME Cordless Stick Vacuum T20 Instruction Manual

Model: T20 | Brand: DREAME



1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your DREAME T20 Cordless Stick Vacuum. Please read it thoroughly before use and retain it for future reference. The DREAME T20 is designed for versatile cleaning across various surfaces in your home.

2. SAFETY INFORMATION

- Do not vacuum liquids, hot ashes, burning substances (such as cigarette butts), or sharp objects (such as glass or nails).
- Keep the vacuum cleaner away from heat sources or humid areas (e.g., radiators, bathrooms) to prevent damage.
- Ensure the dust compartment is properly installed before operation.
- Do not use the product if the battery shows signs of serious swelling or is exposed to water.
- Only use the original charger to charge the vacuum cleaner.

3. PACKAGE CONTENTS

The DREAME T20 package includes the following items:

- 1x T20 Cordless Vacuum Cleaner (Main Body)
- 1x Smart Multi-brush Bar
- 1x Extension Rod
- 1x 2-in-1 Brush Nozzle
- 1x Crevice Nozzle
- 1x Mini Electric Brush
- 1x Flexible Extension Hose
- 1x 2-in-1 Charging & Storage Mount
- 1x Charger
- 1x User Manual
- Mounting Template Sticker, Screws, and Wall Anchors



Dreametech T20

High-powered Convenient& Efficient

T20 vacuum cleaner that uses aviation-level engineering to bring world-class cleaning power to anywhere you need it.

Image: All vacuum components and accessories are neatly arranged on a flat surface.

Your browser does not support the video tag.

Video: Official unboxing and overview of the DREAME T20 Cordless Stick Vacuum components.

4. SETUP AND ASSEMBLY

4.1. Basic Assembly

1. Connect the Smart Multi-brush Bar to the Extension Rod by aligning the pins and pushing until it clicks into place.
2. Connect the other end of the Extension Rod to the Main Body (handle) by aligning the pins and pushing until it clicks into place.

4.2. Attaching Accessories

Various attachments can be connected directly to the Main Body or to the Extension Rod for different cleaning tasks:

- **2-in-1 Brush Nozzle:** Suitable for vacuuming curtains, keyboards, ceilings, sofas, vehicle interiors, and coffee tables.
- **Crevice Nozzle:** Ideal for cleaning narrow gaps, corners, and hard-to-reach areas.
- **Mini Electric Brush:** Effective for removing pet hair and dust mites from sofas, bedding, and other fabric surfaces.
- **Flexible Extension Hose:** Provides extended reach for cleaning high places or tight spaces.



Images: Various cleaning attachments including the crevice nozzle, 2-in-1 brush, and mini electric brush.

5. CHARGING

Fully charge the vacuum cleaner before first use. A full charge typically takes about 4 hours. The display screen will show the current battery level as a percentage during charging.

5.1. Charging with Charger

Connect the charger directly to the charging port on the main body of the vacuum cleaner.

5.2. Charging with 2-in-1 Charging & Storage Mount

The 2-in-1 charging & storage mount can be installed on a wall. Ensure there are no electrical wires or pipes in the area. Use the provided mounting template sticker to mark drill points. Secure the mount to the wall using the provided screws and wall anchors. Once mounted, place the vacuum cleaner onto the mount to charge.



Image: The 2-in-1 charging and storage mount for the vacuum cleaner.

6. OPERATING INSTRUCTIONS

6.1. Display Screen Overview

The HD display screen provides real-time information on the vacuum's status:

- **Electronic Lock/Reset Filter:** Indicates if continuous cleaning mode is active or if the filter needs resetting.
- **Suction Level Status:** Shows the current suction mode (Eco, Auto, or Turbo).
- **Battery Percentage:** Displays the remaining battery life.
- **Switching Suction Level:** Button to cycle through suction modes.

Your browser does not support the video tag.

Video: Demonstrates the display screen features including language settings, suction levels, and continuous cleaning mode.

6.2. Setting Language

1. Press and hold the 'Switch Suction Level' button for 3 seconds to open the language list.
2. Press the button again to scroll through the available languages.
3. Once the desired language is highlighted, press and hold the button for 3 seconds to confirm your selection.

6.3. Switching Suction Level

Press the 'Switch Suction Level' button briefly to cycle between the three suction modes: **Eco** (for extended runtime), **Auto** (for balanced performance), and **Turbo** (for maximum suction).



Image: The DREAME T20 vacuum cleaner illustrating its three cleaning modes: Eco, Standard (Auto), and Boost (Turbo) with corresponding battery runtimes.

6.4. Continuous Cleaning Mode (Electronic Lock)

Press the 'Electronic Lock' button (top button on the display) briefly to activate continuous cleaning mode. The vacuum will continue to run without holding the trigger. Press it again to exit this mode.

6.5. Cleaning Different Surfaces

The Smart Multi-brush Bar automatically adjusts suction level between floor/tile and carpet. For optimal cleaning, select the appropriate suction level and attachment for the surface.



Images: The DREAME T20 vacuum cleaner effectively cleaning both hard floors and carpets.

7. MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner. Always ensure the vacuum is turned off and unplugged before performing any maintenance.

7.1. Emptying the Dustbin

1. Hold the vacuum cleaner over a trash can.
2. Press the dust compartment bottom cover release button to open the lid and empty the contents.



Image: A hand pressing the release button to empty the vacuum's dustbin into a trash receptacle.

7.2. Cleaning Filters

The pre-filter and HEPA filter should be cleaned regularly to maintain suction power. It is recommended to clean the dust compartment once every month, the pre-filter at least once every 3 months, and the cyclone system at least once every 6 months.

1. Twist and pull to remove the dust compartment, pre-filter, and cyclone assembly.
2. Rinse the pre-filter and HEPA filter with clean water. Do not use detergent.
3. Allow all parts to air dry completely for at least 24 hours before reassembling.

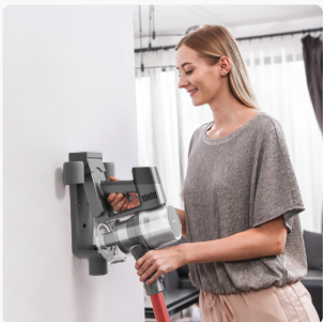


Image: Steps for disassembling and cleaning the vacuum's filters.

7.3. Cleaning the Brush Bar

Remove the brush bar from the Smart Multi-brush Bar. Use scissors or a cleaning tool to remove any tangled hair or debris. Rinse the brush bar with water if necessary and allow it to air dry completely before reinstallation.

8. TROUBLESHOOTING

Issue	Possible Cause	Solution
-------	----------------	----------

Issue	Possible Cause	Solution
Vacuum cleaner not working	Low battery / Overheat protection	Charge the vacuum / Allow to cool down
Weak suction	Dust compartment full / Filter clogged / Air duct blocked	Empty dustbin / Clean filters / Clear blockages
Brush bar stuck	Hair/debris tangled in brush bar	Clean the brush bar
Error message on display	Various internal issues	Refer to user manual for specific error codes or contact customer service.

9. SPECIFICATIONS

Feature	Detail
Brand	DREAME
Model Name	T20
Special Feature	Cordless, Powerful Suction, Various Attachments, Cartridge Filter
Filter Type	Cartridge
Is Cordless?	Yes
Capacity	5 Pounds
Recommended Uses	Hard Floor, Carpet, Tile
Form Factor	Handheld, Stick
Battery Description	Lithium-Ion
Noise Level	80 Decibels
Item Weight	13.79 pounds
Product Dimensions	30"L x 13.4"W x 6"H

10. WARRANTY AND SUPPORT

The DREAME T20 Cordless Stick Vacuum comes with a 1-year guarantee. For any product-related inquiries, technical support, or warranty claims, please contact DREAME customer service through their official channels or the retailer where the product was purchased.

Related Documents - T20

[illegible]

