

Maclean MC-791N

Maclean MC-791N Telescopic Ceiling and Floor TV Stand User Manual

Model: MC-791N

1. INTRODUCTION

Thank you for choosing the Maclean MC-791N Telescopic Ceiling and Floor TV Stand. This product is designed to provide a stable and versatile mounting solution for your television, allowing for flexible placement without the need for wall drilling. This manual contains important information regarding the safe installation, operation, and maintenance of your new TV stand. Please read it thoroughly before assembly and keep it for future reference.

2. SAFETY INFORMATION

Always observe the following safety precautions to prevent personal injury or damage to the product:

- Ensure the ceiling and floor surfaces are solid and capable of supporting the combined weight of the stand and your television.
- Do not exceed the maximum weight capacity of 30 kg (66 lbs) for the TV and 5 kg (11 lbs) for the shelf.
- This stand is designed for TVs with screen diagonals from 37 to 70 inches.
- Verify your TV's VESA compatibility with the stand's supported patterns: 200x200, 300x200, 300x300, 400x200, 400x300, 400x400, 600x400.
- Ensure the ceiling height is within the specified range of 210 cm (82.7 inches) minimum to 270 cm (106.3 inches) maximum.
- Keep children and pets away during assembly.
- Do not attempt to modify the product.
- Use only the provided parts and hardware.

3. PACKAGE CONTENTS

Please check that all components are present and undamaged before beginning assembly. If any parts are missing or damaged, contact customer support.

- Telescopic Pole Assembly
- TV Mounting Bracket
- Media Shelf
- Top and Bottom Base Plates

- Cable Management Clips
- Assembly Hardware Kit (screws, washers, spacers, etc.)
- Instruction Manual

4. PRODUCT SPECIFICATIONS

Feature	Specification
Model Number	MC-791N
Brand	Maclean
Material	Metal
Color	Black
Compatible TV Sizes	37 - 70 inches
Maximum TV Weight Capacity	30 kg (66 lbs)
Maximum Shelf Load Capacity	5 kg (11 lbs)
VESA Compatibility	200x200, 300x200, 300x300, 400x200, 400x300, 400x400, 600x400
Minimum Ceiling Height	210 cm (82.7 inches)
Maximum Ceiling Height	270 cm (106.3 inches)
Swivel Angle	360 degrees
Shelf Dimensions	36 x 25 cm (14.2 x 9.8 inches)

5. SETUP AND INSTALLATION

Follow these steps carefully to assemble and install your TV stand. No tools, screws, or drilling are required for the main pole installation.

5.1. Pole Assembly

1. Unpack all components and verify against the package contents list.
2. Assemble the telescopic pole sections according to the diagrams in your hardware kit. Ensure all connections are secure.
3. Attach the top and bottom base plates to the respective ends of the assembled pole. These plates provide stability and distribute pressure on the ceiling and floor.





Figure 5.1: Fully assembled Maclean MC-791N TV Stand, showing the telescopic pole, TV mounting bracket, and media shelf.







Figure 5.2: Detail of the top and bottom pressure plates, ensuring secure contact with ceiling and floor.

5.2. Positioning the Stand

1. Choose a location with solid ceiling and floor surfaces. The stand relies on tension between these surfaces for stability.
2. Place the stand in the desired position. Extend the telescopic pole until it firmly presses against both the ceiling and the floor. Ensure it is vertically aligned.
3. Adjust the height of the pole to fit your ceiling, ensuring it is securely tensioned. The minimum ceiling height is 210 cm and maximum is 270 cm.





Figure 5.3: Illustration of the telescopic height adjustment range of the stand.

5.3. Attaching the TV Mounting Bracket

1. Attach the TV mounting bracket to the main pole at your desired viewing height. Use the provided knob to secure it firmly.
2. Attach the VESA mounting arms to the back of your television using the appropriate screws and spacers from the hardware kit. Ensure the screws are tightened securely but do not overtighten.
3. Carefully lift your television and hook the VESA mounting arms onto the TV mounting bracket on the pole. Secure the TV to the bracket using the safety screws or clips as indicated in the hardware instructions.



Figure 5.4: Detail of the adjustment knob for securing the TV mounting bracket to the pole.

5.4. Installing the Media Shelf

1. Position the media shelf at your desired height below the TV.
2. Secure the shelf to the pole using the designated attachment mechanism. Ensure it is level and stable before placing any devices on it.
3. The shelf has a maximum load capacity of 5 kg and is ideal for Hi-Fi systems, game consoles, Blu-ray, or DVD players.



Figure 5.5: Close-up view of the shelf attachment point on the main pole.

5.5. Cable Management

Utilize the integrated cable management clips to route and organize your TV and device cables along the pole for a neat and tidy appearance.

6. OPERATION

6.1. Adjusting TV Height

To adjust the vertical height of your television, loosen the knob on the TV mounting bracket (Figure 5.4), carefully slide the bracket to the desired height, and then re-tighten the knob securely. Always support the TV when adjusting its height.





Figure 6.1: The TV mounting bracket can be adjusted vertically along the pole to achieve optimal viewing height.

6.2. Swiveling the TV

The TV mounting bracket allows for 360-degree swivel rotation. To swivel the TV, gently rotate the television to your preferred viewing angle. Ensure the main pole remains stable during rotation.

6.3. Using the Media Shelf

The integrated media shelf provides a convenient space for your auxiliary devices. Place items centrally on the shelf and ensure they do not exceed the 5 kg weight limit. Avoid placing items that could easily fall off.

7. MAINTENANCE

- Regularly check all screws and connections to ensure they remain tight and secure.
- Clean the stand with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- Periodically inspect the top and bottom pressure points for any signs of wear or instability.
- If relocating the stand, always fully de-tension the pole before moving it.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Stand feels unstable or wobbly.	Insufficient tension between ceiling and floor; uneven surfaces.	Ensure the telescopic pole is fully extended and securely tensioned. Verify ceiling and floor are flat and solid.
TV is not level.	TV mounting bracket not level; pole not perfectly vertical.	Adjust the TV mounting bracket. Re-check the vertical alignment of the main pole using a spirit level.
Shelf is sagging or unstable.	Exceeded weight capacity; improper attachment.	Reduce weight on the shelf. Re-attach the shelf, ensuring it is securely fastened to the pole.
Difficulty swiveling the TV.	Mechanism might be stiff or obstructed.	Ensure no cables are obstructing the swivel. Apply a small amount of silicone lubricant if necessary (avoid oil-based lubricants).

9. WARRANTY AND SUPPORT

9.1. Warranty Information

The Maclean MC-791N TV Stand comes with a **24-month manufacturer's warranty** from the date of purchase. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by improper installation, misuse, accidents, or unauthorized modifications.

Please retain your proof of purchase for warranty claims.

9.2. Customer Support

For technical assistance, missing parts, or warranty inquiries, please contact Maclean customer support. Refer to the contact information provided on the product packaging or the official Maclean website.

Note: Specific contact details are not provided in this manual. Please refer to your product packaging or the manufacturer's website for the most up-to-date support information.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question