

[Manuals.plus](#) /

› [Swan](#) /

› Swan Purple Retro 16 Inch Standing Fan User Manual

Swan SFA12610PURN

Swan Retro 16 Inch Standing Fan User Manual

Model: SFA12610PURN

Brand: Swan

1. IMPORTANT SAFETY INSTRUCTIONS

Please read these instructions carefully before using your Swan Retro 16 Inch Standing Fan. Keep this manual for future reference.

- Always ensure the voltage on the rating label corresponds to your mains voltage.
- Do not immerse the fan, plug, or cord in water or any other liquid.
- Unplug from the outlet when not in use, before assembling or disassembling parts, and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Close supervision is necessary when any appliance is used by or near children.
- Do not insert fingers or any other objects into the fan guard when the fan is operating.
- Ensure the fan is placed on a stable, flat surface to prevent tipping.
- This appliance is for household use only.

2. PRODUCT OVERVIEW

The Swan Retro 16 Inch Standing Fan (Model: SFA12610PURN) is designed to provide efficient cooling with a stylish retro aesthetic. It features three speed settings, an oscillation function for wide air distribution, and an adjustable tilt head.

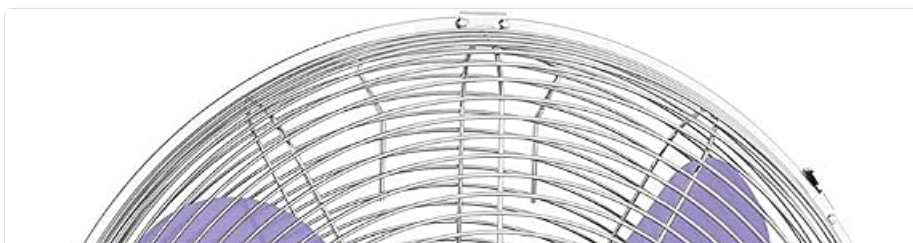






Image: Front view of the Swan Purple Retro 16 Inch Standing Fan. The fan features a purple base and main pole, with a chrome-plated metal grill covering purple fan blades. The fan head is mounted on an adjustable chrome pole.

Key Features:

- **3 Speed Settings:** Low, Medium, and High for customized airflow.
- **Oscillation Function:** 90-degree left-right oscillation for even air distribution.
- **Adjustable Tilt:** Allows directing airflow up or down.
- **Low Noise Levels:** Suitable for use in bedrooms, offices, or during sleep.
- **50-Watt Power:** Provides strong and effective cooling.
- **1.6m Power Cord:** Offers flexibility in placement.
- **Durable Construction:** Made from metal with a safety mesh guard.

3. ASSEMBLY AND SETUP

Follow these steps to assemble your standing fan:

1. **Base Assembly:** Attach the main pole to the fan base. Ensure it is securely fastened.
2. **Adjustable Pole:** Insert the adjustable chrome pole into the main pole. Secure it at the desired height using the height adjustment knob.
3. **Fan Head Attachment:** Mount the fan motor unit onto the top of the adjustable pole. Tighten any securing screws or knobs.
4. **Guard and Blade Installation:**
 - Remove the front guard and retaining nut from the motor shaft.
 - Place the rear guard onto the motor housing, aligning the holes.
 - Slide the fan blade onto the motor shaft, ensuring it is seated correctly.
 - Secure the fan blade with the retaining nut.
 - Attach the front guard to the rear guard, securing them together with the clips or screws provided.
5. **Placement:** Place the assembled fan on a firm, level surface, away from curtains or other objects that could obstruct airflow.

4. OPERATING INSTRUCTIONS

To operate your Swan Retro Standing Fan:

1. **Power Connection:** Plug the power cord into a suitable electrical outlet.
2. **Power On/Off:** Locate the power switch or dial, usually on the motor housing or control panel. Turn it to the 'ON' position or select a speed setting to start the fan.
3. **Adjusting Fan Speed:**

The fan has three speed settings:

 - **1 (Low):** Gentle breeze, ideal for quiet environments or small rooms.
 - **2 (Medium):** Moderate airflow, suitable for medium-sized rooms.
 - **3 (High):** Powerful airflow for maximum cooling in larger spaces.

Select your desired speed using the control dial or buttons.

- 4. **Oscillation Function:** To activate the oscillation (side-to-side movement), pull up the oscillation knob located on top of the motor housing. To stop oscillation and fix the fan in one direction, push the knob down.
- 5. **Adjusting Tilt:** To change the vertical angle of the fan head, gently push or pull the fan head to the desired position. The fan head will pivot on its axis.
- 6. **Power Off:** To turn off the fan, set the speed control to '0' or 'OFF' and unplug the fan from the power outlet.

5. CLEANING AND MAINTENANCE

Regular cleaning will help maintain your fan's performance and extend its lifespan.

- **Before Cleaning:** Always unplug the fan from the power outlet before cleaning.
- **Exterior Cleaning:** Wipe the exterior surfaces of the fan with a soft, damp cloth. Do not use abrasive cleaners or solvents, as these may damage the finish.
- **Blade and Guard Cleaning:**
 - Periodically, dust may accumulate on the fan blades and inside the guard.
 - To clean, you may need to carefully remove the front guard (refer to assembly instructions in Section 3 for reverse steps).
 - Wipe the blades and inside of the guards with a soft, dry or slightly damp cloth.
 - Ensure all parts are completely dry before reassembling the guard.
- **Storage:** When not in use for extended periods, store the fan in a cool, dry place, preferably in its original packaging to protect it from dust.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Fan does not turn on.	Not plugged in; Power outlet not working; Fan switch is off.	Ensure plug is fully inserted; Test outlet with another device; Turn fan switch to 'ON' or select a speed.
Weak airflow.	Fan speed set too low; Obstruction in front/rear grill; Dust accumulation on blades.	Increase speed setting; Remove any obstructions; Clean fan blades and grills (refer to Section 5).
Fan is noisy.	Loose parts; Fan not on a level surface; Obstruction.	Check for loose screws or components and tighten; Place fan on a stable, level surface; Ensure no objects are touching the blades or grill.
Oscillation not working.	Oscillation knob is pushed down.	Pull up the oscillation knob on top of the motor housing.

7. SPECIFICATIONS

- **Model:** SFA12610PURN

- **Power:** 50 Watts
- **Voltage:** 220-240V ~ 50/60Hz (Standard for AU/UK markets)
- **Diameter:** 16 Inch (Fan Head)
- **Dimensions:** Approximately 18 x 46 x 110 cm (L x W x H)
- **Weight:** Approximately 6.31 kg
- **Cord Length:** 1.6 meters
- **Material:** Metal (Powder Coated)
- **Colour:** Purple

8. WARRANTY AND SUPPORT

Your Swan Retro 16 Inch Standing Fan comes with a 1-year manufacturer's warranty. This warranty can be extended by a further year when you register your product online with Swan.

For warranty claims, technical support, or spare parts, please contact Swan customer service. Details can typically be found on the Swan official website or on the product packaging.

Please retain your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B08ZNVPP41>

More documents and user manuals: <https://manuals.plus/>