

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fresh 'n Rebel](#) /
- › [Fresh'n Rebel 10W Wireless Charging Pad User Manual](#)

### Fresh 'n Rebel 4CP100DP

# Fresh'n Rebel 10W Wireless Charging Pad User Manual

Model: 4CP100DP

## INTRODUCTION

Welcome to your Fresh'n Rebel 10W Wireless Charging Pad. This manual provides essential information for setting up, operating, and maintaining your device. Please read it thoroughly before use to ensure safe and optimal performance.

## PRODUCT OVERVIEW

The Fresh'n Rebel 10W Wireless Charging Pad is designed to provide convenient and efficient wireless charging for compatible devices. It features a compact design, robust safety mechanisms, and a fast-charging capability.



Image Description: A close-up view of the Fresh'n Rebel 10W Wireless Charging Pad in a soft pink color. The pad is square with rounded corners and a textured surface. A matching pink USB-C cable is plugged into the side of the pad. The Fresh'n Rebel logo is visible on a small tag attached to the side.

## SETUP

1. Connect the included USB-A to USB-C cable to the USB-C input port on the wireless charging pad.
2. Connect the USB-A end of the cable to the provided 18W power adapter.
3. Plug the 18W power adapter into a standard wall outlet.
4. The diffused and downward-facing LED lights on the charging pad will illuminate briefly, indicating it is powered on and ready for use.

## OPERATING INSTRUCTIONS

To charge your device:

1. Ensure the wireless charging pad is connected to a power source.
2. Place your Qi-compatible device (e.g., smartphone, earbuds case) directly onto the center of the charging pad.
3. The LED indicator lights will change to confirm that charging has begun.
4. For optimal charging, ensure your device is properly aligned with the center of the pad.
5. The rubber feet on the base of the pad help prevent movement during charging.

## SAFETY INFORMATION

- Do not place metal objects, credit cards, or other foreign objects on the charging pad, as this may trigger Foreign Object Detection Protection and prevent charging or cause damage.
- Avoid exposing the device to extreme temperatures, direct sunlight, or moisture.
- Do not disassemble, modify, or attempt to repair the device yourself.
- This device includes Overcurrent and Overload Protection, and Overheating and Short Circuit Protection for safe operation.
- Use only the provided 18W adapter and cable for optimal performance and safety.

## MAINTENANCE

- To clean the charging pad, disconnect it from the power source and wipe it with a soft, dry cloth.
- Do not use abrasive cleaners or solvents.
- Keep the charging pad free from dust and debris.

## TROUBLESHOOTING

### Device not charging:

- Ensure the charging pad is properly connected to the power adapter and wall outlet.
- Verify that your device is Qi-compatible.
- Reposition your device on the center of the charging pad.
- Remove any thick phone cases that might interfere with wireless charging.
- Check for any foreign objects on the charging pad.

### Slow charging:

- Ensure you are using the provided 18W power adapter.
- Confirm your device supports fast wireless charging.
- Remove any objects or cases that might be causing interference.

## SPECIFICATIONS

Feature	Detail
Model Number	4CP100DP
Brand	Fresh 'n Rebel
Wireless Charging Output	10W
Adapter Output	18W
Input	USB-C
Cable Included	USB-A to USB-C (1.5m)
Certifications	Qi certified (version 1.2.4)
Safety Features	Foreign Object Detection, Overcurrent Protection, Overload Protection, Overheating Protection, Short Circuit Protection

## WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your purchase or visit the official Fresh 'n Rebel website.

Online resources: [Fresh 'n Rebel Brand Store on Amazon](#)