

[Manuals.plus](#) /

› [SteamOne](#) /

› SteamOne RP10B Anti-lint Shaver Instruction Manual

## SteamOne RP10B

# SteamOne RP10B Anti-lint Shaver Instruction Manual

Model: RP10B

## 1. PRODUCT OVERVIEW

---

The SteamOne RP10B Anti-lint Shaver is a USB rechargeable electric pill remover designed to effectively remove lint and pills from various fabrics. It features an ergonomic design, three stainless steel blades, and a safety lock function for secure operation.



Image 1.1: The SteamOne RP10B Anti-lint Shaver positioned next to a stack of sweaters, illustrating its purpose in fabric care.

## 2. SAFETY INFORMATION

---

- **Safety Lock Function:** The device is equipped with a safety lock that prevents operation when the blade cover is

exposed or during charging. Ensure the cover is securely in place before use.

- Keep out of reach of children.
- Do not use on wet fabrics.
- Avoid pressing the shaver too hard against the fabric to prevent damage.
- Only use the provided charging cable.

### 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- Main Unit (SteamOne RP10B Anti-lint Shaver)
- Delicate Guard
- Maintenance Brush
- Charging Cable (USB A to C)
- Instruction Manual



Image 3.1: The anti-lint shaver displayed with its USB-C charging cable and small cleaning brush, indicating included accessories.

## 4. SETUP

---

The SteamOne RP10B Anti-lint Shaver requires minimal setup. Ensure the device is fully charged before first use.

1. Unpack all components from the box.
2. Inspect the device for any visible damage.
3. Proceed to the charging section to prepare the device for operation.

## 5. CHARGING

---

The device is USB rechargeable. A full charge takes approximately 70 minutes and provides about 45 minutes of operation.

1. Connect the USB-C end of the charging cable to the port on the shaver.

2. Connect the USB-A end of the charging cable to a compatible USB power adapter (not included) or a computer USB port.
3. The charging indicator light will illuminate.
4. Once fully charged, disconnect the cable. The device will not operate while charging due to the safety lock function.

## 6. OPERATING INSTRUCTIONS

---

To use the Anti-lint Shaver:

1. Ensure the device is charged and the blade cover is securely attached.
2. Place the fabric to be treated on a flat, firm surface.
3. Press the power button to turn on the shaver.
4. Gently glide the shaver head over the pilled or lint-covered area of the fabric. Use light, even pressure.
5. Avoid applying excessive force, as this may damage the fabric or the shaver.
6. After use, press the power button to turn off the device.



Image 6.1: An illustration showing the ergonomic design of the shaver, held comfortably in a hand.

## 7. USING THE DELICATE GUARD

---

The included delicate guard allows for adjustable cutting depth, making the shaver suitable for various fabric types, including more delicate materials.

1. To attach the delicate guard, align its tabs with the slots on the shaver head and twist gently until it locks into place.
2. When the delicate guard is attached, the cutting depth is increased, providing a safer distance between the blades and the fabric surface.
3. For tougher pills or more durable fabrics, the delicate guard can be removed for a closer shave.
4. To remove, twist the guard in the opposite direction and lift it off.



Image 7.1: The shaver head shown with the delicate guard separated, illustrating how it can be attached or removed.

## 8. MAINTENANCE AND CLEANING

---

Regular cleaning ensures optimal performance and extends the life of your shaver.

1. Ensure the shaver is turned off and disconnected from any power source.
2. Remove the delicate guard (if attached).
3. Rotate the mesh cover counter-clockwise and lift it off.
4. Carefully remove any accumulated lint from the collection chamber.
5. Use the provided maintenance brush to clean lint and debris from the blades and the inside of the mesh cover.
6. Reassemble the mesh cover and delicate guard (if desired) by aligning and twisting clockwise until secure.



Image 8.1: The shaver's head detached from the body, revealing the internal blade mechanism and lint collection area for cleaning.

## 9. TROUBLESHOOTING

| Problem                  | Possible Cause                                                                              | Solution                                                                                                                         |
|--------------------------|---------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------|
| Shaver does not turn on. | Battery is low or depleted.<br>Blade cover is not securely attached.<br>Device is charging. | Charge the device fully.<br>Ensure the mesh cover is properly aligned and twisted into place.<br>Disconnect from charging cable. |

| Problem                        | Possible Cause                                                                                                      | Solution                                                                                                                                                                                                                                      |
|--------------------------------|---------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Poor lint removal performance. | Lint collection chamber is full.<br>Blades are dull or obstructed.<br>Delicate guard is attached for heavy pilling. | Clean the lint collection chamber and blades.<br>Clean blades with the maintenance brush. If performance does not improve, blades may need replacement (contact support).<br>Remove the delicate guard for a closer shave on durable fabrics. |
| Device stops during operation. | Battery is depleted.<br>Safety lock activated (e.g., cover loosened).                                               | Recharge the device.<br>Check if the mesh cover is loose and re-secure it.                                                                                                                                                                    |

## 10. SPECIFICATIONS

| Feature               | Detail                                     |
|-----------------------|--------------------------------------------|
| Product Model Number  | RP10B                                      |
| Product Dimensions    | Approx. 7.5D x 7.5W x 10.8H cm             |
| Product Weight        | Approx. 145 Grams                          |
| Power Source          | USB DC 5V 1A rechargeable                  |
| Built-in Battery      | NiMH 3/2AA 600mAh 2.4V                     |
| Charging Cable Length | Approx. 577 mm (USB A to C)                |
| Blades                | 3 Stainless Steel Blades                   |
| Rotation Speed        | Up to 8,000 RPM                            |
| Shaver Face Diameter  | Approx. 66 mm                              |
| Charging Time         | Approx. 70 minutes                         |
| Operating Time        | Approx. 45 minutes (per full charge)       |
| Material              | Stainless Steel (blades), Plastic (handle) |
| Country of Origin     | China                                      |

## 11. WARRANTY AND SUPPORT

This product comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims.

For technical support, warranty claims, or inquiries about replacement parts, please contact SteamOne customer service through the official website or your retailer.

*Note: Warranty may vary based on region and retailer.*

## ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

### Name

Anonymous

### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B08ZS75D1Z>

More documents and user manuals: <https://manuals.plus/>