

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [Walfront](#) /

> [Walfront 37-Key Electric Piano Keyboard with Microphone Instruction Manual](#)

Walfront Walfrontwzu635qy1c6021-14

Walfront 37-Key Electric Piano Keyboard Instruction Manual

Model: Walfrontwzu635qy1c6021-14

[Contents](#) [Setup](#) [Introduction](#) [Safety Information](#) [Package](#)
[Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the Walfront 37-Key Electric Piano Keyboard. This portable electronic keyboard is designed for beginners and offers a range of features including multiple tones, rhythms, demo songs, and a recording function. It can be powered via USB or batteries, making it suitable for both indoor and outdoor use. This manual provides essential information for safe and effective operation of your new instrument.

2. SAFETY INFORMATION

- **Power Source:** Use only the specified power sources (USB charging or 3 x 1.5V AA batteries). Do not mix old and new batteries, or different types of batteries.
- **Water and Moisture:** Keep the keyboard away from water, moisture, and high humidity. Do not operate with wet hands.
- **Heat Sources:** Avoid placing the keyboard near heat sources such as radiators, heat registers, stoves, or other heat-producing appliances.
- **Cleaning:** Clean only with a dry cloth. Do not use liquid cleaners or aerosol cleaners.
- **Ventilation:** Do not block any ventilation openings. Ensure proper airflow around the unit.
- **Children:** This product is designed for children, but adult supervision is recommended during use, especially when handling batteries and power connections. The materials are safe and environmentally friendly with smooth edges to prevent injury.
- **Disassembly:** Do not attempt to disassemble or modify the keyboard. Refer all servicing to qualified service personnel.

3. PACKAGE CONTENTS

Please check the package to ensure all items are present and in good condition:

- 1 x Walfront 37-Key Electric Piano Keyboard
- 1 x Microphone
- 1 x USB Power Cord



Image: The Walfront 37-Key Electric Piano Keyboard, including the detachable microphone and USB power cable.



Image: A close-up view of the included microphone and USB power cable.

4. SETUP

4.1 Powering the Keyboard

The keyboard offers two power options:

1. **USB Power:** Connect the provided USB power cord to the USB charging port on the keyboard and to a compatible USB power adapter (not included) or a computer USB port.
2. **Battery Power:** The keyboard requires 3 x 1.5V AA batteries (not included). Open the battery compartment on the underside of the keyboard, insert the batteries with correct polarity, and close the compartment securely.



Image: Detail showing the USB power charging interface and microphone connector on the side of the keyboard.

4.2 Connecting the Microphone

Insert the microphone's plug into the microphone input jack located on the side of the keyboard. The microphone can be stored in a dedicated slot on the underside of the keyboard when not in use.



Image: Top and bottom views of the keyboard, highlighting the microphone storage compartment on the underside.

4.3 Unboxing and Initial Setup Video

Your browser does not support the video tag.

Video: This video demonstrates the unboxing process and initial setup of the Walfront 37-Key Electric Piano Keyboard, including connecting the microphone and powering the device.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

Locate the power switch on the keyboard. Slide it to the "ON" position to power on the device. Slide it to "OFF" when not in use to conserve power.

5.2 Adjusting Volume

Use the volume control buttons or knob (if present) to adjust the overall sound output of the keyboard. The microphone volume is integrated with the main volume.

5.3 Playing the Keyboard

The keyboard features 37 keys. Press the keys to produce musical notes. Experiment with different key combinations to create melodies.



Image: A user's hands demonstrating playing the 37-key electric piano keyboard.

5.4 Tones, Rhythms, and Songs

The keyboard includes various pre-programmed features:

- **Tones:** Select from 2 different tones to change the instrument sound.
- **Rhythms:** Choose from 4 rhythms to add a beat to your music.
- **Percussion:** Utilize the 4 percussion sounds to enhance your compositions.
- **Demo Songs:** Enjoy 16 pre-recorded demo songs. Press the corresponding button to play them.



Image: The control panel of the keyboard, illustrating buttons for selecting tones, rhythms, percussion, and demo songs.

5.5 Recording Function

The keyboard features a recording function:

- Press the "Record" button to start recording your playing.
- Play your desired melody.
- Press the "Play" button to listen to your recorded performance.

5.6 Using the Microphone

Once connected, the microphone allows you to sing along while playing the piano. Ensure the microphone is close to your mouth for optimal sound capture. The microphone volume is controlled by the main volume adjustment.

6. MAINTENANCE

- **Cleaning:** Wipe the keyboard surface with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight and extreme temperatures. When storing for extended periods, remove batteries to prevent leakage.
- **Handling:** Handle the keyboard with care to avoid dropping or impacting it, which could damage internal components.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
No sound from the keyboard.	<ul style="list-style-type: none"> Keyboard is not powered on. Volume is set too low. Batteries are depleted or incorrectly inserted. USB cable is not properly connected. 	<ul style="list-style-type: none"> Ensure the power switch is in the "ON" position. Increase the volume using the volume controls. Replace batteries or check polarity. Verify USB cable connection to both keyboard and power source.
Microphone not working.	<ul style="list-style-type: none"> Microphone not properly connected. Volume is too low. 	<ul style="list-style-type: none"> Ensure the microphone plug is fully inserted into the jack. Increase the main volume of the keyboard.
Keys are unresponsive.	<ul style="list-style-type: none"> Power issue. Internal malfunction. 	<ul style="list-style-type: none"> Check power supply (USB or batteries). If the problem persists, contact customer support.

8. SPECIFICATIONS

Feature	Detail
Model Number	Walfrontwzu635qy1c6021-14
Brand	Walfront
Number of Keys	37
Power Source	USB Charging (5V) or 3 x 1.5V AA Batteries
Connectivity	USB (for power), Microphone Input
Special Features	Microphone, Recording Function, 2 Tones, 16 Demo Songs, 4 Rhythms, 4 Percussion, Adjustable Music Volume, Portable
Material	Environmentally friendly plastic
Item Weight	Approx. 1.17 pounds (0.53 kg)
Product Dimensions	Approx. 408mm (16.1 inches) L x 150mm (5.9 inches) W x 41mm (1.6 inches) H
Color	Pink
Skill Level	Beginner



Image: Diagram illustrating the dimensions of the keyboard: approximately 408mm (16.1 inches) in length, 150mm (5.9 inches) in width, and 41mm (1.6 inches) in height.

9. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Walfront website. Keep your proof of purchase for any warranty claims.

