

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [T TOPVISION](#) /

› [TOPVISION 50W Sound Bar Instruction Manual](#)

T TOPVISION SS01

TOPVISION 50W Sound Bar Instruction Manual

Model: SS01

INTRODUCTION

Thank you for purchasing the TOPVISION 50W Sound Bar. This manual provides detailed instructions for setting up, operating, and maintaining your sound bar to ensure optimal performance and longevity. Please read this manual thoroughly before use and retain it for future reference.

Key Features

- **50W Power Output:** Delivers powerful and immersive audio.
- **2 Full-Range Drivers:** Provides high-fidelity stereo sound.
- **Built-in DSP Technology:** Ensures stable and accurate sound output.
- **3 Equalizer Modes:** Music, Movie, and News modes for optimized audio.
- **Wireless Bluetooth 5.0:** Fast, efficient, and stable wireless connection.
- **Multiple Wired Connections:** Supports 3.5mm (AUX & RCA) and Optical audio input.
- **Compact Design:** 16-inch mini soundbar, ideal for various spaces.

PACKAGE CONTENTS

Please check the package contents carefully. If any items are missing or damaged, contact customer support.

- TOPVISION 50W Sound Bar (Model: SS01)
- Remote Control
- Power Adapter
- Optical Cable

- 3.5mm AUX Cable
- RCA to 3.5mm Audio Cable
- Wall Mount Screws and Anchors
- User Manual (this document)



Image: Contents of the TOPVISION 50W Sound Bar package, showing the sound bar, remote control, power adapter, optical cable, 3.5mm AUX cable, RCA to 3.5mm audio cable, and wall mount accessories.

PRODUCT OVERVIEW

Front and Side View



Image: The TOPVISION Sound Bar shown from the front, alongside its remote control. The sound bar features a black mesh grille and control buttons on the right side.

Dimensions



Image: A diagram illustrating the dimensions of the sound bar: 15.7 inches in length, 3.4 inches in width, and 2.8 inches in height.

height.

Internal Components



Image: An exploded view diagram of the sound bar highlighting its internal Hi-Fi Stereo Speaker components, specifically the dual powerful full-range drivers responsible for audio output.

SETUP

Placement

Place the sound bar on a stable, flat surface in front of your TV or monitor. Ensure there are no obstructions in front of the speakers for optimal sound dispersion. The compact size allows for versatile placement in various small spaces.

Connecting to Power

1. Connect the power adapter to the DC IN port on the back of the sound bar.
2. Plug the power adapter into a wall outlet.
3. The sound bar will enter standby mode, indicated by a red LED light.

Audio Connections

The sound bar supports multiple audio input options:



Image: A visual representation of the various connection types supported by the sound bar, including USB, AUX, and Optical inputs, along with compatible devices such as TV, PC, Laptop, Projector, Tablet, and Phone.

Optical Connection (Recommended for TVs)

1. Connect one end of the optical cable to the OPTICAL port on the sound bar.
2. Connect the other end to the Optical Digital Audio Out port on your TV.
3. **Important:** Go to your TV's audio settings and set the Digital Audio Output to "PCM" (Pulse-Code Modulation). This is crucial for optical input to function correctly.

AUX/RCA Connection

1. For AUX connection, use the 3.5mm AUX cable to connect the sound bar's AUX port to your device's

3.5mm audio output.

2. For RCA connection, use the RCA to 3.5mm audio cable. Connect the RCA ends to your TV's RCA audio output (red and white ports) and the 3.5mm end to the sound bar's AUX port.

USB Connection

Insert a USB flash drive containing MP3 audio files into the USB port on the sound bar. The sound bar will automatically switch to USB mode and begin playback.

OPERATING INSTRUCTIONS

Power On/Off


Press the power button on the sound bar or the remote control to turn the unit on or off.

Mode Selection

Press the 'M' (Mode) button on the sound bar or the remote control to cycle through input modes: Bluetooth, Optical, AUX, USB.

Bluetooth Pairing

1. Turn on the sound bar and switch to Bluetooth mode. A voice prompt will announce "Bluetooth mode" and the indicator light will flash blue.
2. Enable Bluetooth on your device (smartphone, tablet, PC).
3. Search for "TOPVISION Sound Bar" in your device's Bluetooth list and select it to pair.
4. Once connected, a voice prompt will announce "Connected" and the indicator light will turn solid blue.

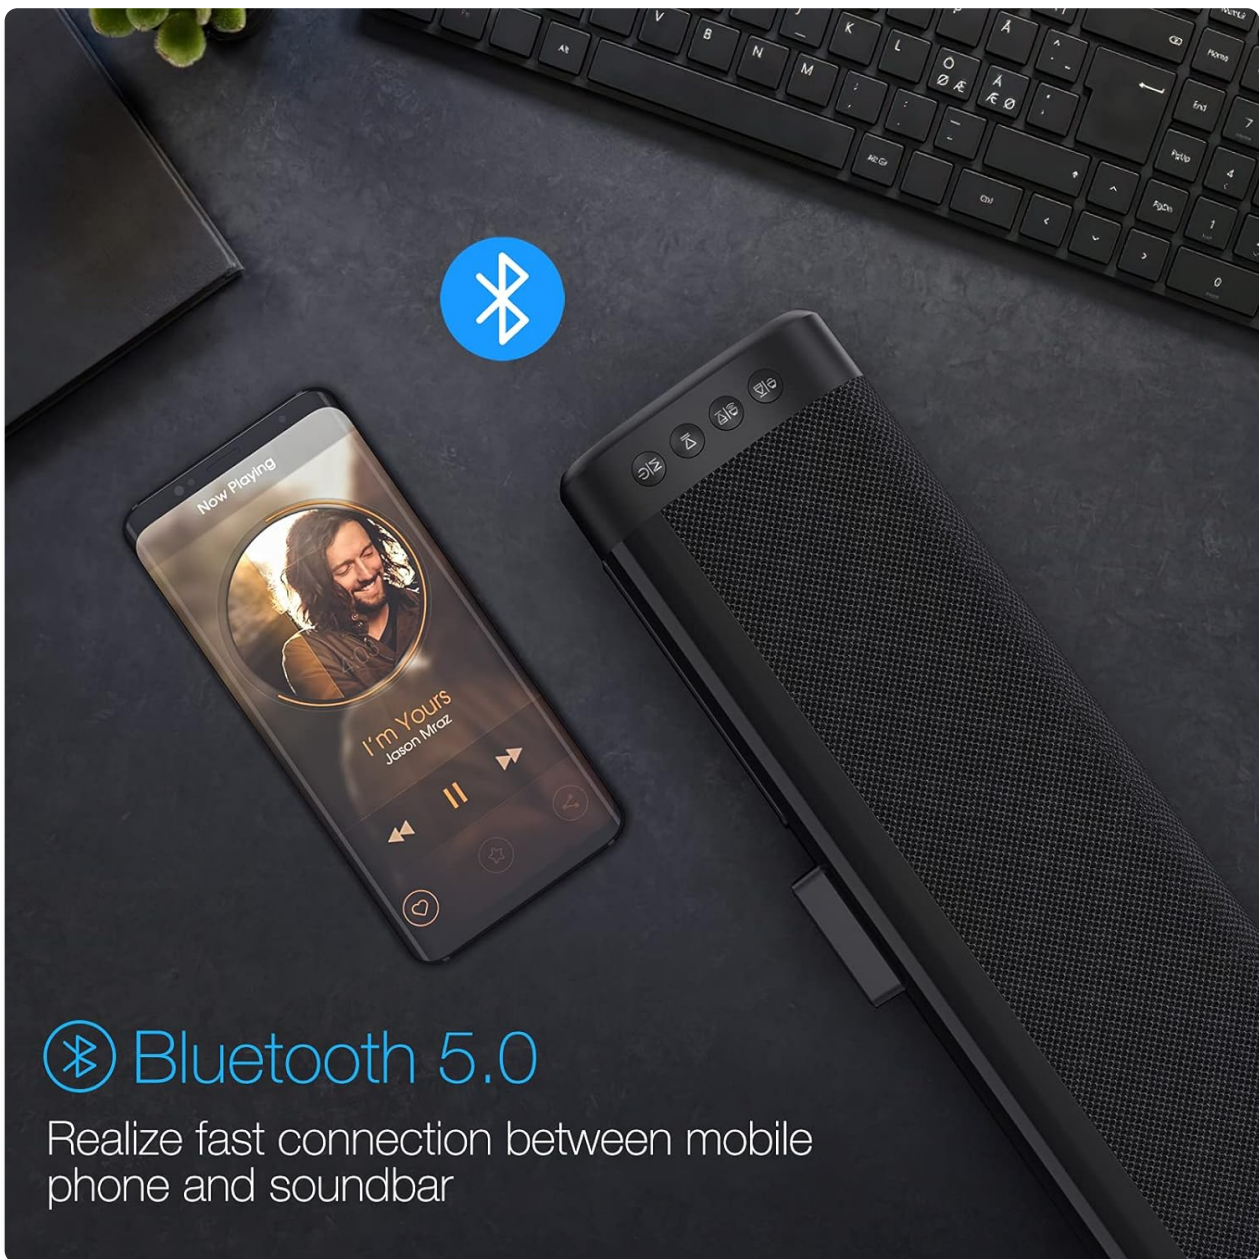

Bluetooth 5.0

Realize fast connection between mobile phone and soundbar

Image: The sound bar connected wirelessly via Bluetooth 5.0 to a smartphone, demonstrating fast and stable transmission for audio playback.

Volume Control

Use the Volume Up (+) and Volume Down (-) buttons on the sound bar or remote control to adjust the volume.

Equalizer Modes (EQ)

Press the 'EQ' button on the remote control to switch between the three preset equalizer modes:

- **Music Mode:** Enhances clarity and provides a pleasant sound for music.
- **Movie Mode:** Offers deeper bass and room-filling sound for cinematic experiences.
- **News Mode:** Optimizes vocal clarity, making conversations crisp and clean.

DSP Built-in DSP Technology

Ensured 3 sound modes output is more stable and accurate



Image: A graphic illustrating the sound bar's built-in DSP technology and its three distinct equalizer modes: News, Movie, and Music, each tailored for different audio experiences.

Remote Control Operation

The included remote control provides full functionality for the sound bar, including power, mode selection, volume, playback controls (play/pause, skip tracks), and EQ mode selection.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the surface of the sound bar. Do not use abrasive cleaners or solvents.
- **Storage:** When not in use for extended periods, unplug the sound bar from the power outlet and store it in a cool, dry place.
- **Avoid Liquids:** Keep the sound bar away from water and other liquids to prevent damage.
- **Ventilation:** Ensure proper ventilation around the sound bar to prevent overheating. Do not block any

ventilation openings.

TROUBLESHOOTING

Problem	Possible Cause	Solution
No power	Power cable not connected; Power outlet not working.	Ensure power cable is securely connected. Try a different power outlet.
No sound	Incorrect input mode; Volume too low; TV audio settings incorrect (for optical).	Select the correct input mode (Optical, AUX, Bluetooth). Increase volume. For optical, ensure TV audio output is set to PCM.
Bluetooth connection issues	Sound bar not in pairing mode; Device too far; Interference.	Ensure sound bar is in Bluetooth pairing mode. Move device closer. Avoid strong electromagnetic interference.
Remote control not working	Batteries low/dead; Obstruction between remote and sound bar.	Replace remote control batteries. Ensure clear line of sight to the sound bar's sensor.

SPECIFICATIONS

Feature	Detail
Model Name	TOPVISION Sound Bar
Model Number	SS01
Speaker Maximum Output Power	50 Watts
Speaker Type	Soundbar
Surround Sound Channel Configuration	2.0
Connectivity Technology	Bluetooth, Optical, AUX, USB
Wireless Communication Technology	Bluetooth 5.0

Feature	Detail
Bluetooth Range	10 Meters
Product Dimensions	15.7 x 3.4 x 2.8 inches
Item Weight	3.41 pounds
Color	Black
Power Source	Corded Electric
Special Features	Built-in DSP, 3 EQ Modes (Music, Movie, News), Bass Boost, Hi-Res Audio
Included Components	Remote Control

OFFICIAL PRODUCT VIDEOS

Watch these official videos for additional guidance and demonstrations.

Your browser does not support the video tag.

Video: A demonstration of the TOPVISION sound bar, highlighting its compact size and suitability for various TV setups. This video is provided by the seller, TOPNO.

WARRANTY AND SUPPORT

TOPVISION provides lifetime technical support for this product. If you encounter any issues or have questions, please contact TOPVISION customer support via Amazon or through the contact information provided in your product packaging. Please retain your proof of purchase for warranty claims.