

Atlantic ATYX14MS

Atlantic ATYX14MS Freestanding Dishwasher User Manual

Model: ATYX14MS

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your new Atlantic ATYX14MS freestanding dishwasher. Please read this manual thoroughly before using the appliance and keep it for future reference.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, or injury to persons.

- **Electrical Safety:** Ensure the dishwasher is properly grounded. Do not use extension cords or adapter plugs. Disconnect power before servicing.
- **Water Supply:** Connect the dishwasher to a cold water supply using new hoses. Do not reuse old hoses.
- **Child Safety:** Keep children away from the dishwasher, especially when it is operating. Do not allow them to play inside or on the appliance.
- **Detergent Safety:** Use only detergents specifically designed for dishwashers. Keep detergents out of reach of children.
- **Loading:** Load sharp items (knives, forks) with handles up to prevent injury.
- **Ventilation:** Ensure adequate ventilation around the appliance.

3. PRODUCT OVERVIEW

3.1. Components and Features

The Atlantic ATYX14MS is a freestanding dishwasher designed for convenience and efficiency. It features a silver finish and a user-friendly control panel.

- **Capacity:** 12 standard place settings.
- **Programs:** 5 distinct washing programs to suit various needs.
- **Temperature Settings:** 4 different temperature options.
- **Delayed Start:** Options for 3, 6, or 9-hour delayed start.

- **Energy Efficiency:** Rated E (equivalent to A++ under previous energy labeling).

3.2. Control Panel

The control panel is located on the top front edge of the dishwasher door. It typically includes program selection buttons, indicator lights, and a start/pause button. Refer to the diagram below for specific button functions.



Figure 1: Front view of the Atlantic ATYX14MS freestanding dishwasher. The image displays the silver exterior, the integrated handle, and the control panel located on the top right, featuring a rotary dial and several indicator lights and buttons.

4. INSTALLATION AND SETUP

4.1. Unpacking

Carefully remove all packaging materials. Inspect the dishwasher for any shipping damage. Report any damage to your retailer immediately.

4.2. What's in the Box

Your Atlantic ATYX14MS dishwasher package should include the following components:

- Inlet hose
- Power cable
- Drying system components (integrated)
- Detergent/Rinse aid dispenser (integrated)
- Cutlery basket
- Salt funnel
- Adapter
- Drain hose

4.3. Positioning the Dishwasher

Place the dishwasher on a level, stable surface. Ensure there is sufficient space for opening the door and for water and electrical connections.

4.4. Water and Electrical Connections

1. Connect the inlet hose to a cold water tap with a 3/4-inch thread. Ensure the connection is tight to prevent leaks.
2. Connect the drain hose to a suitable drain pipe or sink trap. Ensure the hose is not kinked or obstructed.
3. Plug the power cable into a grounded electrical outlet. The appliance requires 2.4E+2 Volts.

It is recommended to have a qualified technician perform the water and electrical connections.

5. OPERATING INSTRUCTIONS

5.1. Before First Use

1. Fill the salt dispenser with dishwasher salt (if applicable for your water hardness).
2. Fill the rinse aid dispenser.
3. Load a small amount of detergent into the dispenser.
4. Run an empty cycle to clean the interior.

5.2. Loading the Dishwasher

Proper loading ensures optimal cleaning results and prevents damage to dishes. Scrape off large food particles before loading.

- Place larger items in the lower basket.
- Place glasses, cups, and smaller items in the upper basket.
- Load cutlery into the cutlery basket, ensuring sharp ends face down.
- Do not overload the dishwasher.

5.3. Adding Detergent and Rinse Aid

Open the detergent dispenser and add the recommended amount of dishwasher detergent. Close the dispenser lid firmly. Check the rinse aid indicator and refill if necessary.

5.4. Program Selection and Start

1. Close the dishwasher door.
2. Select the desired washing program using the program selector or buttons on the control panel.
3. If desired, select a delayed start time (3, 6, or 9 hours).
4. Press the Start button to begin the cycle.

5.5. Ending a Cycle

Once the cycle is complete, the dishwasher will signal with an audible alert or indicator light. Open the door slightly to allow steam to escape before unloading the dishes.

6. MAINTENANCE AND CARE

6.1. Cleaning the Filters

Regularly clean the filter system located at the bottom of the dishwasher tub to ensure optimal performance. Remove food debris and rinse under running water.

6.2. Cleaning the Spray Arms

Check the spray arm nozzles for blockages. Remove the spray arms and clean any clogged holes with a thin object.

6.3. Exterior and Interior Cleaning

Wipe the exterior with a damp cloth. Clean the interior periodically with a dishwasher cleaner or a mixture of vinegar and baking soda to prevent odors and buildup.

6.4. Winter Storage

If the dishwasher will be unused for an extended period or stored in an unheated area, drain all water from the appliance to prevent freezing damage.

7. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected	Check power connection, ensure door is latched, select a program and press Start.
Dishes not clean	Improper loading, clogged spray arms, insufficient detergent, dirty filters	Reload dishes correctly, clean spray arms, add more detergent, clean filters.
Water not draining	Clogged drain hose or filter, drain pump issue	Check and clear drain hose/filter. If problem persists, contact service.
Excessive noise	Improperly loaded dishes, foreign object in pump, leveling issue	Adjust dishes, check for foreign objects, ensure dishwasher is level.

8. TECHNICAL SPECIFICATIONS





Specification	Value
Model Number	ATYX14MS
Product Type	Freestanding Dishwasher
Color	Silver / Metallic
Place Settings	12
Number of Programs	5
Number of Temperatures	4
Delayed Start Options	3, 6, or 9 hours
Energy Efficiency Class	E (equivalent to A++)
Water Consumption per Cycle	15 Liters
Dimensions (Depth x Width x Height)	59.8 cm x 59.8 cm x 85 cm
Weight	97 Kilograms
Voltage	2.4E+2 Volts
Controls Type	Touch
Handle Type	Recessed Handle


9. RETURNS AND SUPPORT

For information regarding returns or if you have received a defective or damaged product, please refer to the retailer's return policy or contact their customer support directly. For specific information on purchases made through a marketplace, consult the marketplace's help page.

For technical assistance or further inquiries about your Atlantic ATYX14MS dishwasher, please contact Atlantic customer support or visit their official website. Keep your purchase receipt and model number handy for faster service.

Related Documents

	<p>Atlantic A154316 Water Heater Energy Efficiency Label</p> <p>Energy efficiency label for the Atlantic A154316 water heater, detailing its energy class, consumption, and technical specifications.</p>
	<p>ATLANTIC A053021 Water Heater - Energy Efficiency and Specifications</p> <p>Detailed technical specifications and energy efficiency label information for the ATLANTIC A053021 (053021) water heater, including consumption, sound levels, and thermostat settings.</p>
	<p>Atlantic MH IXTRA M Quick Installation Guide</p> <p>This document provides a quick installation guide for the Atlantic MH IXTRA M hydraulic unit for Monobloc 1 service. It includes technical specifications, installation procedures, electrical and hydraulic connections, and safety guidelines.</p>
	<p>Atlantic Spillway Scupper Operating Manual and Installation Guide</p> <p>Comprehensive operating manual for Atlantic Stainless Steel and Copper Finished Spillway Scuppers (models SS12, SS24, SS36, CS12, CS24, CS36). Includes detailed installation requirements, plumbing instructions, maintenance tips, winterization guide, and warranty information for these pond-free and fountain water features.</p>

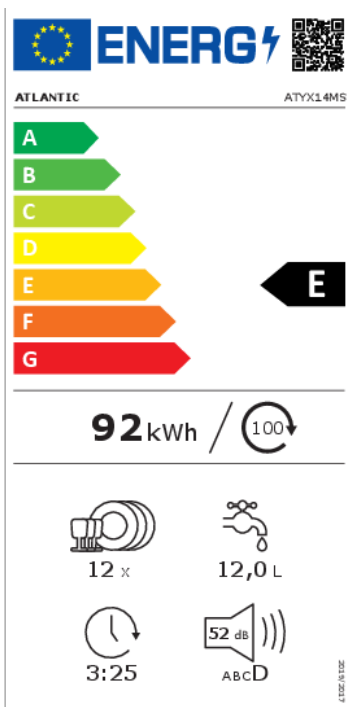

[\[pdf\]](#) Label

Lavastoviglie Atlantic ATYX14MS 12 Coperti Classe E Prezzi in Offerta su [Prezzoforte.it](#) Label 393697
[prezzoforte](#) |||

ATLANTIC A B C D E F G 92 kWh **ATYX14MS** E 100 12 x 3:25 12,0 L 52 dB ABCD
2019/2017 ...

lang: **score:32** filesize: 70.13 K page_count: 1 document date: 2023-10-19