

## HyperMotion Tobi Velar

# HyperMotion Tobi Velar Evolutive Baby Tricycle User Manual

Model: Tobi Velar

## INTRODUCTION

---

Thank you for choosing the HyperMotion Tobi Velar Evolutive Baby Tricycle. This versatile product is designed to grow with your child, offering multiple configurations from a parent-controlled stroller to an independent tricycle. Suitable for children aged 12 months to 5 years, and supporting a maximum weight of 25 kg, it provides a safe, comfortable, and enjoyable experience for both child and parent. This manual provides essential information for assembly, operation, maintenance, and safety to ensure optimal use of your tricycle.

## SAFETY INFORMATION

---

- Always supervise your child when using the tricycle.
- Ensure all parts are securely fastened before each use.
- Do not overload the tricycle beyond the maximum weight limit of 25 kg.
- Keep children's fingers and clothing away from moving parts.
- Use the safety harness at all times when the child is seated.
- Avoid using the tricycle on uneven or steep terrain without proper parental control.
- Regularly inspect the tricycle for any signs of wear or damage. Discontinue use if any damage is found.
- This product is not intended for use in traffic.

## PRODUCT OVERVIEW

---

The HyperMotion Tobi Velar Tricycle is designed with adaptability in mind, featuring several key components:

- **Folding Frame:** For easy storage and transport.
- **Adjustable Swivel Seat:** Can rotate 360 degrees and adjust for comfort.

- **Safety Harness:** Ensures your child is securely fastened.
- **Removable Parental Guide Handle:** Allows parents to steer and push.
- **Adjustable Footrests:** Provides comfort for younger children who cannot yet pedal.
- **Inflatable Wheels:** For a smooth ride on various terrains.
- **Canopy:** Provides shade and protection.
- **Storage Basket:** For carrying essentials.
- **Rain Cover:** Included for weather protection.



Image: The HyperMotion Tobi Velar Tricycle in its full configuration with parental handle and canopy.

## SETUP AND ASSEMBLY

Assembly of your HyperMotion Tobi Velar Tricycle is straightforward. Please follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Verify all components are present according to the packing list.
2. **Attach Front Wheel and Handlebar:** Insert the front wheel assembly into the main frame. Secure the handlebar by aligning it and tightening any locking mechanisms.
3. **Install Rear Wheels:** Attach the rear wheels to the axle on the main frame. Ensure they click into

place or are secured with the provided fasteners.

4. **Mount Seat and Safety Bar:** Place the seat onto the frame's mounting point. The seat can be rotated 360 degrees. Attach the safety bar around the seat.
5. **Attach Parental Handle:** Insert the parental guide handle into the designated slot at the rear of the tricycle. Adjust its height as needed.
6. **Install Canopy:** Secure the canopy to the seat frame. It should be adjustable for different sun angles.
7. **Attach Footrests and Basket:** Deploy the adjustable footrests if needed for younger children. Attach the storage basket to the rear of the tricycle.
8. **Final Checks:** Ensure all screws, bolts, and locking mechanisms are tight and secure before first use.



Image: Visual guide showing the various configurations and evolution stages of the tricycle.

Your browser does not support the video tag.

Video: This video demonstrates the assembly and key features of an evolutive tricycle with a foldable frame and 360-degree swivel seat, similar to the Tobi Velar model.

## OPERATING INSTRUCTIONS

### Modes of Use:

- **Parent-Controlled Stroller Mode (12 months+):**

In this mode, the parental guide handle is attached, allowing the parent to steer and push the tricycle. The child can rest their feet on the adjustable footrests. The safety harness should always be used.

The 360-degree swivel seat allows the child to face forward or backward.




 **HyperMotion**

**HONG KONG | LISBON | NEW YORK**

Image: The tricycle in parent-controlled mode, with a child comfortably seated and the parent guiding.

- **Assisted Tricycle Mode (Older Toddlers):**

As your child grows, they can begin to use the pedals. The freewheel function allows the pedals to rotate independently of the front wheel, preventing them from hitting the child's legs while the parent is pushing. The parental handle can still be used for guidance.

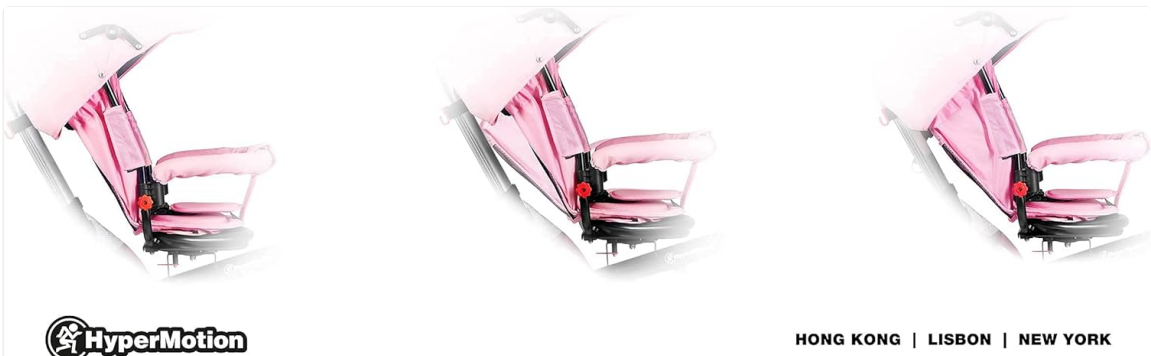

 **HyperMotion**

**HONG KONG | LISBON | NEW YORK**

Image: Detail of the inflatable wheels and adjustable footrests, highlighting the freewheel function.

- **Independent Tricycle Mode (3-5 years):**

Once your child is confident in pedaling and steering, the parental guide handle, canopy, and safety bar can be removed, transforming it into a classic tricycle for independent riding.



Image: A child riding the HyperMotion Tobi Velar Tricycle in its independent bike mode.

### Adjustments:

- **Parental Handle Height:** Adjust the height of the parental handle using the quick-release mechanism to a comfortable pushing position.
- **Seat Position:** The seat can be rotated 360 degrees by pressing the release button underneath and turning. It can also be adjusted forward or backward to accommodate your child's leg length.
- **Footrests:** The footrests can be folded up or down, or removed entirely, depending on your child's age and ability to pedal.
- **Canopy:** Adjust the canopy's angle to provide optimal shade. It can also be folded back or removed.

### MAINTENANCE

- **Cleaning:** Wipe down the frame with a damp cloth and mild soap. Fabric parts can be spot cleaned or removed for hand washing if specified on the care label.
- **Wheels:** Check the inflatable wheels regularly for proper inflation and wear. Ensure they are free from debris.
- **Lubrication:** Periodically apply a small amount of lubricant to moving parts like the pedal axle and steering mechanism to ensure smooth operation.
- **Fasteners:** Regularly check all screws, bolts, and locking mechanisms to ensure they are tight and secure.
- **Storage:** Store the tricycle in a dry place, away from direct sunlight and extreme temperatures, to prolong its lifespan. The folding frame allows for compact storage.

## TROUBLESHOOTING

---

Problem	Possible Cause	Solution
Tricycle difficult to steer	Loose handlebar or parental handle connection.	Check and tighten all connections for the handlebar and parental handle.
Pedals not moving freely	Freewheel mechanism engaged incorrectly or debris.	Ensure the freewheel function is correctly engaged/disengaged. Check for any obstructions around the pedals.
Unstable ride	Loose wheel connections or uneven tire pressure.	Check that all wheels are securely attached. Ensure inflatable tires have even pressure.
Seat not swiveling smoothly	Debris in the swivel mechanism or lack of lubrication.	Clean the swivel mechanism and apply a small amount of lubricant if necessary.

## SPECIFICATIONS

---

- **Product Dimensions (L x W x H):** 78 x 55 x 103 cm
- **Item Weight:** 12.64 kg
- **Maximum Load Capacity:** 25 kg
- **Main Material:** Plastic
- **Color:** Rose
- **Age Range (Description):** 1 to 5 years
- **Assembly Required:** Yes
- **Educational Value:** Promotes independence and creativity in children



HONG KONG | LISBON | NEW YORK

Image: The tricycle with its main dimensions indicated for reference.

## WARRANTY AND SUPPORT

---

For warranty information, please refer to the documentation provided with your purchase or contact HyperMotion customer service. If you encounter any issues or have questions regarding your HyperMotion Tobi Velar Tricycle, please reach out to our support team for assistance. Contact details can typically be found on our official website or on your purchase receipt.