

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [JustFine](#) /

› [JustFine Replacement Remote Control User Manual for Pioneer AV Receivers \(Models VSX-828, VSX-823, VSX-324, etc.\)](#)

JustFine 783746845011

JustFine Replacement Remote Control User Manual

For Pioneer AV Receivers

INTRODUCTION

This manual provides essential instructions for the JustFine replacement remote control, designed for use with various Pioneer AV Receiver models. This remote offers a direct replacement solution without the need for complex programming.

Compatible Pioneer AV Receiver Models include:

- VSX828
- VSX-823
- VSX8231
- VSX-324
- VSX324KP
- VSX-43
- VSX519V
- VSX-522
- VSX530
- VSX-820-K
- VSX920K
- VSX-822

SETUP: BATTERY INSTALLATION

The remote control requires two AAA batteries (not included) for operation. Please follow these steps to install the batteries correctly:

1. Locate the battery compartment on the back of the remote control.
2. Gently slide the battery cover downwards or press the latch and lift to open it.
3. Insert two AAA batteries, ensuring that the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery cover by sliding it back into place until it clicks securely.







Image: Rear view of the remote control with the battery compartment open, illustrating where to insert AAA batteries.

OPERATION

This JustFine replacement remote control is pre-programmed for immediate use with compatible Pioneer AV Receivers. No additional programming or setup is required after battery installation.

- **Direct Use:** Once batteries are installed, point the remote control towards your Pioneer AV Receiver and begin using its functions.
- **No Reprogramming:** This remote control cannot be reprogrammed. It is designed to function directly with the specified Pioneer models.
- **Line of Sight:** Ensure there is a clear line of sight between the remote control and the AV receiver's infrared sensor for optimal performance.

MAINTENANCE

- **Battery Replacement:** Replace batteries when the remote's performance diminishes or it stops responding. Always replace both batteries at the same time with new AAA batteries.
- **Cleaning:** Use a soft, dry cloth to clean the remote control. Avoid using liquid cleaners or abrasive materials, as these can damage the surface or internal components.
- **Storage:** Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is advisable to remove the batteries to prevent leakage.

TROUBLESHOOTING

If you experience issues with your remote control, please refer to the following common solutions:

- **Remote Not Responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.
 - Ensure there are no obstructions between the remote control and the AV receiver.
 - Verify that the AV receiver is powered on.
- **Limited Range:**
 - Ensure the remote control is pointed directly at the AV receiver's infrared sensor.
 - Check for strong light sources (e.g., direct sunlight, fluorescent lights) that might interfere with the infrared signal.

If problems persist after attempting these solutions, please refer to the "Warranty and Support" section for further assistance.

SPECIFICATIONS

Brand	JustFine
Model Number	783746845011

Product Dimensions	4.53 x 1.57 x 1.38 inches
Item Weight	2.65 ounces
Connectivity Technology	Infrared
Compatible Devices	AV Receiver
Max Number of Supported Devices	1
Special Feature	Ergonomic

WARRANTY AND SUPPORT

This JustFine replacement remote control is covered by a **30-day quality warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the product functions as described.

For any product-related issues, questions, or warranty claims, please contact the seller directly through your purchase platform. Provide your order details for prompt assistance.

