

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [NETUM](#) /

› [NETUM DS7500 2D Barcode Scanner User Manual](#)

## NETUM DS7500

# NETUM DS7500 2D Barcode Scanner User Manual

Model: DS7500 | Brand: NETUM

## INTRODUCTION

The NETUM DS7500 is a versatile Bluetooth Wireless 2D Barcode Scanner designed for efficient and precise scanning in various environments. It offers hands-free operation with a charging cradle and built-in memory, capable of transferring data up to 50 meters. This manual provides comprehensive instructions for setting up, operating, and maintaining your DS7500 scanner.

## PRODUCT OVERVIEW

The DS7500 scanner combines mobility with powerful 2D scanning capabilities, making inventory control faster and more efficient for various business solutions, including warehousing, manufacturing, logistics, and retail.



Image: NETUM DS7500 2D Barcode Scanner with its charging cradle, showcasing its compact design.

## Key Features:

- **Efficient Wireless Scanning:** Designed for fast and efficient inventory control.
- **Strong Decoding Ability:** Supports main 1D and 2D barcodes, including QR code, Data Matrix, PDF 417, FedEx, USPS, and VIN. Capable of scanning barcodes from both printed media and screens.
- **Bluetooth Dual Mode Technology:** Features Bluetooth LE V4.2 & Bluetooth 2.1+EDR, Class 1, for seamless connection with smartphones, tablets, and PCs. Offers a transmission range of up to 100 meters from the base.

- **User-Friendly Charging Cradle:** The included cradle supports auto wireless pairing and allows switching between trigger or presentation mode. Scanned data is saved to memory when out of range and transmitted upon re-entry into wireless coverage.
- **Compact and Durable Design:** Built for daily use with a long battery life (up to 40 hours per charge) and rugged construction for protection against dust and moisture. Features a long-lifecycle trigger (10 million times).



Image: The DS7500 scanner highlighting its 2.4G wireless and Bluetooth connectivity options, along with its 2D CMOS scanning capability.

# 1D/2D BARCODE SCANNER

Bluetooth & 2.4G Wireless 1D/2D Barcode Scanner



Image: The DS7500 scanner demonstrating its ability to read both 1D and 2D barcodes from various sources, including digital screens and printed labels.

## **SETUP**

### **1. Unboxing and Components**

Before you begin, ensure all components are present in the package:

- NETUM DS7500 Barcode Scanner
- Charging Cradle
- USB Cable
- User Manual (this document)

### **2. Charging the Scanner**

Place the scanner into the charging cradle. Connect the USB cable from the charging cradle to a power source (e.g., computer USB port or USB wall adapter). The scanner will begin charging automatically.

# MULTIFUNCTIONAL BASE



- Charging port
- 2.4Ghz Wireless Connection



Image: Close-up of the multifunctional charging base, showing the charging port and 2.4GHz wireless connection indicator.

## 3. Connection Modes

The NETUM DS7500 supports two primary connection modes: Bluetooth and 2.4G Wireless.

### Bluetooth Mode:

1. Turn on the power switch on the scanner.
2. Scan the "BT Mode" barcode from the quick setup guide or user manual to activate Bluetooth mode.
3. On your device (smartphone, tablet, PC), go to Bluetooth settings and search for "DS barcode scanner" or "Netum Bluetooth" to pair.

Your browser does not support the video tag.

Video: Demonstrates how to connect the DS7500 scanner via Bluetooth mode to a smartphone, including scanning a barcode to activate Bluetooth and pairing the device.

### 2.4G Wireless Mode:

1. Connect the charging cradle to your device (e.g., laptop) via the USB cable.
2. Scan the "2.4G Mode" barcode from the quick setup guide or user manual to activate 2.4G wireless mode on the scanner. The scanner will automatically connect to the cradle.



Image: Illustrates the two connection methods: 2.4G Wireless via the cradle connected to a laptop, and Bluetooth directly to a smartphone.

## OPERATING THE SCANNER

### Scanning Barcodes:

Once connected, aim the scanner's light at the barcode you wish to scan and press the trigger button. The scanner will emit a beep and the data will be transmitted to your connected device.

### Trigger Modes:

- **Key Trigger Mode:** The scanning light is only active when the trigger button is pressed.
- **Continuous Scan Mode:** The scanning light remains on continuously when the scanner is powered, allowing for

scanning without pressing the button.

- **Auto-induction Mode:** The scanning light is off until a barcode is presented in front of the scanner, at which point it automatically turns on to read the barcode.

## Data Upload Modes:

- **Instant Upload Mode:** Barcodes are read and uploaded directly to the open file or application on your connected device.
- **Storage Mode:** All scanned barcodes are stored in the scanner's built-in memory. You can upload the stored data to your device in batch later. This is useful when operating out of wireless range.



Image: The DS7500 scanner being used in different retail and business environments, including a supermarket, retail store, pharmacy, and book shop.

## MAINTENANCE

### Cleaning:

To maintain optimal performance, regularly clean the scanner's lens and exterior. Use a soft, dry, lint-free cloth. For stubborn dirt, a slightly damp cloth with mild soap can be used, followed by drying. Avoid abrasive cleaners or solvents.

### Battery Care:

The scanner is equipped with a Lithium Polymer battery. To prolong battery life:

- Avoid fully discharging the battery frequently.
- Store the scanner in a cool, dry place when not in use for extended periods.
- Charge the battery regularly, even if not in active use, to prevent deep discharge.

## TROUBLESHOOTING

## Common Issues and Solutions:

Problem	Possible Cause	Solution
Scanner not connecting via Bluetooth.	Bluetooth mode not activated; device not discoverable; interference.	Ensure "BT Mode" barcode is scanned. Check device's Bluetooth settings. Move closer to the device.
Scanner not connecting via 2.4G Wireless.	Cradle not connected; 2.4G mode not activated.	Verify USB cable connection to cradle and host. Scan "2.4G Mode" barcode.
Cannot scan certain barcodes.	Barcode type not enabled; damaged barcode; poor lighting.	Refer to the full user manual for enabling specific symbologies. Ensure barcode is clear and well-lit.
Scanner not compatible with Square POS.	Known incompatibility.	The DS7500 is incompatible with Square POS systems. Consider alternative POS software or scanner models.

For more detailed troubleshooting or advanced configurations, please refer to the comprehensive user manual available on the NETUM website or contact customer support.

## SPECIFICATIONS

Feature	Detail
Model Number	DS7500
Connectivity Technology	Bluetooth, 2.4G Wireless
Decoding Capability (1D)	UPC / EAN (UPCA / UPCE / EAN-8 / EAN-13, ISBN (Bookland), Code 39, Code 32 (Italian Pharmacode), Code 128, Code 93, Codabar, Interleaved 2 of 5, Standard 2 of 5, Industrial 2 of 5, Matrix 2 of 5 (Japanese), Code 11, Telepen, Pharmacode, Chinese post code, MSI Plessey, GS1 DataBar, GS1 DataBar Limited, GS1 DataBar Expanded, Telepen.
Decoding Capability (2D)	QR Code, Micro QR Code, DataMatrix, MaxiCode, Aztec, PDF417, MicroPDF417, PostNet, PLANET, Australia, Royal Post, CODABLOC F Composite Codes (CC-A, CC-B, CC-C).
System Requirements	Mobile: iOS, Android; PC: Windows 10/8.1/8/7/Vista/XP/CE, Mac OS X, Linux. (Note: Incompatible with Square POS)
Item Weight	12.3 ounces
Package Dimensions	8.78 x 5 x 3.9 inches
Battery Type	1 Lithium Polymer battery (included)
Manufacturer	NETUM

## WARRANTY AND SUPPORT

NETUM products are designed for reliability and performance. For warranty information and technical support, please visit the official NETUM website or contact their customer service department. Keep your purchase receipt for warranty claims. For further assistance, you may refer to the official NETUM brand store on Amazon [NETUM Brand Store](#)

© 2024 NETUM. All rights reserved.

## Related Documents - DS7500

	<p><a href="#">NETUM C750 Barcode Scanner Manual</a></p> <p>Comprehensive guide to the NETUM C750 barcode scanner, covering setup, connection modes (USB, 2.4GHz, Bluetooth), scanning modes, keyboard language settings, and barcode symbology configurations.</p>
	<p><a href="#">Netum NT-1228BL Wireless Barcode Scanner User Manual</a></p> <p>This comprehensive manual for the Netum NT-1228BL barcode scanner provides detailed instructions on setup, connection modes (USB, 2.4G wireless, Bluetooth), and advanced programming features. Learn how to configure various barcode symbologies, keyboard languages, and data uploading modes for efficient operation in diverse environments.</p>
<p><b>Wired 2D Scanner Manual</b></p> <p>Quick Setup Guide</p> <p>USB wired 1D &amp; 2D Plug &amp; Play Bar code Scanner</p> <p>Supports Windows XP, Win7/8/10/ MAC etc.</p> <p>Packing List:</p> <p>Quick Start Setup Guide x1 pc</p> <p>Barcode scanner x 1 pc</p>	<p><a href="#">Netum Wired 2D Scanner Manual and Quick Setup Guide</a></p> <p>A comprehensive manual for the Netum Wired 2D Scanner, covering quick setup, communication modes, keyboard language settings, scanning modes, terminator configuration, beeper volume, default settings, and various symbologies including PDF417, QR, Data Matrix, Maxi Code, and Aztec Code. Includes contact information for support.</p>
	<p><a href="#">CS7501 Full Manual - Netum Barcode Scanner Guide</a></p> <p>Comprehensive manual for the Netum CS7501 barcode scanner, covering setup, connection modes (USB, Bluetooth, Wireless Dongle), scanning modes, keyboard language settings, and detailed barcode symbology configurations.</p>

<p><b>Content</b></p> <table> <tr><td>Chapter 1 About NT-90</td><td>10</td></tr> <tr><td>    Main features of the device</td><td>10</td></tr> <tr><td>    Specifications</td><td>11</td></tr> <tr><td>    Outline description</td><td>14</td></tr> <tr><td>    I/O interface description</td><td>14</td></tr> <tr><td>    Angular view</td><td>17</td></tr> <tr><td>    Scan zone</td><td>18</td></tr> <tr><td>Chapter 2 System Settings</td><td>19</td></tr> <tr><td>    Factory Defaults</td><td>19</td></tr> <tr><td>    Custom Defaults</td><td>20</td></tr> <tr><td>    Long press button</td><td>21</td></tr> <tr><td>    Scan Mode</td><td>22</td></tr> <tr><td>    Trigger mode</td><td>23</td></tr> <tr><td>    Sensor mode</td><td>24</td></tr> <tr><td>    Continuous mode</td><td>25</td></tr> <tr><td>    Full automatic trigger mode</td><td>26</td></tr> <tr><td>    Partial trigger barcode</td><td>27</td></tr> <tr><td>    Read Save barcode</td><td>28</td></tr> </table>	Chapter 1 About NT-90	10	Main features of the device	10	Specifications	11	Outline description	14	I/O interface description	14	Angular view	17	Scan zone	18	Chapter 2 System Settings	19	Factory Defaults	19	Custom Defaults	20	Long press button	21	Scan Mode	22	Trigger mode	23	Sensor mode	24	Continuous mode	25	Full automatic trigger mode	26	Partial trigger barcode	27	Read Save barcode	28	<p><b>NETUM NT-90 Industrial Barcode Scanner User Manual</b></p> <p>Comprehensive user manual for the NETUM NT-90 industrial barcode scanner, covering device features, specifications, system settings, interface configuration, supported symbologies, data formatting options, and serial communication protocols.</p>
Chapter 1 About NT-90	10																																				
Main features of the device	10																																				
Specifications	11																																				
Outline description	14																																				
I/O interface description	14																																				
Angular view	17																																				
Scan zone	18																																				
Chapter 2 System Settings	19																																				
Factory Defaults	19																																				
Custom Defaults	20																																				
Long press button	21																																				
Scan Mode	22																																				
Trigger mode	23																																				
Sensor mode	24																																				
Continuous mode	25																																				
Full automatic trigger mode	26																																				
Partial trigger barcode	27																																				
Read Save barcode	28																																				
<p><b>Quick Setup Guide</b></p> <p>This quick setup guide is for use with the NETUM NT-90 barcode scanner. It covers the basic setup of the device, including how to connect it to a computer and how to program it using the included software.</p> <p><b>Barcode Programming</b></p> <p>Use this quick setup guide to learn how to program the barcode scanner. It includes instructions for connecting the device to a computer and how to use the included software to program the barcode scanner.</p> <p><b>Keyboard Language Type</b></p> <p>Use this quick setup guide to learn how to change the keyboard language type of the barcode scanner. It includes instructions for connecting the device to a computer and how to use the included software to change the keyboard language type.</p> <p><b>Barcode Examples</b></p> <p>Use this quick setup guide to learn how to read and interpret barcode examples. It includes instructions for connecting the device to a computer and how to use the included software to read and interpret barcode examples.</p>	<p><b>Netum Barcode Scanner Quick Setup Guide and Programming</b></p> <p>A comprehensive quick setup and programming guide for Netum barcode scanners, detailing configuration options for interfaces, keyboard languages, various 1D and 2D barcode symbologies, and custom data prefixes/suffixes. Includes appendices with barcode type and ASCII tables.</p>																																				