



[Manuals.plus](#) /

› [ODK](#) /

› ODK 63-inch Computer Desk (Model USFZ-001) Instruction Manual

ODK USFZ-001

ODK 63-inch Computer Desk (Model USFZ-001) Instruction Manual

Model: USFZ-001

INTRODUCTION

Thank you for choosing the ODK Computer Desk. This manual provides detailed instructions for assembly, operation, maintenance, and troubleshooting to ensure optimal use and longevity of your desk. Please read this manual thoroughly before beginning assembly or use.



Image: The ODK Computer Desk set up in a modern home office environment.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly. Do not proceed with assembly if any parts are missing or damaged.
- Assemble the desk on a soft, clean surface to prevent scratches.
- Do not overtighten screws during assembly to avoid damaging the material.
- Keep small parts away from children during assembly.
- Periodically check all connections to ensure they remain tight and secure.
- Do not exceed the desk's weight capacity (not specified, but general advice).

PACKAGE CONTENTS

Before assembly, verify that all components are included in your package. Refer to the included assembly diagram for a complete list of parts and hardware.

- Desktop panels (quantity and type may vary by size)
- Metal frame components (legs, support bars)
- Hardware kit (screws, bolts, Allen wrench)
- Side-mounted storage bag
- Detachable headphone hook
- Adjustable footpads
- Assembly instructions

SETUP AND ASSEMBLY

Assembly of the ODK Computer Desk is designed to be straightforward. An Allen key is included for your convenience. It is recommended to assemble the desk with at least one person.

Assembly Steps:

1. **Unpack and Identify Parts:** Carefully unpack all components and lay them out on a clean, soft surface. Compare them with the parts list in your instruction manual to ensure everything is present.
2. **Assemble the Frame:** Attach the metal support bars to the desk legs using the provided screws and Allen wrench. Ensure all connections are secure but do not fully tighten yet.
3. **Attach Desktop Panels:** Place the desktop panels onto the assembled frame. Align the pre-drilled holes in the desktop with the holes in the frame. Secure the desktop to the frame using the appropriate screws.
4. **Install Accessories:**
 - Attach the side-mounted storage bag to the desired side of the desk using the designated attachment points.
 - Install the detachable headphone hook on the opposite side or as preferred.
5. **Adjust Footpads:** Once the desk is fully assembled, adjust the footpads at the bottom of the legs to ensure stability and level the desk on uneven floors.
6. **Final Tightening:** Once the desk is upright and stable, go back and gently tighten all screws to ensure maximum stability.



Image: Visual guide for quick and easy assembly.

Your browser does not support the video tag.

Video: ODK Home Office Computer Desk brand display, showcasing various features and sizes.

Your browser does not support the video tag.

Video: Video show of ODK Home Office Computer Desk, highlighting its design and functionality.

Your browser does not support the video tag.

Video: ODK computer desk overview, demonstrating its features and suitability for various setups.

OPERATING INSTRUCTIONS

The ODK Computer Desk is designed for versatile use in home offices, gaming setups, or study areas. Its features enhance organization and comfort.

Key Features:

- **Side-Mounted Storage Bag:** Utilize the fabric storage bag for books, documents, office supplies, or personal items to keep your desktop clear and organized. This bag can be installed on either the left or right side of the desk.
- **Detachable Headphone Hook:** Hang your headphones, backpack, or other accessories on the sturdy metal hook to keep them easily accessible and off the desk surface. This hook can be attached to either side of the desk.
- **Adjustable Footpads:** The footpads can be rotated to fine-tune the desk's height and ensure it remains stable on uneven flooring, preventing wobbling.

High Quality Desktop



Easy to clean



Waterproof



Anti-scratch

Image: The fabric storage bag attached to the desk, providing convenient storage.



Solid Metal Hook

| Extra space for hanging



Image: The detachable metal hook, ideal for hanging headphones or bags.

CARE AND MAINTENANCE

Proper care will extend the life and appearance of your ODK Computer Desk.

- **Cleaning the Desktop:** The particleboard tabletop is designed to be scratch-resistant and waterproof. For daily cleaning, wipe the surface with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals that could damage the finish.
- **Cleaning the Metal Frame:** Wipe the metal frame with a soft, dry cloth. If necessary, use a slightly damp cloth with mild soap and water, then dry thoroughly.
- **Fabric Storage Bag:** The fabric bag can be spot cleaned with a mild detergent and water. Allow it to air dry completely.
- **Regular Checks:** Periodically inspect all screws and connections to ensure they remain tight. Retighten if necessary to maintain stability.

Product Size

| Can be switched left and right for installation.

Tabletop Colors



Image: The desk surface showing its waterproof and easy-to-clean properties.

TROUBLESHOOTING

If you encounter any issues with your ODK Computer Desk, please refer to the following common solutions:

Problem	Possible Cause	Solution
Desk is wobbly or uneven.	Loose screws or uneven floor.	Ensure all screws are tightened. Adjust the footpads at the bottom of the legs to level the desk.
Parts do not align during assembly.	Incorrect orientation of parts or overtightened screws.	Review the assembly instructions carefully. Loosen screws slightly, adjust alignment, then retighten. Do not overtighten.
Missing or damaged parts upon arrival.	Shipping damage or packaging error.	Contact ODK customer service immediately for assistance. Provide your order details and a description of the issue.

Problem	Possible Cause	Solution
Difficulty attaching the storage bag or hook.	Incorrect attachment method.	Ensure you are using the correct attachment points and following the instructions for these accessories.

SPECIFICATIONS

Feature	Detail
Brand	ODK
Model Number	USFZ-001
Product Dimensions (D x W x H)	21.65"D x 63"W x 28.9"H
Color	Black
Shape	Rectangular
Desk Design	Computer Desk, Writing Desk
Base Material	Metal
Top Material Type	Engineered Wood (Particleboard)
Finish Type	Laminated
Special Feature	Scratch Resistant, Waterproof
Item Weight	30 Pounds
Included Components	Headphone Hook, Side-mounted storage bag
Assembly Required	Yes
Recommended Number of People for Assembly	1



Image: Product dimensions and features diagram.

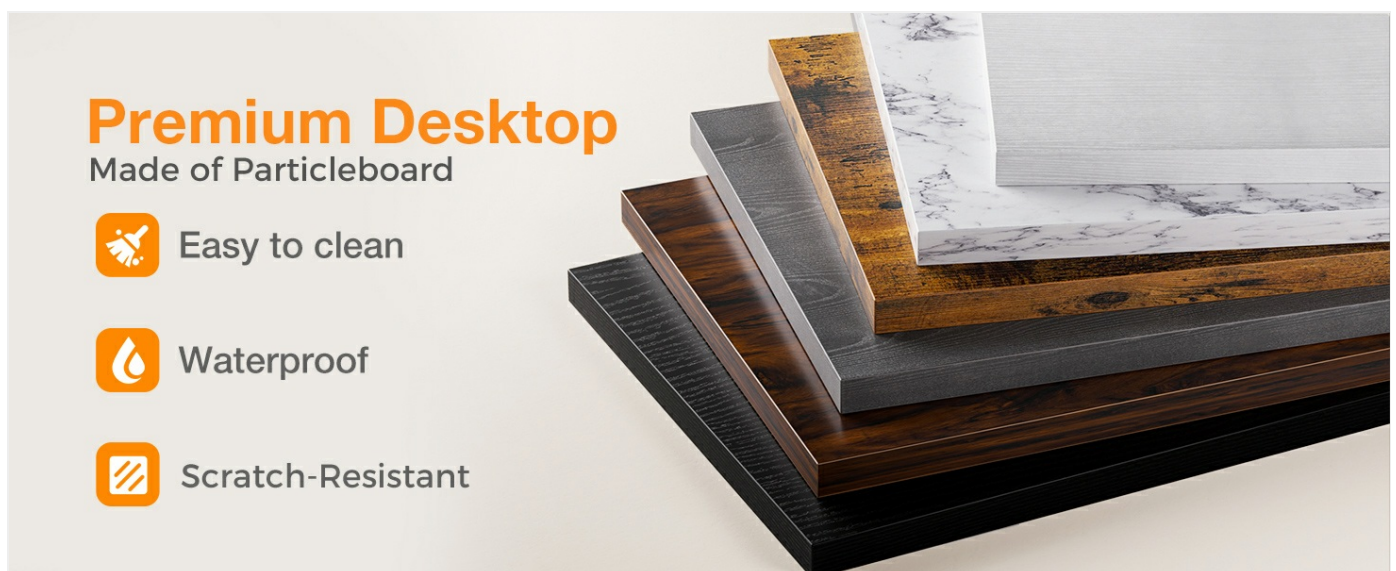


Image: Details on the high-quality desktop material, emphasizing its durability.

WARRANTY INFORMATION

ODK is committed to providing high-quality products. While specific warranty terms are not detailed in this manual, please retain your proof of purchase. In case of any manufacturing defects or issues arising from normal use, please contact our

customer support for assistance. We are dedicated to resolving any product problems or concerns you may have.

CUSTOMER SUPPORT

For any questions, concerns, or assistance with your ODK Computer Desk, please do not hesitate to contact our customer support team. We are available to help with assembly, damaged parts, or any other product-related inquiries. Please refer to the contact information provided with your purchase or visit the official ODK website for support details.

