

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [ReplacementScrews](#) /
- › [ReplacementScrews Stand Screws Compatible with ONN 100012588 User Manual](#)

ReplacementScrews 100012588

ReplacementScrews Stand Screws User Manual

For ONN 100012588 Television Stands

PRODUCT OVERVIEW

This manual provides instructions for the ReplacementScrews stand screw kit, designed specifically for the ONN 100012588 television model. This kit includes a complete set of four black machine screws necessary for securely attaching the original factory stand to your television.



Figure 1: The complete set of four black machine screws included in the kit.

Key Features:

- **Complete Screw Set:** Contains all four metric screws required to attach the original factory legs/stand to your ONN 100012588 TV.
- **Correct Size and Thread:** Screws are precisely sized and threaded for full compatibility with the ONN 100012588 base stand/legs, designed for pre-threaded metal holes or inserts.
- **Black Oxide Plating:** Features a black oxide finish for corrosion resistance and to match the aesthetic of the television.
- **Quality Construction:** Manufactured to prevent breaking or stripping, ensuring a secure and stable attachment of the TV to its stand.
- **Specific Application:** This kit is exclusively for attaching original factory stands and is not suitable for universal stands or wall mounting applications.

SETUP AND INSTALLATION

Follow these steps to properly install the stand screws for your ONN 100012588 television.

1. **Verify TV Model:** Before beginning, confirm that your television is the ONN model 100012588. This model number is typically found on a label on the back of the TV.
2. **Prepare the TV:** Carefully place the television screen-down on a soft, clean, and stable surface to prevent scratches or damage. Ensure the surface is large enough to support the TV safely.
3. **Position the Stand:** Align the original factory stand legs with the designated mounting holes on the bottom or back of the television.
4. **Insert Screws:** Take one of the provided black machine screws and carefully insert it into a mounting hole, aligning it with the stand leg.
5. **Tighten Screws:** Using an appropriate screwdriver (typically a Phillips head), gently turn the screw clockwise until it is snug. Do not overtighten, as this can strip the threads or damage the TV casing. Repeat for all four screws.
6. **Check Stability:** Once all screws are installed, gently lift the TV to ensure the stand is securely attached and stable before placing it in its final viewing position.

***Important Note:** These screws are designed for the original factory stand only. Do not attempt to use them for wall mounts or universal stands, as different screw types and lengths are required for those applications.*



Figure 2: A close-up view of the four black machine screws, highlighting their flat head and black oxide finish.

OPERATING AND USAGE

Once the stand is securely attached, the television is ready for normal operation. The screws themselves do not require any further interaction during daily use.

- Ensure the television is placed on a flat, stable surface to prevent tipping.
- Avoid moving the television frequently by dragging it, as this can put undue stress on the stand and screws. Lift the TV when relocating it.

MAINTENANCE

The stand screws require minimal maintenance. Regular checks can help ensure long-term stability.

- **Periodic Inspection:** Periodically check the screws to ensure they remain tight. If any screw feels loose, gently tighten it with a screwdriver. Do not overtighten.

- **Cleaning:** If necessary, wipe the screws and surrounding area with a soft, dry cloth to remove dust. Avoid using harsh chemicals or abrasive cleaners.
- **Corrosion Resistance:** The black oxide plating provides resistance to corrosion, but avoid exposing the screws to excessive moisture or corrosive substances.

TROUBLESHOOTING

If you encounter issues during installation or with the stability of your TV stand, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Screws do not fit into TV holes.	Incorrect TV model or non-original stand.	Verify your TV is ONN 100012588. Ensure you are using the original factory stand. These screws are not for universal stands or wall mounts.
Screws feel loose after tightening.	Threads in TV or stand are stripped; screws are not fully engaged.	Ensure screws are inserted straight. If threads are stripped, professional repair may be needed. Do not overtighten.
TV stand is wobbly.	Screws not fully tightened; stand not properly aligned.	Retighten all four screws. Ensure the stand legs are correctly seated in their respective slots on the TV.

SPECIFICATIONS

Detailed specifications for the ReplacementScrews stand screw kit.

Product Type: TV Stand Replacement Screws

Compatibility: Specifically designed for ONN 100012588 television model's original factory stand.

Quantity: 4 screws per set

Screw Type: Metric machine screws

Material: Alloy Steel

Exterior Finish: Black Oxide

Head Style: Flat Head

Point Style: Flat Point

Approximate Package Dimensions: 2.4 x 1.85 x 0.35 inches

Approximate Package Weight: 0.68 ounces

Manufacturer: ReplacementScrews



Figure 3: An angled view of the four black machine screws, showing their design and finish.

WARRANTY AND SUPPORT

For information regarding warranty coverage or technical support for your ReplacementScrews product, please refer to the manufacturer's official channels.

- **Manufacturer:** ReplacementScrews
- **Contact Information:** Please visit the [ReplacementScrews Store on Amazon](#) or consult the product packaging for specific contact details.
- **Returns Policy:** As per Amazon's standard return policy, typically 30 days from purchase for refunds/replacements.

