

INJUSA IN-7305

INJUSA Quad Rage Kawasaki 12V Electric Ride-On Quad Instruction Manual

Model: IN-7305

1. INTRODUCTION AND SAFETY WARNINGS

This manual provides essential information for the safe assembly, operation, and maintenance of your INJUSA Quad Rage Kawasaki 12V electric ride-on quad. Please read all instructions carefully before use and retain this manual for future reference. This product is designed for children aged 3 years and older.

Important Safety Information:

- Adult supervision is required at all times.
- Do not operate the quad near roads, motor vehicles, steep inclines, swimming pools, or other bodies of water.
- Always wear a helmet and appropriate safety gear.
- Ensure the child is seated properly and holding the handlebars before operating.
- Do not allow more than one rider at a time.
- Keep hands, hair, and clothing away from moving parts.
- Charge the battery only with the provided charger.
- All INJUSA products comply with EU safety regulations.

2. PRODUCT OVERVIEW

The INJUSA Quad Rage Kawasaki 12V is an electric ride-on quad designed for children, offering a realistic driving experience with several key features:

- **12V Battery System:** Provides power for speeds of 5-6 km/h.
- **Gearbox:** Allows for both forward and reverse driving.
- **Progressive Acceleration:** Ensures smooth and controlled speed changes.
- **Front and Rear Suspensions:** Enhances stability and rider comfort.

- **Plastic Wheels with Rubber Bands:** Improves grip and durability.
- **LED Lights:** Functional front and rear LED lights for added realism.
- **Ignition Key:** Provides a realistic start-up experience.
- **Rear Transport Handle:** Conveniently located between the rear wheels for easy transport when the battery is low.



Image 2.1: Side view of the INJUSA Quad Rage Kawasaki 12V Electric Ride-On Quad, showcasing its design and features.

3. SETUP

3.1 Unboxing and Initial Inspection

1. Carefully remove all components from the packaging.
2. Check the contents against the packing list to ensure all parts are present and undamaged.
3. Remove any protective materials or ties.

3.2 Battery Charging

The battery must be fully charged before the first use. The charging process should always be performed by an adult.

1. Locate the charging port on the quad.
2. Connect the charger to the charging port and then plug the charger into a standard wall outlet.
3. The indicator light on the charger will typically show red during charging and turn green when fully charged.
4. For the first charge, allow 10-12 hours. Subsequent charges should take 8-10 hours. Do not overcharge.
5. Disconnect the charger once charging is complete.

3.3 Assembly (if required)

While the product is largely pre-assembled, some minor steps may be necessary. Refer to the included assembly diagrams for detailed instructions.

1. **Handlebar Attachment:** Secure the handlebars to the steering column using the provided screws and tools. Ensure they are firmly attached and do not wobble.
2. **Battery Connection:** Connect the battery terminals if they were disconnected for shipping. Ensure positive (+) and negative (-) connections are correct.
3. **Wheel Inspection:** Verify that all wheels are securely attached and the rubber bands are properly seated.



Image 3.1: Close-up view of the ignition key, a key component for starting the quad.

4. OPERATING INSTRUCTIONS

4.1 Starting the Quad

1. Ensure the battery is fully charged.
2. Insert the ignition key into the key slot.
3. Turn the key to the 'ON' position. The LED lights should illuminate, indicating power is on.

4.2 Driving Forward and Reverse

1. Locate the gear selector switch on the chassis body.
2. To move forward, push the gear selector to the 'FORWARD' position.
3. To move in reverse, push the gear selector to the 'REVERSE' position.

4. Always ensure the quad is completely stopped before changing direction.

4.3 Acceleration and Steering

1. Once the gear is selected, press the foot pedal (accelerator) to move. The quad features progressive acceleration for a smooth start.
2. Steer the quad by turning the handlebars left or right.
3. Release the foot pedal to slow down and stop the quad.

4.4 Using the LED Lights

The front and rear LED lights automatically activate when the quad is turned on, enhancing visibility and realism.



Image 4.1: A child demonstrating proper riding posture on the INJUSA Quad Rage Kawasaki 12V.

5. MAINTENANCE

5.1 Battery Care

- Always recharge the battery after each use, even if only for a short period.
- If the quad will not be used for an extended period, charge the battery at least once a month to prolong its lifespan.
- Do not store the battery in extreme temperatures.
- Only use the original INJUSA charger.

5.2 Cleaning

- Clean the quad with a soft, damp cloth. Do not use abrasive cleaners or solvents.
- Avoid spraying water directly onto electrical components.

5.3 General Inspection

- Regularly check all screws, nuts, and bolts to ensure they are tight.
- Inspect the wheels and rubber bands for wear or damage.
- Check electrical connections for any signs of corrosion or damage.
- Ensure the suspension components are functioning correctly.



Image 5.1: Detail of the rear suspension and wheel, highlighting components to inspect during maintenance.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Quad does not move	Battery is low or not charged. Battery connection is loose. Ignition key is not in 'ON' position. Gear selector is in neutral or incorrect position.	Charge the battery fully. Check and secure battery terminals. Turn the ignition key to 'ON'. Select 'FORWARD' or 'REVERSE' gear.

Problem	Possible Cause	Solution
Quad moves slowly or loses power	Battery is low. Overloaded (too much weight). Operating on rough terrain or uphill.	Recharge the battery. Ensure only one child is riding and within weight limits. Operate on flat, smooth surfaces.
LED lights not working	Battery is completely drained. Loose wire connection to lights.	Charge the battery. Check and secure light connections (adult supervision required).

If the problem persists after attempting these solutions, please contact INJUSA customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	INJUSA
Model Number	IN-7305
Material	Plastic
Age Range (Recommended)	3+ years (Child)
Battery	12V
Max Speed	5-6 km/h
Dimensions (L x W x H)	118 x 77 x 73.5 cm
Seat Height	48 cm
Handlebar Height	72 cm (from ground)
Assembly Required	No (Minor setup may be needed)
Manufacturer	INJUSA

8. WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official INJUSA website. If you require technical assistance, replacement parts, or have any questions regarding your INJUSA Quad Rage Kawasaki 12V, please contact INJUSA customer support directly. Contact details can typically be found on the product packaging or the manufacturer's website.

All INJUSA products are manufactured in Spain and comply with European Union safety standards.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question

and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question