

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [VISWIN](#) /

> [VISWIN Walnut Basic A-frame Easel Instruction Manual \(Model ELAF_W01DW_V\)](#)

VISWIN ELAF_W01DW_V

VISWIN Walnut Basic A-frame Easel Instruction Manual

Model: ELAF_W01DW_V | Brand: VISWIN

1. INTRODUCTION

Thank you for choosing the VISWIN Walnut Basic A-frame Easel. This adjustable and foldable easel is crafted from solid beech wood, designed for both painting and display purposes. Its robust construction and versatile features make it suitable for artists, students, and for showcasing artwork or signs. This manual provides detailed instructions for assembly, operation, and maintenance to ensure optimal use and longevity of your easel.

2. SAFETY INFORMATION

- Ensure all components are securely fastened before use to prevent instability.
- Do not exceed the maximum canvas size or weight capacity (up to 43 inches, 22 lbs / 10 kg) to maintain stability.
- Keep small parts and hardware away from children to avoid choking hazards.
- Place the easel on a flat, stable surface to prevent tipping.
- Exercise caution when adjusting the easel's height or angle to avoid pinching fingers.

3. PARTS LIST

Please verify that all parts are present before beginning assembly. Refer to the assembly video for visual guidance.

- Main Frame Components (labeled with numbers)
- Canvas Tray (1 pc)
- Top Canvas Holder (1 pc)
- Back Brace (1 pc)
- Hardware: Screws, Wing Nuts, Bolts (individually packed)



Max loading capacity:
22 lbs - 10 Kg



Image: All components of the easel laid out for inspection before assembly.

4. SETUP AND ASSEMBLY

Follow these step-by-step instructions for assembling your VISWIN A-frame easel. An assembly video is provided for additional assistance.

1. **Assemble the Front Frame:** Connect the horizontal crossbars to the vertical legs of the front frame using the provided screws. Ensure all connections are secure.
2. **Attach the Back Brace:** Secure the metal bracket for the back brace to the rear of the front frame. Then, attach the back brace to this bracket using the wing nut, allowing for angle adjustment.
3. **Install the Canvas Tray:** Slide the canvas tray onto the central mast of the easel. Use the metal ratchet mechanism to adjust its height. Secure it in place by tightening the wing nuts.
4. **Install the Top Canvas Holder:** Slide the top canvas holder onto the upper section of the central mast. This

piece is used to secure the top of your canvas. Tighten the knob to hold it in position.

Video: Detailed assembly and feature overview for the VISWIN Walnut A-frame Easel.

Video: General wooden easel instruction video, demonstrating assembly steps.

Video: Installation guide for a similar walnut pine easel, showing assembly process.

5. OPERATING INSTRUCTIONS

5.1 Adjusting Height

The easel features a metal ratchet system for quick height adjustments. To adjust the height of the canvas tray:

1. Loosen the wing nuts on the canvas tray.
2. Lift or lower the tray to your desired position. The ratchet mechanism will click into place.
3. Tighten the wing nuts securely to lock the tray at the chosen height.

The top slider can be moved along the central mast to accommodate canvases up to 43 inches in length. Loosen its knob, slide to position, and re-tighten.



Image: Visual representation of the easel's adjustable height for various canvas sizes.

5.2 Adjusting Angle

The easel's angle can be adjusted for comfortable painting or optimal display. To adjust the angle:

1. Loosen the wing nut on the back brace.
2. Adjust the back leg to achieve the desired tilt.
3. Tighten the wing nut to secure the easel at the new angle.

Adjust Height Flexibly

Fits various canvas sizes up to 43"L



Image: The easel demonstrating adjustable angles and its foldable design for storage.

5.3 Folding for Storage

For compact storage or transport, the easel can be folded flat:

1. Remove any canvas or items from the easel.
2. Loosen the wing nut on the back brace and fold the back leg inwards.
3. The easel will fold flat for easy storage in small spaces.

6. MAINTENANCE

To maintain the quality and appearance of your beech wood easel:

- Wipe down the wood surfaces with a soft, dry cloth regularly to remove dust.

- Avoid using harsh chemicals or abrasive cleaners, which can damage the wood finish.
- Keep the easel away from direct sunlight, extreme temperatures, and high humidity to prevent warping or cracking of the wood.
- Periodically check all screws and fasteners and tighten them if necessary to ensure stability.

7. TROUBLESHOOTING

7.1 Easel feels unstable

- **Solution:** Ensure all screws and wing nuts are fully tightened. Verify the easel is placed on a flat, level surface. Check that the back brace is securely locked in position.

7.2 Difficulty adjusting height/angle

- **Solution:** Loosen the relevant wing nuts or knobs sufficiently before attempting to adjust. Ensure no debris is obstructing the sliding mechanisms or ratchet system.

8. SPECIFICATIONS

Product Dimensions	26"D x 23"W x 76"H (66cm D x 58.4cm W x 193cm H)
Material	Beech Wood
Color	Walnut
Easel Type	A-frame Easel
Max Canvas Height	43 inches (109.2 cm)
Max Loading Capacity	22 lbs (10 kg)
Item Weight	11.7 pounds (5.3 kg)
Assembly Required	Yes



Wide Applications

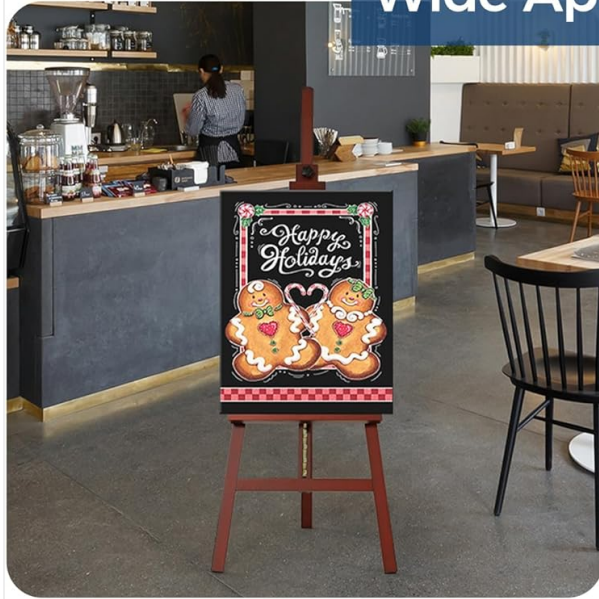


Image: Technical drawing illustrating the easel's dimensions and maximum canvas capacity.

9. WARRANTY AND SUPPORT

VISWIN is committed to providing high-quality products and customer satisfaction. We offer a **Lifetime Guarantee** on this easel.

If you encounter any issues with your product, such as defects not caused by external reasons under normal use, please do not hesitate to contact us. Our customer service team is available to assist you.

For support, please visit the official VISWIN store or contact our customer service through your purchase platform.