

[Manuals.plus](#) /

› [Nyko](#) /

› Nyko Prime Controller for Nintendo Switch and PC Instruction Manual

Nyko 87307

Nyko Prime Controller Instruction Manual

Model: 87307

INTRODUCTION

The Nyko Prime Controller is a wired gaming controller designed for use with the Nintendo Switch and PC. It features an ergonomic design, dual vibration feedback, and a programmable turbo function to enhance your gaming experience. This manual provides instructions for setup, operation, maintenance, and troubleshooting.

PRODUCT FEATURES

- **Wired Connectivity:** Utilizes a wired USB connection to minimize input lag and ensure responsive button registration for a reliable gaming experience.
- **Dual Vibration:** Provides haptic feedback through rumble features for enhanced immersion during gameplay.
- **Ergonomic Design:** Features a comfortable shell design that fits well in the hands, allowing for extended gameplay sessions without fatigue.
- **Programmable Turbo Function:** Allows for rapid, automatic input of a mapped button by holding it down, providing a competitive advantage in certain games.
- **Precision Buttons:** Equipped with responsive and accurate buttons for precise control.

DUAL VIBRATION

PRECISION BUTTONS

**PROGRAMMABLE
TURBO BUTTON**



Image: Front view of the Nyko Prime Controller highlighting Dual Vibration, Precision Buttons, and Programmable Turbo Button features.

WIRED TO **REDUCE LAG**

ERGONOMIC DESIGN



Image: Back and side view of the Nyko Prime Controller emphasizing wired connectivity to reduce lag and its ergonomic design.

PACKAGE CONTENTS

Please verify that all items are present in your package:

- Nyko Prime Controller (Wired)
- Integrated USB Cable
- Instruction Manual (this document)



Image: The Nyko Prime Controller displayed in its retail packaging.

SETUP INSTRUCTIONS

Connecting to Nintendo Switch (Docked Mode)

1. Ensure your Nintendo Switch console is placed in its dock and connected to your TV.
2. Connect the USB cable of the Nyko Prime Controller to an available USB port on the Nintendo Switch dock.
3. On your Nintendo Switch, navigate to System Settings > Controllers and Sensors > Pro Controller Wired Communication and ensure this setting is set to 'On'. This is crucial for the controller to function correctly.
4. The controller should be recognized by the Switch, and you can begin playing.

Connecting to PC

1. Connect the USB cable of the Nyko Prime Controller to an available USB port on your PC.
2. Your PC should automatically detect and install the necessary drivers. This may take a few moments.

3. Once installed, the controller will be ready for use with compatible PC games. Note that some games may require manual button remapping due to differences in button labeling conventions (e.g., Switch A/B/X/Y vs. Xbox A/B/X/Y).

OPERATING INSTRUCTIONS

Basic Controls

The Nyko Prime Controller features standard button layouts for Nintendo Switch and PC gaming. Refer to the in-game instructions for specific button functions.

Using the Turbo Function

1. To activate Turbo for a specific button, press and hold the **TURBO** button, then press the desired action button (e.g., A, B, X, Y, L, R, ZL, ZR).
2. Release both buttons. Now, when you hold down the action button, it will register rapid, continuous inputs.
3. To deactivate Turbo for a specific button, press and hold the **TURBO** button, then press the action button again.
4. To clear all Turbo settings, press and hold the **TURBO** button for 5 seconds.

Vibration Feedback

The controller provides dual vibration feedback during gameplay, enhancing immersion. This feature is automatically active when supported by the game.

MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth. Do not use liquid cleaners or solvents.
- Avoid exposing the controller to extreme temperatures, humidity, or direct sunlight.
- Store the controller in a safe place when not in use to prevent damage to the cable or buttons.
- Do not attempt to disassemble the controller, as this will void any potential warranty and may cause damage.

TROUBLESHOOTING

Problem	Possible Solution
Controller not recognized by Nintendo Switch.	Ensure 'Pro Controller Wired Communication' is enabled in Switch System Settings. Try a different USB port on the dock. Unplug and re-plug the controller.
Controller not recognized by PC.	Try a different USB port. Ensure your PC's operating system is up to date. Restart your PC.
Buttons (A/B/X/Y) are swapped on PC.	This is common due to different button mapping standards between Switch and Xbox controllers (which PC often defaults to). Remap buttons within the game's settings if available.
Turbo function behaving unexpectedly.	Clear all Turbo settings by holding the TURBO button for 5 seconds. Ensure the controller is unplugged from the system when not in use to prevent unintended turbo button activation.
Vibration not working.	Ensure the game you are playing supports vibration feedback. Check in-game settings to ensure vibration is enabled.

SPECIFICATIONS

- **Model Number:** 87307
- **Connectivity:** Wired USB
- **Compatibility:** Nintendo Switch, PC
- **Features:** Dual Vibration, Programmable Turbo Function, Ergonomic Design
- **Weight:** Approximately 9.6 ounces (272 grams)
- **Manufacturer:** Nyko
- **Release Date:** April 30, 2021

WARRANTY AND SUPPORT

Nyko Technologies, founded in 1996, specializes in interactive entertainment accessories. For product support, warranty information, or to contact customer service, please visit the official Nyko website. Keep your purchase receipt as proof of purchase for any warranty claims.

Official Nyko Website: www.nyko.com

© 2024 Nyko Technologies. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

