

Dyson 970292-01

Dyson Paddle Brush Instruction Manual

Model: 970292-01

INTRODUCTION

This manual provides essential information for the proper use and care of your Dyson Paddle Brush. Designed for smoothing hair during drying and styling, this brush features a weighted handle for balance and air-cushion suspension for scalp comfort. Please read these instructions carefully before first use and retain them for future reference.

SETUP

Unpacking

1. Carefully remove the Dyson Paddle Brush from its packaging.
2. Inspect the brush for any visible damage. If any damage is observed, do not use the product and contact Dyson customer support.

Initial Inspection

Before first use, ensure all bristles are securely in place and the handle is firmly attached. The air-cushion suspension should feel flexible when gently pressed.

OPERATING INSTRUCTIONS

Using the Paddle Brush for Smoothing and Styling

The Dyson Paddle Brush is ideal for achieving smooth, straight styles and for detangling hair. Its large surface area allows for efficient styling of larger sections of hair.

- **For detangling:** Start brushing from the ends of your hair and work your way up to the roots, gently removing knots.
- **For smoothing and styling:** Use the brush in conjunction with a hairdryer (such as a Dyson hair care machine) to guide and smooth hair sections. The weighted handle provides balance, making it comfortable to maneuver during styling.

- **Scalp comfort:** The air-cushion suspension system allows the bristles to flex, adapting to the contours of your scalp for a comfortable brushing experience.



Figure 1: Top-down view of the Dyson Paddle Brush, showing the paddle shape and bristle layout.



Figure 2: Angled view of the Dyson Paddle Brush, highlighting the handle and bristle design.

MAINTENANCE

Cleaning the Brush

Regular cleaning helps maintain the performance and hygiene of your paddle brush.

- 1. Remove loose hair:** Use your fingers or a comb to gently remove any hair caught in the bristles after each use.
- 2. Deep cleaning:** Periodically, wash the bristles with mild soap and lukewarm water. Avoid submerging the entire brush handle in water.
- 3. Rinse and dry:** Rinse thoroughly to remove all soap residue. Shake off excess water and allow the brush to air dry completely with the bristles facing downwards to prevent water from collecting in the cushion.

Storage

Store the brush in a clean, dry place away from direct sunlight and extreme temperatures to prolong its lifespan.

TROUBLESHOOTING

Bristles or Rubber Tips Falling Out

While the Dyson Paddle Brush is designed for durability, if you notice bristles or their rubber tips becoming loose or falling out, please consider the following:

- **Gentle use:** Ensure you are not applying excessive force when brushing, especially when detangling.
- **Cleaning method:** Verify that the cleaning method used is gentle and does not involve harsh chemicals or excessive scrubbing that could damage the bristles.
- **Contact support:** If the issue persists or occurs shortly after purchase, it may indicate a manufacturing defect. Please refer to the Warranty and Support section for contact information.

SPECIFICATIONS

Feature	Detail
Model Number	970292-01
Product Dimensions	20 x 15 x 10 cm
Item Weight	320 g
Material	Iron (Handle)
Color	Iron/Fuchsia
Special Features	Cushion Base, Ergonomic Grip
Hair Type Compatibility	All

WARRANTY INFORMATION

The Dyson Paddle Brush comes with a **1-year warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. Please retain your proof of purchase for any warranty claims. For full terms and conditions, please refer to the official Dyson warranty policy or contact customer support.

SUPPORT

For product inquiries, technical assistance, or warranty claims, please contact Dyson customer support:

- **Manufacturer Contact:** 18002586688
- **Importer:** Dyson Technology India Pvt. Ltd.

You can also visit the official Dyson website for more information and support resources.