

## Lucande 9616218

# Lucande Mirina LED Lantern with Touch Dimmer User Manual

Model: 9616218

## 1. INTRODUCTION

Thank you for choosing the Lucande Mirina LED Lantern. This portable and rechargeable lantern is designed to provide versatile lighting for your garden, terrace, or indoor spaces. Featuring a touch dimmer, it allows for seamless adjustment of light intensity to create the perfect ambiance. Please read this manual carefully before use to ensure proper operation and maintenance.

### Key Features:

- Portable and Cordless Design
- Integrated Touch Dimmer for adjustable brightness
- Rechargeable via USB cable
- Durable Aluminum Construction
- IP54 Rated for splash protection

## 2. SAFETY INSTRUCTIONS

- Always ensure the lantern is fully charged before first use.
- Do not expose the lantern to extreme temperatures or direct sunlight for prolonged periods.
- This product is rated IP54, meaning it is protected against dust ingress and splashing water from any direction. It is **not** waterproof and should not be submerged in water.
- Use only the provided USB charging cable and power adapter. Using unauthorized accessories may damage the product and void the warranty.
- Keep out of reach of children.
- Do not attempt to disassemble or repair the lantern yourself. Contact qualified personnel for service.
- Dispose of the battery according to local regulations. Do not dispose of batteries in fire.

## 3. PACKAGE CONTENTS

Please check that all items are present in the package:

- Lucande Mirina LED Lantern
- USB Charging Cable
- Power Adapter
- Magnetic Charging Base
- User Manual (this document)



Included charging accessories: USB cable, power adapter, and magnetic charging base for the Lucande Mirina Lantern.

## 4. SETUP

---

### 4.1. Charging the Lantern

1. Connect the USB charging cable to the power adapter.
2. Plug the power adapter into a standard wall outlet.
3. Place the Lucande Mirina Lantern onto the magnetic charging base. Ensure the contacts on the lantern's base align with the charging pins on the charging base. The magnetic connection will secure it in place.
4. A charging indicator light (if present) will illuminate to confirm charging.

5. Allow approximately 4-6 hours for a full charge. The indicator light will change or turn off once fully charged.



Underside of the Lucande Mirina Lantern showing the magnetic charging contact.

## 4.2. First Use

Before using the lantern for the first time, ensure it is fully charged as described above.

## 5. OPERATING INSTRUCTIONS

---

### 5.1. Turning On/Off

Locate the touch sensor on the base of the lantern. A single, brief touch will turn the lantern on or off.



A finger interacting with the touch dimmer control on the base of the Lucande Mirina Lantern.

## **5.2. Adjusting Brightness (Touch Dimmer)**

While the lantern is on, press and hold your finger on the touch sensor. The light intensity will gradually increase or decrease. Release your finger when the desired brightness level is reached.



Lucande Mirina LED Lantern illuminated on an outdoor table.

### **5.3. Portability**

The Mirina lantern is designed for portability. Once charged, it can be moved freely to any desired location, indoors or outdoors (within its IP54 rating).



Lucande Mirina LED Lantern unlit on an outdoor table.

## 6. MAINTENANCE

---

### 6.1. Cleaning

To clean the lantern, wipe it with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these may damage the finish.

### 6.2. Battery Care

To prolong battery life, avoid fully discharging the lantern frequently. If storing for an extended period, charge the battery to approximately 50% and recharge every 3-6 months.

### 6.3. Storage

Store the lantern in a cool, dry place away from direct sunlight and extreme temperatures when not in use.

## 7. TROUBLESHOOTING

---

- **Lantern does not turn on:**

- Ensure the battery is charged. Connect to the charging base and check the charging indicator.
- Verify the touch sensor is clean and unobstructed.
- **Light flickers or is dim:**
  - The battery may be low. Recharge the lantern.
- **Lantern does not charge:**
  - Check if the USB cable and power adapter are properly connected.
  - Ensure the lantern is correctly placed on the magnetic charging base, with contacts aligned.
  - Try a different power outlet.

If you encounter issues not listed here, please contact customer support.

## 8. SPECIFICATIONS

<b>Model Number</b>	9616218
<b>Brand</b>	Lucande
<b>Manufacturer</b>	Lampenwelt
<b>Dimensions (L x W x H)</b>	10 cm x 10 cm x 33.5 cm
<b>Weight</b>	750 g
<b>Light Source Type</b>	LED (Light Emitting Diode)
<b>Light Source Power</b>	2.2 Watt
<b>Battery Type</b>	Lithium-ion Polymer (Rechargeable)
<b>Power Source</b>	Battery Powered (Rechargeable via USB)
<b>Material</b>	Aluminum
<b>Color</b>	White
<b>IP Protection Rating</b>	IP54 (Dust protected, splash-proof)
<b>Special Features</b>	Dimmable, LED

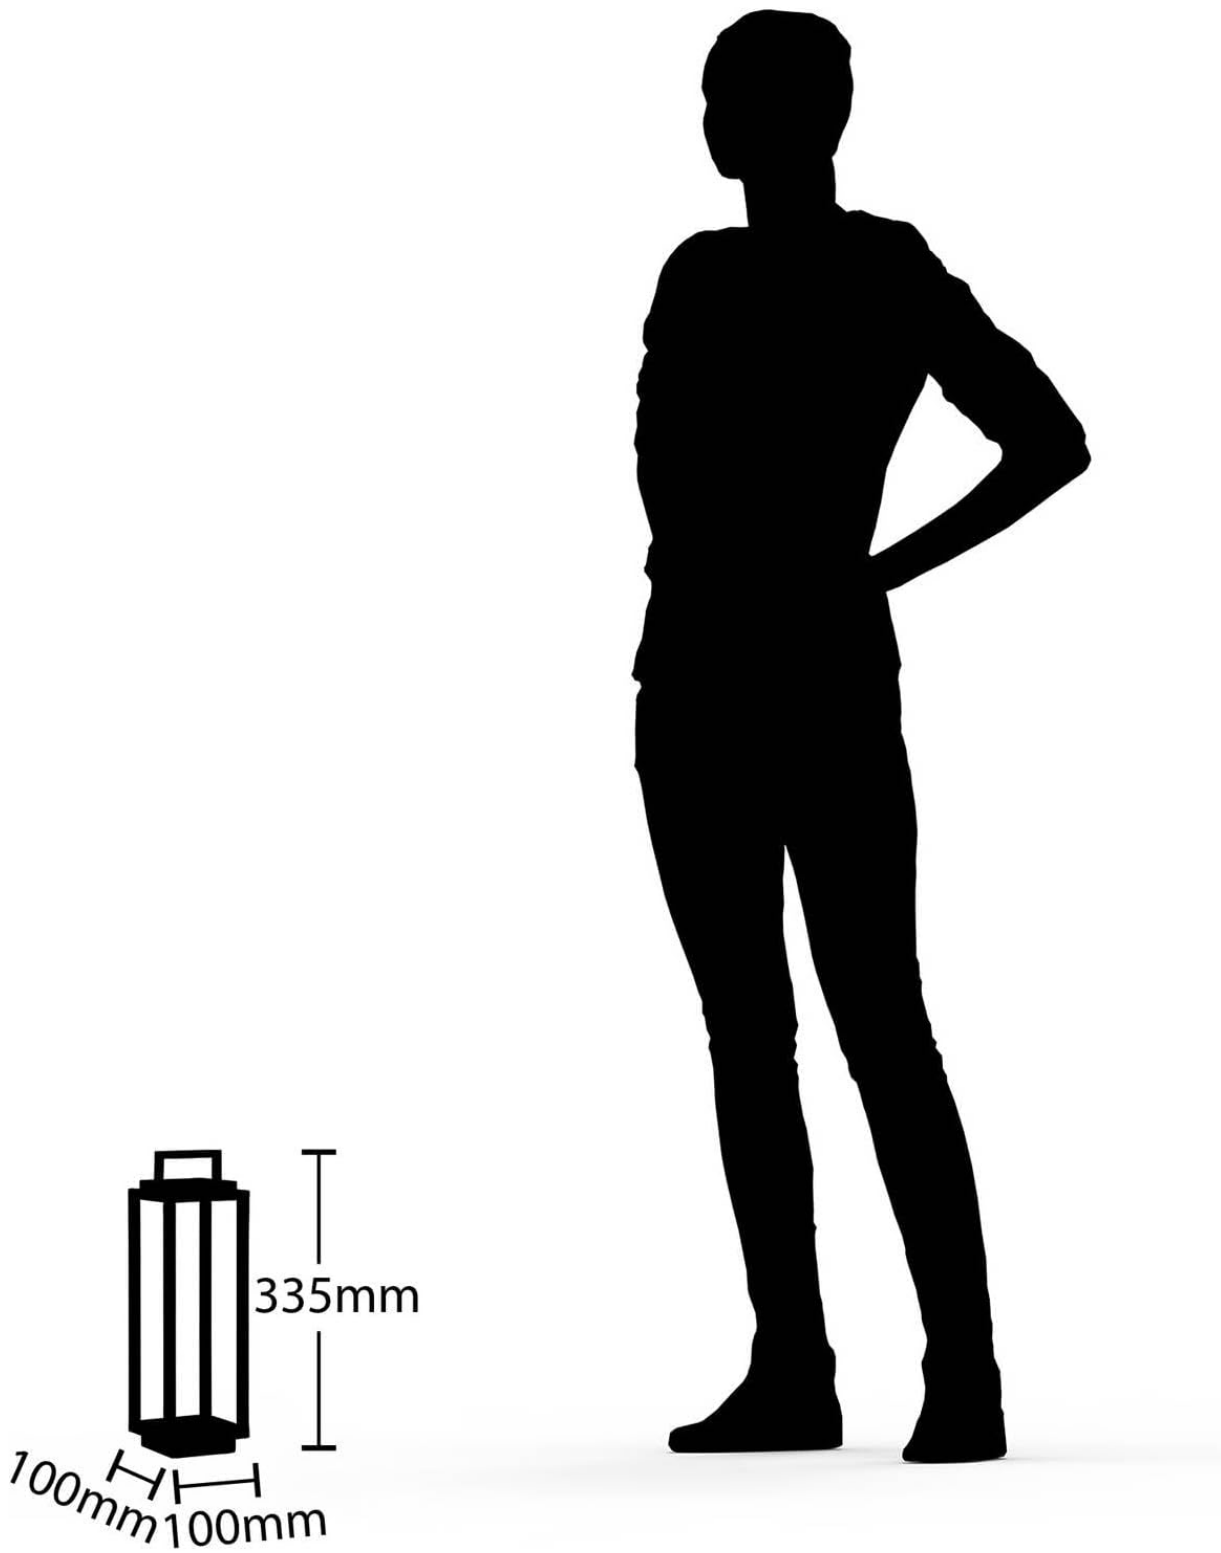


Diagram illustrating the dimensions of the Lucande Mirina LED Lantern (100mm x 100mm x 335mm).



## **9. WARRANTY AND SUPPORT**

---

The Lucande Mirina LED Lantern comes with a standard manufacturer's warranty. Please refer to your purchase documentation for specific warranty terms and conditions.

For technical support, warranty claims, or any questions regarding your product, please contact the seller or manufacturer directly through their official channels. Contact information can typically be found on your purchase receipt or the product packaging.