



[Manuals.plus](#) /

> [VISWIN](#) /

> VISWIN Large H-Frame Easel Instruction Manual (Model ELHF_DW01W_V)

VISWIN ELHF_DW01W_V

VISWIN Large H-Frame Easel Instruction Manual

Model: ELHF_DW01W_V

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your VISWIN Large H-Frame Easel. Crafted from solid beech wood, this easel is designed for stability and versatility, accommodating canvases up to 78 inches in height. Its adjustable features allow for comfortable use whether sitting or standing, making it suitable for various artistic needs.

2. SAFETY INFORMATION

Please read all instructions carefully before assembly and use. Retain this manual for future reference.

- Ensure all components are securely fastened before placing a canvas on the easel.
- Place the easel on a stable, level surface to prevent tipping.
- Do not exceed the maximum loading capacity of 44 lbs (20 kg).
- Keep small parts and hardware away from children to prevent choking hazards.
- Exercise caution when adjusting the easel's height or angle to avoid pinching fingers.

3. PACKAGE CONTENTS

Verify that all parts are present before beginning assembly. If any parts are missing or damaged, please contact VISWIN customer support.

- H-Frame Easel Components (pre-labeled wooden parts)

- Canvas Support Tray
- Adjustable Mast
- Adjustment Knobs and Fasteners (individually packed hardware)
- Assembly Instructions Guide

4. ASSEMBLY INSTRUCTIONS

The VISWIN Large H-Frame Easel is designed for straightforward assembly. Follow the included step-by-step instructions and refer to the numbered stickers on the wooden parts for guidance. An assembly video is also available for visual assistance.

General Assembly Steps:

1. Unpack all components and verify against the package contents list.
2. Identify the main H-frame base and attach the vertical support beams using the provided hardware.
3. Secure the canvas support tray to the main frame at the desired initial height.
4. Install the adjustable mast into the central channel.
5. Attach all remaining adjustment knobs and ensure they are tightened securely.



Figure 4.1: Overview of the VISWIN Large H-Frame Easel with key dimensions and features highlighted. This image illustrates the easel's overall structure, maximum canvas height capacity, and adjustable tray range.

For a visual guide to assembly and initial setup, please watch the official product video:

Video: VISWIN Large H-Frame Easel Product Overview. This video demonstrates the easel's features, including adjustments for height and angle, and its foldable design for storage. It provides a visual guide to understanding the easel's functionality.

5. OPERATING INSTRUCTIONS

Your VISWIN H-Frame Easel offers multiple adjustments to suit various painting styles and preferences.

5.1 Adjusting Canvas Height

The canvas support tray and the upper mast are independently adjustable to accommodate different canvas sizes and your working posture (sitting or standing).

1. To adjust the canvas support tray, loosen the two black adjustment knobs located on the front of the tray.
2. Slide the tray up or down to the desired height. The tray can be adjusted from near the ground up to 44 inches high.
3. Tighten the adjustment knobs firmly to secure the tray in place.
4. To adjust the upper canvas clamp, loosen the knob on the central mast. Slide the clamp up or down to firmly hold the top of your canvas.
5. Tighten the knob to secure the upper clamp. The easel can hold canvases up to 78 inches tall.



Figure 5.1: Demonstrates the easel's ability to accommodate various canvas sizes by adjusting

the tray height. This highlights the flexibility for different artwork dimensions and painting postures.

5.2 Adjusting Easel Angle

The easel's angle can be adjusted from a slight forward tilt to a fully vertical position, providing flexibility for different painting techniques.

1. Locate the angle adjustment knob on the sliding back support at the rear base of the easel.
2. Loosen this knob.
3. Gently tilt the easel forward or backward to achieve the desired angle. The easel can tilt approximately 5 degrees forward.
4. Once the desired angle is set, tighten the knob securely to lock the easel in position.



Figure 5.2: Highlights the easel's stable construction and the mechanism for adjusting its angle. The arrows indicate how the base can be adjusted to change the easel's tilt.

5.3 Using the Storage Tray

The easel features a double-layer storage tray with a raised edge, designed to keep your art supplies organized and within easy reach.

- The tray has a depth of 65mm (2 1/2 inches), providing ample space for paints, brushes, and other small tools.
- The raised edge prevents items from rolling off the tray during use.
- Utilize the tray to maintain an organized workspace and improve efficiency during your painting sessions.

Double-layer tray

- Raised edge
- Adjustable height
- Keep organized



Figure 5.3: Detailed view of the double-layer storage tray, illustrating its capacity and design for organizing art materials. The image shows paint tubes and brushes neatly stored within the tray.

6. FOLDING AND STORAGE

The VISWIN H-Frame Easel can be easily folded for compact storage, making it ideal for studios or rooms with limited space.

1. Remove any canvas or art supplies from the easel.
2. Loosen the angle adjustment knob at the rear base and gently push the back support forward until the easel folds flat.
3. Ensure all components are securely folded and locked into place if applicable.
4. Once folded, the easel has a thickness of approximately 2 1/5 inches (55 mm), allowing it to be stored against a wall or in a closet.



Figure 6.1: Illustrates the easel's foldable design, demonstrating how it can be collapsed for space-saving storage. The image shows both the open and folded states of the easel.

7. MAINTENANCE

Proper care will extend the life of your VISWIN H-Frame Easel.

- **Cleaning:** Wipe down the beech wood surfaces with a soft, dry cloth. For stubborn marks, use a slightly damp cloth and dry immediately. Avoid harsh chemicals or abrasive cleaners.
- **Hardware:** Periodically check all screws and knobs to ensure they are tight. Re-tighten as necessary to maintain stability.
- **Storage:** Store the easel in a dry environment, away from extreme temperature changes or direct sunlight, which can affect the wood.

8. TROUBLESHOOTING

If you encounter any issues with your easel, refer to the following common solutions:

- **Easel feels unstable:** Ensure all assembly hardware is securely tightened. Verify the easel is placed on a flat, level surface. Check that the angle adjustment knob is fully tightened.

- **Canvas not holding securely:** Make sure both the canvas support tray and the upper canvas clamp are adjusted to the correct height for your canvas and their respective knobs are firmly tightened.
- **Difficulty adjusting height/angle:** Loosen the corresponding adjustment knobs sufficiently before attempting to move components. Do not force adjustments.

If problems persist, please contact VISWIN customer support for further assistance.

9. SPECIFICATIONS

Feature	Detail
Brand	VISWIN
Model Name	Large H-Frame Easel for Painting
Model Number	ELHF_DW01W_V
Material	Beech Wood
Color	Walnut
Easel Height (Adjustable)	53" (1346 mm) to 91" (2311 mm)
Base Dimensions (W x D)	22" (559 mm) x 24" (610 mm)
Max Canvas Height	Up to 78 inches
Tray Adjustable Height	Up to 44 inches (1118 mm)
Folded Thickness	2 1/5" (55 mm)
Item Weight	25.1 Pounds (11.39 kg)
Max Loading Capacity	44 lbs (20 kg)
Easel Type	H-Frame Studio Easel
Required Assembly	Yes
UPC	782903517945

10. WARRANTY AND SUPPORT

VISWIN is committed to providing high-quality products and customer satisfaction. Your VISWIN Large H-Frame Easel comes with a **Lifetime Guarantee**.

If you experience any defects or issues with your product due to non-external reasons under normal use, please do not hesitate to contact VISWIN customer support. We are dedicated to assisting you and ensuring your satisfaction.

For support, please visit the official VISWIN website or refer to the contact information provided with your purchase.