

FOCHEW HX160Q2

FOCHEW Wireless Portable Charger User Manual

Model: HX160Q2

INTRODUCTION

Thank you for choosing the FOCHEW Wireless Portable Charger. This high-capacity 30,800mAh power bank is designed to provide convenient and fast charging for your mobile devices, featuring 15W wireless charging, 25W PD, and QC4.0 fast charging capabilities. Its smart LCD display keeps you informed about the remaining battery level. Please read this manual carefully to ensure safe and optimal use of your device.

SAFETY INFORMATION

WARNING: This product may contain chemicals known to the State of California to cause cancer and birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov.

- Do not expose the power bank to extreme temperatures (heat or cold), direct sunlight, or high humidity.
- Do not disassemble, open, or attempt to repair the power bank yourself.
- Keep away from water and other liquids.
- Avoid dropping or subjecting the power bank to strong impacts.
- Do not use if the power bank is damaged or swollen.
- Keep out of reach of children.
- Ensure proper ventilation during charging and discharging.
- Remove your phone case if it is thicker than 5mm when using wireless charging.

PACKAGE CONTENTS

- FOCHEW 30,800mAh USB-C Power Bank (25W PD+QC 4.0) x1
- Micro USB Cable x1
- User Manual x1

SPECIFICATIONS

Feature	Detail
---------	--------

Capacity	30,800mAh
USB Input	25W PD 3.0 (5V/3A), Micro USB (5V/2.1A)
USB Output	PD 3.0 (5V/3A), Dual QC 4.0 (5V/3A)
Wireless Output	5W, 7.5W, 10W, 15W Max
Total Power Output	25W
Dimensions	5.9 x 2.9 x 0.6 inches (approx.)
Weight	12.7 ounces (367g)
Battery Type	Lithium Polymer
Safety Features	Overcharge, Over-discharge, Excessive Currents, Short Circuits, Overheating Protection

SETUP

Initial Charging of the Power Bank

Before first use, fully charge your FOCHEW Wireless Portable Charger. It is recommended to use a USB-C fast charging cable and a PD wall charger for optimal charging speed. A full charge can be achieved within approximately 3.5 hours using a 25W PD charger.



Figure 1: Recharging the power bank. Using a 25W PD charger, the power bank can be fully recharged in about 3.5 hours. A standard 2A Micro USB charger will take approximately 9 hours.

Power On/Off

To turn on the power bank and activate the LCD display, briefly press the power button located on the side of the device. The display will show the current battery percentage. The power bank will automatically turn off after a period of inactivity to conserve power.



Figure 2: Power button and port identification. The power button is on the side, and the LCD screen displays the battery percentage. The top surface features a wireless charging pad.

OPERATING INSTRUCTIONS

Wireless Charging (15W Max)

The power bank supports 5W, 7.5W, 10W, and 15W Max wireless fast charging. To use, simply place your wireless charging-compatible device on the designated wireless charging pad on the power bank's surface. Ensure the device is centered on the pad for optimal charging. The power bank is not magnetic.

- **Note:** For effective wireless charging, remove phone cases thicker than 5mm.
- **Compatibility:** Compatible with devices supporting wireless charging, including iPhone 16/16 Plus/16 Pro/16 Pro Max, iPhone 15/15 Plus/15 Pro/15 Pro Max, iPhone 14/14 Plus/14 Pro/14 Pro Max, iPhone 13/13 Mini/13 Pro/13 Pro Max, iPhone 12/12 Mini/12 Pro/12 Pro Max, iPhone XR/X/XS/XS MAX/8 Plus, Samsung S24/S24 Plus/S24 Ultra/Galaxy Z Flip5, and other Qi-enabled devices.
- **Important:** This portable charger is not suitable for wireless charging of Bluetooth headphones.

Wireless Charger for All Wireless Devices

5W

7.5W

10W

15W



Figure 3: Wireless charging in action. Place your compatible device on the charging pad for convenient cable-free power delivery.

Wired Charging (25W PD & QC 4.0)

Utilize the 25W Power Delivery 3.0 output (USB-C port) and Quick Charge 4.0 outputs (USB-A ports) for optimized fast charging. Connect your device using a compatible USB cable to one of the available output ports. Fast charging can bring a cellphone to 100% within 1.5 hours.

- **Compatibility:** You can use charging cables to charge all smartphones, including iPhone 8/7 Plus/7/6s Plus/6 Plus/6/SE/5S; Samsung Galaxy S23/S22/S21/S20/S10/S9/S8/Note20, Note10, Note9, Galaxy Z Flip4, Galaxy Z Flip3, Galaxy Z Fold3, Galaxy A73, A13, A33, A53; LG G8, LG G7, LG X4, LG Q60, LG K40; Google Pixel and other electronic devices.

PD 25W Quick Charger



Figure 4: Wired fast charging. The USB-C port supports 25W Power Delivery for rapid device charging.

Simultaneous Charging

Charge up to four devices simultaneously. You can wirelessly charge one device (up to 15W) while also charging up to three other devices via the Micro USB output port and the two USB-C PD ports.

Various Charging Methods



QC X2



PD X1



Wireless Charge X1



Figure 5: Multiple device charging. The power bank offers various charging methods, including two QC ports, one PD port, and one wireless charging pad, allowing for simultaneous charging of up to four devices.



Figure 6: Charging four devices simultaneously. This image illustrates the convenience of charging multiple devices at once, ideal for shared use or when many gadgets need power.

Smart LCD Indicators

The integrated LCD display shows the remaining battery level as a percentage, allowing you to easily monitor the power bank's charge status and know when it needs to be recharged.



Figure 7: Smart LCD display. The clear digital display provides an accurate percentage of the remaining battery charge.

MAINTENANCE

- Clean the power bank with a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Store the power bank in a cool, dry place when not in use.
- For long-term storage, charge the power bank to about 50-70% to preserve battery health.

TROUBLESHOOTING

Power Bank Not Charging

- Ensure the charging cable is securely connected to both the power bank's input port and the power source.
- Verify that the wall adapter or USB port you are using is functional.
- Try a different charging cable or wall adapter.

Device Not Charging from Power Bank

- Press the power button on the power bank to ensure it is active.
- Check if the charging cable is securely connected to both the power bank's output port and your device.
- Try a different charging cable or output port on the power bank.
- For wireless charging, ensure your device is centered on the wireless pad and that its case is not too thick (>5mm).
- Confirm your device is compatible with the power bank's charging specifications (wired or wireless).

Slow Charging

- Ensure you are using a fast-charging compatible cable and wall adapter (for recharging the power bank) or device cable (for charging your device).
- Check if your device supports fast charging (PD or QC 4.0).
- Avoid using the power bank in extremely hot or cold environments.

WARRANTY AND SUPPORT

Your FOCHWE Wireless Portable Charger comes with a 24-month warranty policy. For any issues or support, please contact FOCHWE customer service. They offer 24-hour customer service to assist you.

© 2025 FOCHWE. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question