

# HAVA Countertop Dishwasher User Manual

Model: TDQR01

## 1. PRODUCT OVERVIEW

The HAVA Countertop Dishwasher offers a convenient and efficient solution for your dishwashing needs, especially in compact living spaces. Designed for portability and ease of use, it provides powerful cleaning with minimal water consumption.



Figure 1.1: HAVA Countertop Dishwasher in a kitchen setting, showcasing its compact design and loaded interior.

## Key Features:

- **Compact Design:** Measures 16.9 x 16.8 x 18.1 inches, suitable for small kitchens, dorms, RVs, and boats.
- **Large Capacity:** Holds up to 4 full place settings and fits 12-inch dishes loaded at an angle.
- **Dual Water Supply Modes:** Features a 5-liter built-in water tank for manual fill or direct connection to a faucet via an inlet hose.
- **6 Wash Programs:** Includes Normal, Speed, ECO, Heavy/Baby Care, and Fruit modes.
- **360° Cleaning:** Equipped with 14 water ports on spray arms for comprehensive cleaning coverage.
- **Air-Dry Function:** Provides an extra 60 minutes of drying and 72-hour ventilated storage to prevent odors.
- **Water and Energy Efficient:** Consumes only 5 liters of water per cycle, saving up to 75% water compared to handwashing.

## 2. SAFETY INFORMATION

---

### WARNING:

- Do not move the dishwasher while it is operating or paused. Only move it when the water tank is completely drained.
- Ensure the drainpipe is properly installed before startup to prevent leaks.
- Only use dishwasher-specific detergent. Pods, liquids, or powder detergents are all acceptable. Add the proper amount (approx. 0.2–0.3 oz) to the detergent dispenser.
- Be careful of high-temperature steam burns when opening the door during or immediately after operation.
- Do not block the air vent on the right side of the dishwasher.

## 3. PRODUCT COMPONENTS

---

The HAVA Countertop Dishwasher comes with the following components:

- HAVA Countertop Dishwasher Unit
- Inlet Hose
- Dish Rack
- Cutlery Basket
- Water Pitcher (for manual water tank filling)

## 4. SETUP AND INSTALLATION

---

Follow these steps to set up your HAVA Countertop Dishwasher:

### 4.1 Drainpipe Installation

Ensure the drainpipe is securely connected to the dishwasher's drain outlet and directed into a sink or a suitable drain container. This prevents water leakage during operation.

### 4.2 Water Supply Modes

Your dishwasher supports two convenient water supply methods:

1. **Water Tank Mode:** Open the water tank cover on top of the unit and manually pour water into the tank using the provided pitcher until the indicator signals it's full (approximately 1.3 gallons).
2. **Faucet Mode:** Connect the included inlet hose to the water inlet on the dishwasher and to a compatible kitchen faucet. Ensure all connections are tight to prevent leaks.



## 2 WATER SUPPLY MODES

Add water to the water tank or connect the inlet hose to a faucet



Figure 4.1: Illustration of the two water supply methods: manually filling the top water tank and connecting the inlet hose to a faucet.

### 4.3 Adding Detergent

Open the detergent dispenser located inside the dishwasher door. Add the recommended amount of dishwasher-specific detergent (liquid, powder, or pod) into the dispenser. Close the dispenser securely.

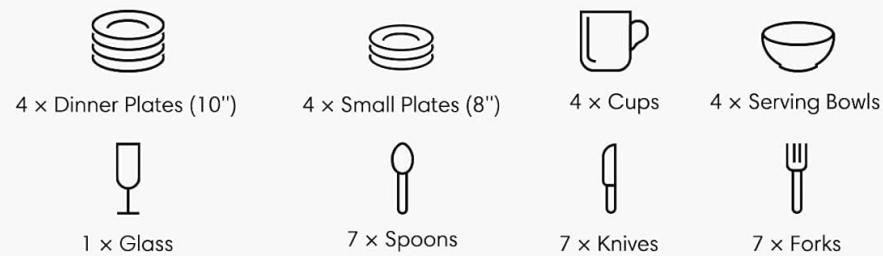


Figure 4.2: The dishwasher interior loaded with various dishes, demonstrating its capacity for plates, cups, and cutlery.

## 5. OPERATION

Operating your HAVA Countertop Dishwasher is straightforward:

### 5.1 Control Panel Overview

The dishwasher features an intuitive LED control panel with touch-sensitive buttons for various functions and program selection.

### 5.2 Loading Dishes

Load dishes into the provided rack and cutlery basket. The design allows for up to 4 place settings and dishes up to 12 inches when loaded at an angle. Ensure dishes do not obstruct the spray arms.

### 5.3 Selecting a Wash Cycle

Choose from the following wash programs based on your needs:

- **Normal:** Standard wash for everyday dishes.

- **Speed:** A quicker wash cycle for lightly soiled items.
- **ECO:** Energy-saving cycle for efficient cleaning.
- **Heavy/Baby Care:** Intensive wash for heavily soiled dishes or baby items requiring thorough sanitization.
- **Fruit:** A dedicated cycle for washing fruits and vegetables (requires a fruit basket, not included in all models).



Figure 5.1: The control panel displaying the various wash cycle options and their approximate durations.

## 5.4 Starting a Wash Cycle

After loading dishes and adding detergent, close the door. Press the Power button to turn on the dishwasher, then select your desired wash program. Press the Start/Pause button to begin the cycle.

## 5.5 Dry Mode

After a wash cycle completes, the dishwasher automatically enters an extra Dry mode for 60 minutes of hot air drying. This is followed by 72-hour ventilated storage to prevent odors and keep dishes fresh. The Dry mode can also be activated separately if needed.

## 5.6 Official Product Video

For a visual guide on setup and operation, please watch the official HAVA Countertop Dishwasher video:

Video 5.1: Official HAVA Countertop Dishwasher demonstration, covering drainpipe installation, water filling, detergent use, control panel functions, and various wash modes including fruit washing.

## 6. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and longevity of your dishwasher:

### 6.1 Cleaning the Filter

The dishwasher is equipped with a removable fine filter that effectively captures food residue. It is recommended to clean the filter every few weeks, or as needed, to prevent blockages and ensure efficient cleaning.



Figure 6.1: An internal diagram highlighting the 360° spray arms for thorough cleaning and the removable fine filter for easy maintenance.

### 6.2 Draining Stored Water

If the water tank is not used for a long time, it is recommended to empty the water tank by holding both the Start/Pause and Power buttons simultaneously for 3 seconds to drain out the water completely.

## 6.3 General Cleaning

Wipe down the exterior and interior of the dishwasher regularly with a damp cloth. Do not use abrasive cleaners or harsh chemicals.

## 7. TROUBLESHOOTING

---

If you encounter issues with your HAVA Countertop Dishwasher, refer to the following common troubleshooting tips:

- **Dishwasher not starting:** Ensure the power cord is securely plugged in and the power button has been pressed. Check if the door is fully closed and latched.
- **Water not filling:** Verify that the water tank is filled (if using tank mode) or the faucet is turned on and the inlet hose is properly connected (if using faucet mode).
- **Dishes not clean:** Check if the detergent dispenser was filled correctly. Ensure dishes are loaded properly and not blocking the spray arms. Clean the fine filter if it's clogged.
- **Water leakage:** Inspect all hose connections (inlet and drain) for tightness. Ensure the drainpipe is correctly positioned in the sink or drain container.
- **Unusual noises:** Check for any foreign objects inside the dishwasher that might be interfering with the spray arms or pump.

For persistent issues or error codes not listed, please contact HAVA customer support.

## 8. TECHNICAL SPECIFICATIONS

---

Feature	Specification
Model Name	TDQR01
Form Factor	Countertop
Product Dimensions	16.86"D x 16.75"W x 18.1"H (42.8 x 42.5 x 45.8 cm)
Item Weight	28.7 Pounds (13 kg)
Capacity	4 Place Settings
Water Consumption	5 Liters per wash cycle
Voltage	120 Volts
Operating Frequency	60 Hz
Noise Level	50 dB
Material	Stainless Steel
Controls Type	Touch
Special Features	Portable, Compact, Built-in Water Tank



Figure 8.1: Detailed dimensions of the HAVA Countertop Dishwasher.

## 9. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your HAVA Countertop Dishwasher, please refer to the contact information provided with your product packaging or visit the official HAVA website. Please retain your proof of purchase for warranty claims.

© 2024 HAVA. All rights reserved.

### Related Documents - TDQR01

 A small image of the HAVA Compact Countertop Dishwasher TDQR01 User Manual, showing the front cover with the product name and a small image of the dishwasher.	<a href="#"><u>HAVA Compact Countertop Dishwasher TDQR01 User Manual</u></a> This user manual provides comprehensive instructions for the HAVA Compact Countertop Dishwasher, Model TDQR01. It covers important safety instructions, safeguards, installation, technical specifications, operating instructions, cleaning and maintenance, error codes, and troubleshooting.
---	---

	<p><b><a href="#">HAVA Compact Countertop Dishwasher R01 User Manual</a></b></p> <p>User manual for the HAVA Compact Countertop Dishwasher, Model R01. This guide provides comprehensive information on safety, installation, operation, and maintenance. Includes technical specifications and contact details.</p>
	<p><b><a href="#">HAVA Compact Countertop Dishwasher User Manual (Model R01)</a></b></p> <p>User manual for the HAVA Compact Countertop Dishwasher, Model R01. Provides detailed instructions on safety, installation, operation, maintenance, troubleshooting, and technical specifications for optimal use.</p>
	<p><b><a href="#">HAVA T01 (US) Fully Automatic Washing Machine User Manual</a></b></p> <p>User manual for the HAVA T01 (US) Fully Automatic Washing Machine, covering safety instructions, product overview, installation, control console, wash programs, specifications, maintenance, and troubleshooting.</p>
	<p><b><a href="#">HAVA Corner Shower Enclosure - Dimensions and Specifications</a></b></p> <p>Detailed specifications and size chart for the HAVA Corner Shower Enclosure, including dimensions for door, side panel, and return panel, and glass thickness.</p>
	<p><b><a href="#">HAVA Corner Shower Enclosure - Specifications and Dimensions</a></b></p> <p>Detailed specifications and size chart for the HAVA Corner Shower Enclosure, including dimensions for door, side panel, and return panel. Features reversible top views.</p>