

Panasonic NN-CT35LBFDG

Panasonic 23 Litres Convection Microwave Oven User Manual

MODEL: NN-CT35LBFDG

1. Introduction

This manual provides essential instructions for the safe and efficient operation of your Panasonic 23 Litres Convection Microwave Oven, model NN-CT35LBFDG. Please read this manual thoroughly before using the appliance and retain it for future reference.

Your Panasonic microwave oven is designed for versatile cooking, offering microwave, convection, and grill functions. It features a 23-litre capacity and 800 Watts of power, suitable for various culinary tasks including defrosting, baking, and grilling.

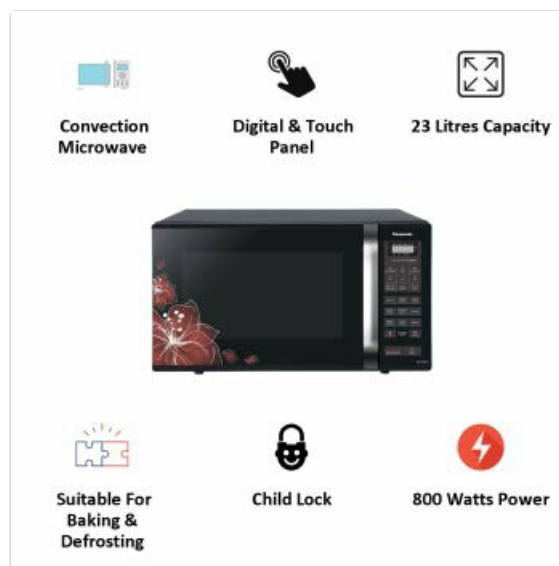


Image 1: Overview of the Panasonic 23 Litres Convection Microwave Oven highlighting key features such as Convection Microwave, Digital & Touch Panel, 23 Litres Capacity, suitability for Baking & Defrosting, Child Lock, and 800 Watts Power.

2. Safety Instructions

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, injury to persons, or exposure to excessive microwave energy.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the: (1) door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure proper ventilation around the appliance.
- Do not heat liquids or other foods in sealed containers as they are liable to explode.
- Always use oven-safe cookware.

3. Product Overview

Familiarize yourself with the components of your microwave oven.



Image 2: Front view of the Panasonic 23 Litres Convection Microwave Oven, showing the control panel on the right and the door with floral design.



Image 3: Angled view of the Panasonic 23 Litres Convection Microwave Oven, providing a perspective of its overall design and compact

form factor.



Image 4: Interior view of the Panasonic 23 Litres Convection Microwave Oven with the door open, showing the stainless steel cavity and turntable area.

Key Components:

- **Control Panel:** Digital display and touch buttons for setting functions, time, and power levels.
- **Oven Door:** Features a handle for opening and closing.
- **Turntable:** Rotates food for even cooking.
- **Oven Cavity:** Interior cooking space, made of stainless steel.
- **Ventilation Openings:** Located on the sides and back for proper airflow.

4. Setup and Installation

1. **Unpacking:** Carefully remove all packaging materials and accessories. Check for any damage. Do not operate if the oven is damaged.
2. **Placement:** Place the oven on a flat, stable surface strong enough to hold its weight plus the heaviest food item likely to be cooked. Ensure adequate space for ventilation: at least 20 cm (8 inches) above the oven, 10 cm (4 inches) at the rear, and 5 cm (2 inches) on each side.
3. **Power Connection:** Plug the oven into a properly grounded electrical outlet. Do not use extension cords or adapters.
4. **Initial Cleaning:** Wipe the interior and exterior with a damp cloth before first use.



Image 5: Diagram showing the dimensions of the Panasonic 23 Litres Convection Microwave Oven, with measurements of 48.61 cm (width), 29.21 cm (depth), and 40.51 cm (height).

5. Operating Instructions

5.1. Setting the Clock

1. Press the "Clock" button.
2. Use the number pads to enter the current time.
3. Press "Clock" again to confirm.

5.2. Microwave Cooking

1. Place food in a microwave-safe dish on the turntable.
2. Close the oven door.
3. Press the "Microwave" button.
4. Use the number pads to enter the desired cooking time.
5. Press "Start" to begin cooking.

5.3. Convection Cooking

1. Place food on the metal rack (if provided) or in a convection-safe dish.
2. Press the "Convection" button.
3. Use the number pads to set the desired temperature.
4. Press "Start" to preheat. The oven will beep when preheating is complete.
5. Place food inside and enter the cooking time. Press "Start".

5.4. Defrost Function

The defrost function allows for quick and efficient thawing of frozen foods.

1. Place frozen food in a microwave-safe dish.
2. Press the "Defrost" button.
3. Enter the weight of the food using the number pads.
4. Press "Start". The oven will calculate the defrosting time automatically.

5.5. Child Lock

To activate the child lock, press and hold the "Stop/Cancel" button for 3 seconds. The display will show "LOCK". To deactivate, repeat the process.

6. Maintenance and Cleaning

Regular cleaning ensures optimal performance and extends the life of your appliance.

- **Interior:** Wipe the oven cavity with a damp cloth after each use. For stubborn stains, use a mild detergent or a microwave-safe cleaner. Do not use abrasive cleaners.
- **Exterior:** Clean the exterior surfaces with a soft, damp cloth. Avoid harsh chemicals.
- **Turntable:** The glass turntable can be removed and washed in warm soapy water or in a dishwasher.
- **Door Seals:** Keep the door seals clean to ensure proper closure and prevent microwave leakage.
- **Odour Removal:** To remove odours, combine a cup of water with several lemon slices or a tablespoon of vinegar in a microwave-safe bowl. Microwave on high for 5 minutes, then let it stand in the oven for 10-15 minutes before wiping clean.

7. Troubleshooting

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is securely in outlet; Close door firmly; Check household fuse/circuit breaker.
Food not cooking evenly	Food not stirred or turned; Incorrect power level/time; Turntable not rotating.	Stir or turn food during cooking; Adjust power level and time; Ensure turntable is correctly placed and rotates freely.
Smoke or sparks inside oven	Food residue; Metal in oven; Damaged oven interior.	Clean oven interior; Remove all metal objects; Contact service if interior is damaged.
Display shows "LOCK"	Child lock is activated.	Press and hold "Stop/Cancel" button for 3 seconds to deactivate.

8. Specifications

Brand: Panasonic

Model: NN-CT35LBFDG

Capacity: 23 Litres

Oven Cooking Mode: Convection, Microwave

Wattage (Microwave): 800 Watts

Installation Type: Countertop

Material: Stainless Steel (Cavity)

Colour: Black

Special Features: Defrost, Child Lock

Item Weight: 14 kg

9. Warranty and Support

For warranty information, please refer to the warranty card included with your product or visit the official Panasonic India website. For technical support or service inquiries, please contact Panasonic customer service.

Panasonic Customer Service: www.panasonic.com/in/support.html

